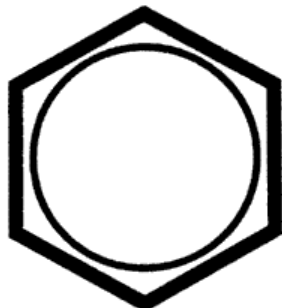
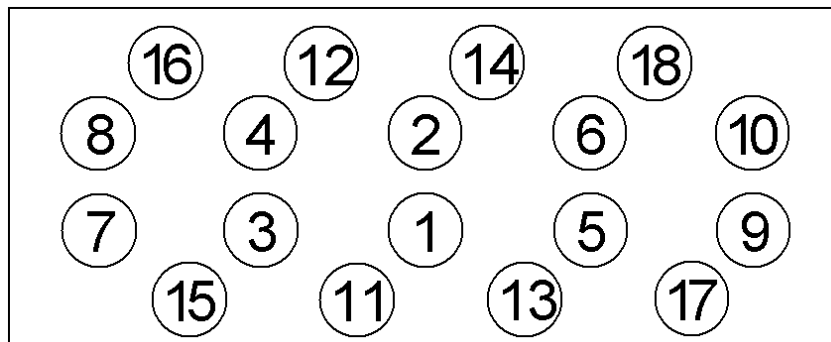


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****156.211**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

733.100

M 10x140/M 8x121

Anziehen/  
Tightening/  
Serrage/  
Apriete

- Pos. 1-10: 10 Nm
- Pos. 11-18: 5 Nm
- Pos. 1-10: 20 Nm
- Pos. 11-18: 10 Nm
- Pos. 1-10: 40 Nm
- Pos. 11-18: 20 Nm
- Pos. 1-18: 180°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ford Transit 2,2 TDCi (Duratorq)

Dicke 1,15/2 Kerben

04.2006 &gt;

85/110/115/130/140 PS

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

**\*156.211\***