

Product info sheet


VDO

5WS40809-Z

Special tools needed?

No

Pump is connected by a drive plate to the gearwheel. No particular instruction for removing pump. Drive-plate can wear.

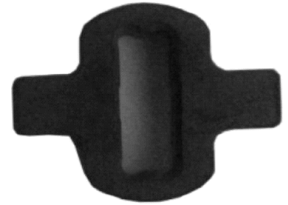

Product specific information

Programming

No

Unlocking

No

Adaption values reset

No

Bleed

Yes

Use manual pump on vehicle

adjustment at mounting_1

No

adjustment at mounting_2

--

Tightening torques

Mounting fuelpump flange

20 Nm

High Pressure pipe nuts

30 Nm

Assembly instructions

Recommendation: replace drive plate

Core charge terms:

- externally intact,
- no mechanical damage,
- not dismantled,
- no heavy corrosion.