


Brake Pad Anti-Rattle Clips

The main function of anti-rattle clips is to apply a light spring pressure between the caliper carrier and the brake pads eliminating vibration which is the main cause of brake squeal.



Correct Installation of Anti-Rattle Clips

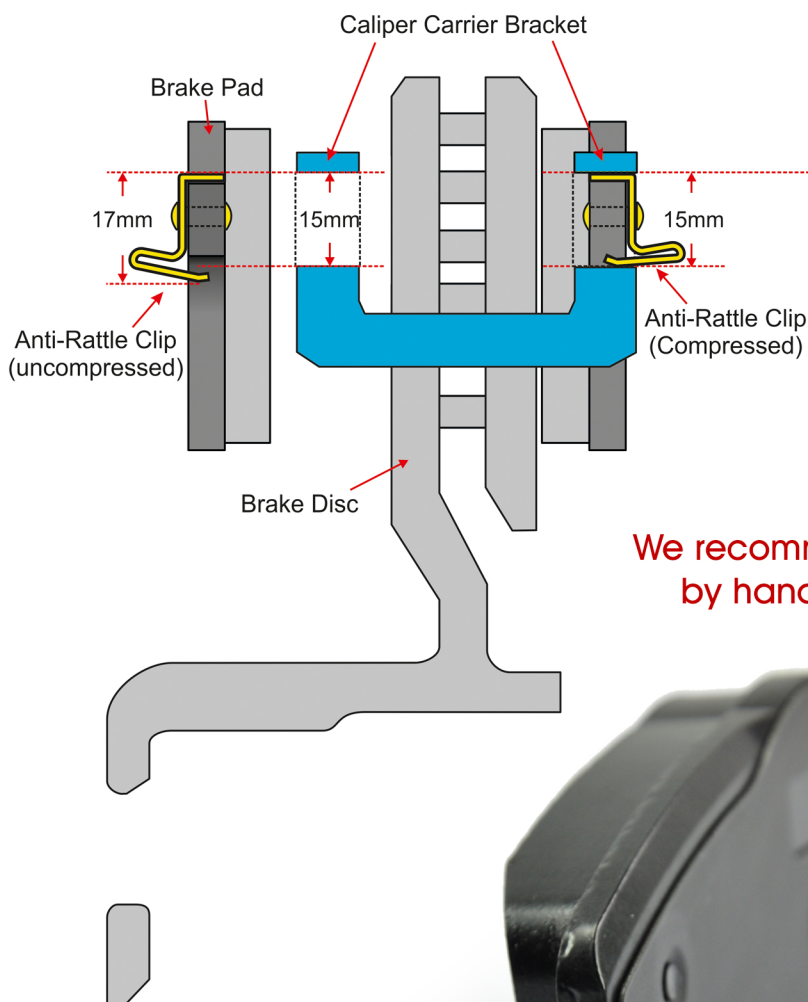

The clips are in effect mini springs and as such need to be compressed slightly during fitment to ensure a good fit within the carrier. The spring measures 17mm and needs to be compressed to fit into the slot in the carrier which is 15mm.

However care should be taken during fitting to ensure that the clip is not compressed too much otherwise the pad will be loose in the carrier and this could lead to rattle and squeal.

We recommend compressing this clip by hand and not by using tools.

