

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

069.330

passend für / suitable for
adaptable à / adaptable a

Daihatsu



Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

060.220
M 18 x 210

Anziehen/
Tightening/
Serrage/
Apriete

 19-27 Nm
39-47 Nm
59-67 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 77,0 mm; ÷: 1,35 mm

Mot: HD, HDC, HD-E, HDEP, HEE, HEEG, HE-EJ

1,3 ltr.-1,6 ltr.

61-77 kW (83-105 PS)

Applause I-II, Charade IV, Feroza, GranMove, Terios

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

23/11/14

069.330