



Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****265.381**passend für / suitable for
adaptable à / adaptable a**Ford****Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

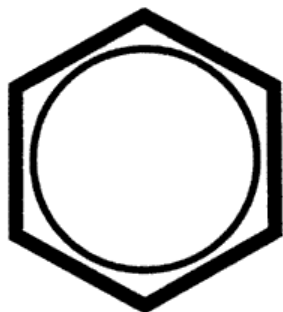

175.580

M 10x159,5/M8x121

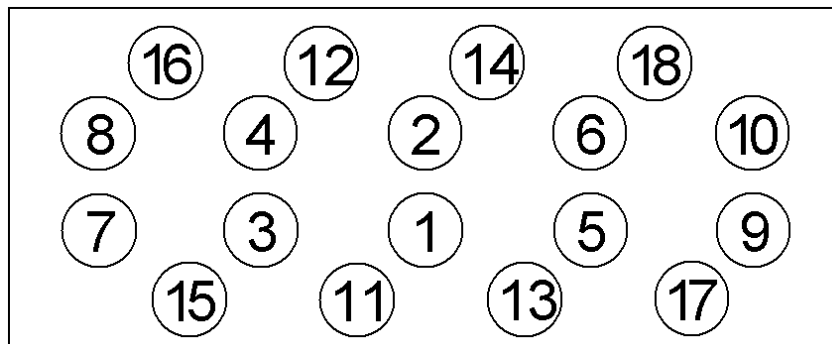Anziehen/
Tightening/
Serrage/
Apriete

- Pos. 1-10: 10 Nm
- Pos. 11-18: 5 Nm
- Pos. 1-10: 20 Nm
- Pos. 11-18: 10 Nm
- Pos. 1-10: 40 Nm
- Pos. 11-18: 20 Nm
- Pos. 1-18: 180°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 87,1 mm; ÷: 1,15 mm 2 Zähne/teeth/dents

Mot: ABFA;D3FA;D5BA;F3FA;FIFAFMBA;HJBA
HJBB;HJBC;N7BA;QJBA;QJBC;QJBD;SDBA
2,0 ltr.Duratorq 55-96 KW (75-130 PS)Mondeo (TDDi) 10/00>; Mondeo (TDCi) 10/01>
Transit(Di) 08/00>; Transit (TDCi) 05/02>**Elring-Serviceteam**Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

265.381