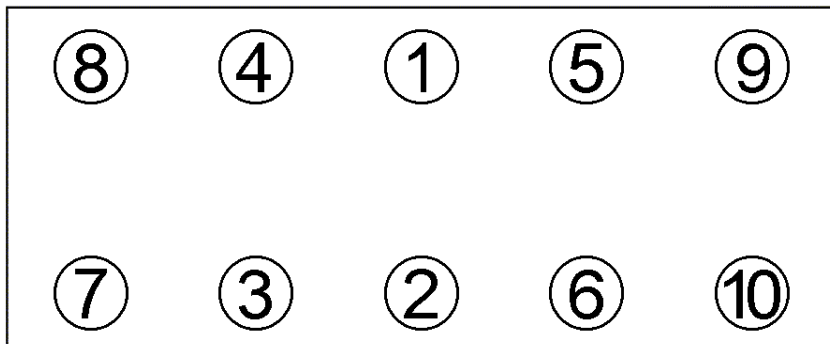


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****351.343**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornilloAnziehen/
Tightening/
Serrage/
Apriete16 D
● 25 Nm
➤ 90°
➤ 90°
➤ 45°
* 15 min
➤ 30°
1.000 km
➤ 45°16 DA
● 25 Nm
➤ 60°
➤ 60°
➤ 60°
* 15 min
➤ 30°
1.000 km
➤ 45°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

81,5 mm Ø, -/1,50 mm ÷

1,6 Ltr. Diesel

Mot 16D, 16DA, 40/44 kW (54/60 PS)

Ascona-C, 04/1982>, Kadett-D

Kadett-E, 09/1984>

Astra Diesel, 1982>1989

Belmont Diesel, 01/1986>1989

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

351.343