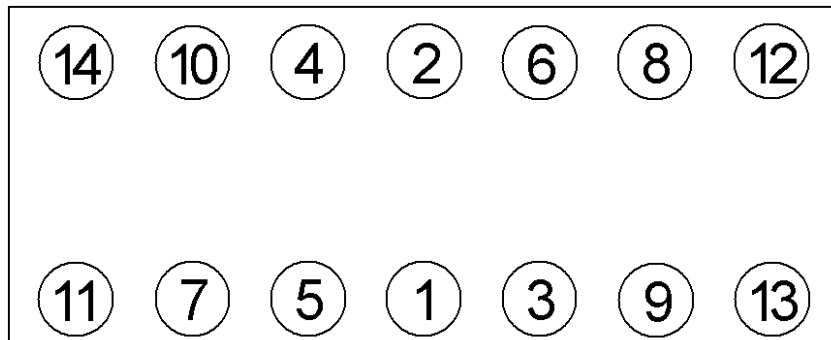


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****749.370**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

802.700

M 12x1,75x157

Anziehen/  
Tightening/  
Serrage/  
Apriete

- ☼ 58 - 62 Nm
- 25 min
- 78 - 82 Nm
- \* 80°C / 25 min
- 30° - 40°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**Mot. M30 B35, 3430cm<sup>3</sup>

E28 528i, 535i, M535i

E24 635CSi 05/1982&gt;06/1987

E23 735i 09/1982&gt;, 745i &gt;05/1983

E34 535i

E32 735i,iL

Ø 93,5 mm, ÷ 1,72mm

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

**\*749.370\***