

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

920.525


passend für / suitable for
adaptable à / adaptable a



Das Original

Toyota

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

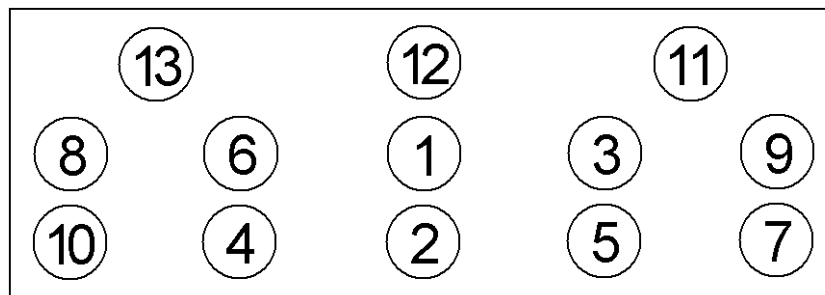

Anziehen/
Tightening/
Serrage/
Apriete

M14
30 Nm
60 Nm
88 Nm

M12
19 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

88,0 mm Ø

Toyota F-Model 1,8ltr.+2,0ltr. 11/1982-01/1990

Toyota HIACE II 1,8ltr.+2,0ltr. 3/1983-11/1989

Toyota HILUX 1,8ltr.+2,0ltr. 01/1984-12/1986

Daihatsu Rocky 2,0 ltr. 02/1985-04/1993

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

920.525