

## TSB-FW01 Shipping Pins for Dual Mass Flywheels

Transport shipping pins are located in some dual mass flywheels for safe movement of this product. This shipping pin is found on the rear of the flywheel.





With these shipping pins it will not be possible to check for free play when the flywheel is new. These shipping pins do not need to be removed upon installation and will sheer off automatically during operation.



