

LVCF504

Filter Type: Carbon (box of 2)

Time (Approx): 15 Mins



1. The first cabin filter is located between the glove box and passenger footwell. Remove trim to access the filter.
2. The second cabin filter is located in the engine compartment in the nearside scuttle area. Remove scuttle panel to access the filter.