

LVCF527

Filter Type: Standard

Time (Approx): 30 Mins



1. The cabin filter is located under the steering column.
2. Remove steering column cowl to gain access.