

Product info sheet


Robert Bosch

0445120064

Special tools needed?

Yes ☐

Puller to remove inlet pipe

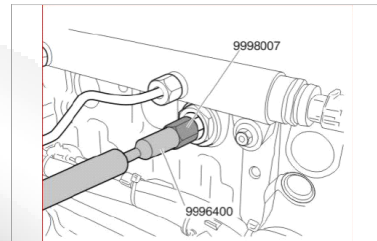

Product specific information

Programming

No ☐

Unlocking

No ☐

Adaption values reset

No ☐

Bleed


No ☐

adjustment at mounting_1

No ☐

adjustment at mounting_2

☐

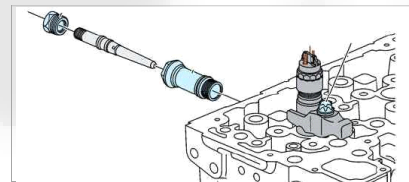

Tightening torques

Bushing inlet pipe

Step 1: 80 Nm

Injector/ retaining clamp

Step 2: 4 Nm and loosen. Step 4: 30 Nm

Straining screw inlet pipe

Step 3: 20 Nm Step 5: 52 Nm

Electrical connectors injector

2 Nm

High Pressure pipe nuts

1: 20 Nm 2: 52 Nm

Assembly instructions

Replace sealing washer

Replace inlet pipe

Core charge terms:

- externally intact,
- no mechanical damage,
- not dismantled,
- no heavy corrosion.