




DAF111D

JURATEK

FITTING INSTRUCTIONS

Please refer to relevant safety instructions provided by vehicle manufacturer before commencing. Brake discs should always be replaced as an axle set.

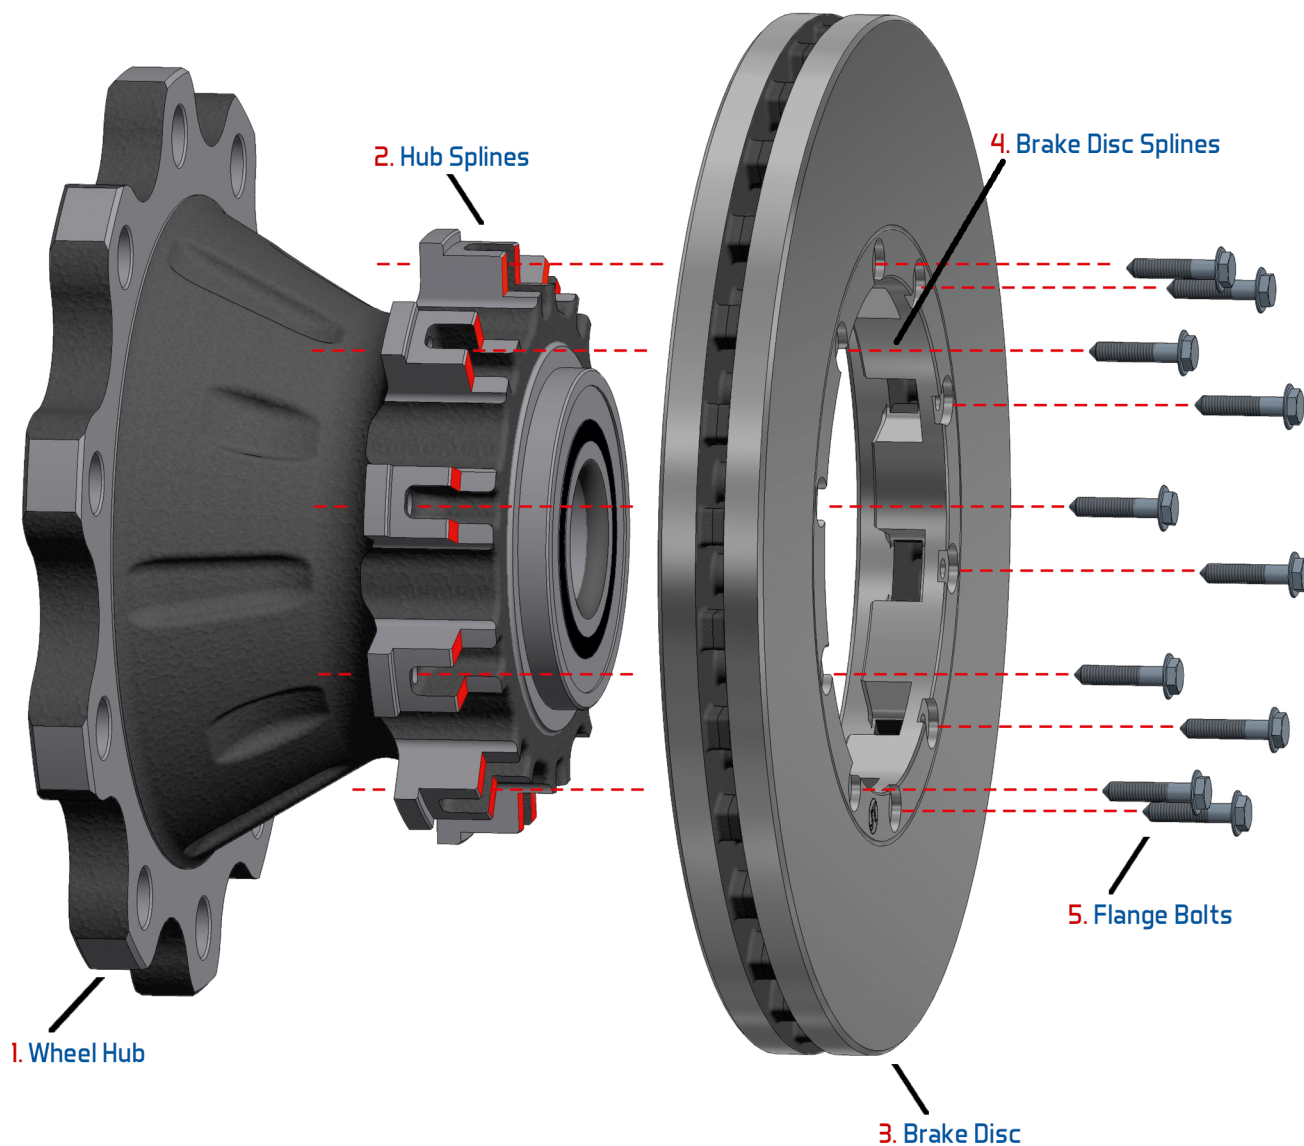

- Step 1.** Ensure that the hub splines (2) are cleaned and any rust removed particularly from the highlighted areas.
- Step 2.** Coat the hub splines (2) and disc splines (4) in heat resistant copper grease.
- Step 3.** Slide the brake disc (3) in place.
- Step 4.** Insert flange bolts (5) through the disc(3) into the hub (1)
- Step 5.** Screw together using torque setting **30 ±2 Nm**.

www.juratek.com

