



# EGR VALVES

## FITTING NOTE FOR PTA510-0250

### THE EGR VALVE PTA510-0250

**can be adapted to the ECU automatically.**

**This means it needs not to be adapted through an engine tester.**

**Please proceed as follows:**

- 1.) Disconnect battery and wait for appr. five minutes.
- 2.) Connect the battery again.
- 3.) Connect the EGR valve with the corresponding plug.
- 4.) Turn on ignition for about five minutes  
but do not start the engine.
- 5.) Afterwards start the engine for five minutes  
but do not accelerate.  
-> The EGR valve is now adapting automatically!
- 6.) Afterwards delete the failure in the error memory  
of the ECU.  
-> The engine light must be switched off now!
- 7.) This procedure must be retried as long as the engine light is  
switched off.

