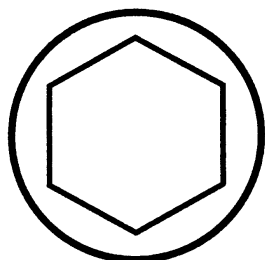
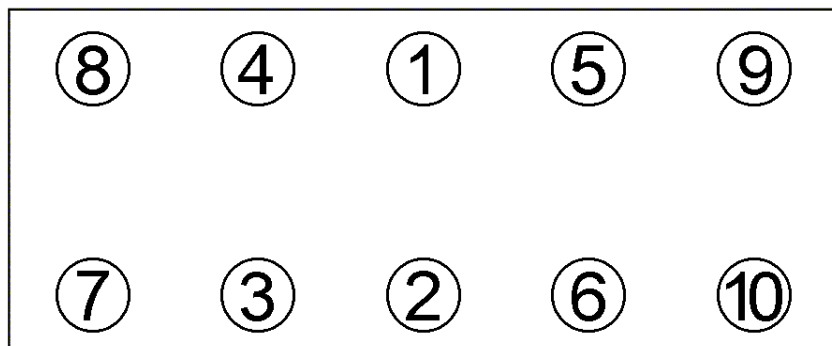


**Anziehvorschrift Zylinderkopf****Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****166.500**passend für / suitable for  
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape    Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo707.700  
M 11x1,5x100Anziehen/  
Tightening/  
Serrage/  
Apriete 17 - 22 Nm  
➤ 85° - 95°  
➤ 85° - 95°**Zeichenerklärung / Explanations / Explication / Explicacion**

|  |                                                |                                 |                                   |                                          |
|--|------------------------------------------------|---------------------------------|-----------------------------------|------------------------------------------|
|  | neue Zylinderkopf-<br>schrauben verwenden      | use new cylinder head<br>bolts  | utiliser des vis neuves           | emplar tornillos nuevos                  |
|  | Warmlauf (80°C)                                | warm up time (80°C)             | chauffage (80°C)                  | calentamiento (80°C)                     |
|  | Schrauben einzeln lösen<br>und wieder anziehen | loosen and tighten each<br>bolt | deserrer et serrer<br>vis par vis | aflojar y apretar<br>tornillo a tornillo |
|  | Setzzeit                                       | relaxation time                 | durée de tassement                | tiempo de espera                         |
|  | Drehwinkel                                     | torque angle                    | angle de serrage                  | ángulo de giro                           |

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 79,5mm

1,5 ltr.

65 kW (88 PS)

323 S VI (BJ)

323 F VI (BJ)

**Elring-Serviceteam**

Fon +49 7123 724 799

Fax +49 7123 724 798

[service@elring.de](mailto:service@elring.de)

24/11/12

**\*166.500\***