



Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****187.690**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

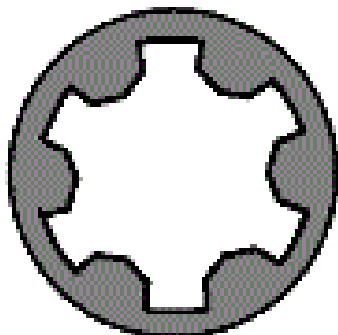

152.760

M 12x1,25x218

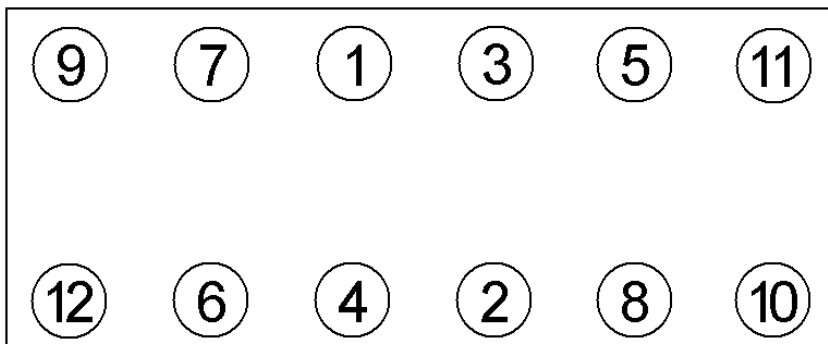Anziehen/
Tightening/
Serrage/
Apriete

- ⊙ 20 Nm
- ⊙ 65 Nm
- 90°
- 90°
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

83 mm Ø 1,70 mm ÷ 1 Loch

Mot: 182.A2.000, 838.A3.000, 838.A7.000

2,4 TD

Marea ab 1996 >

Kappa 07/1996 > 10/2001

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

187.690