

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

380.901

passend für / suitable for
adaptable à / adaptable a



Chrysler / Dodge / Jeep



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

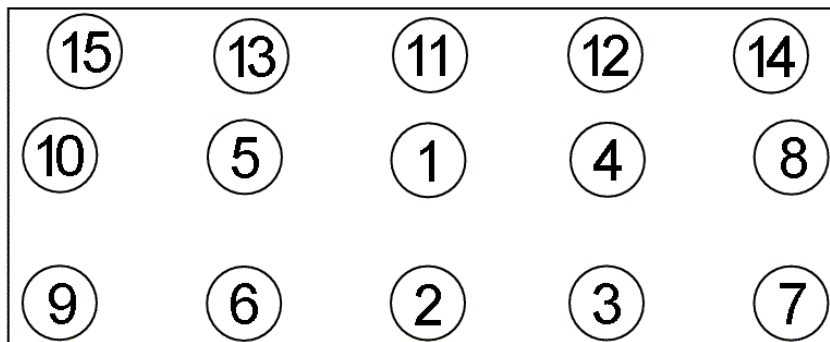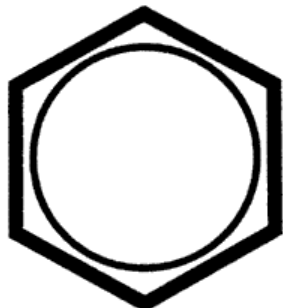

Anziehen/
Tightening/
Serrage/
Apriete



1-10
11-15
1-10
11-15
1-10
1-10
11-15

➤ 34 Nm (25 ft. lbs.)
➤ 20 Nm (15 ft. lbs.)
➤ 54 Nm (40 ft. lbs.)
➤ 20 Nm (check)
➤ 61 Nm (45 ft. lbs.)
➤ 90°
➤ 34 Nm (25 ft. lbs.)

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

6.4L V8 16V SRT Apache

Mot.: ESG, ESH

mounting position: right

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

380.901