

Anziehvorschrift Zylinderkopf	540.410 passend für / suitable for adaptable à / adaptable a Isuzu	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

Anziehen/
Tightening/
Serrage/
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Isuzu Midi Bus 2,0 ltr. 01.89- 61KW MC 4ZC1
Isuzu Midi Kasten 2,0 ltr. 06.88- 61KW MC 4ZC1
Isuzu Midi Kasten 2,0 ltr. 4WD 09.88- 61KW MC 4ZC
Isuzu Midi Van 2,0 ltr. 01.89- 61KW MC 4ZC1
Isuzu Midi Van 2,0 ltr. 4WD 01.89- 61KW MC 4ZC1

Isuzu Midi Bus 2,0 ltr. 4WD 01.89- 61KW MC 4ZC1

Elring-Serviceteam

Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/01/22

540.410