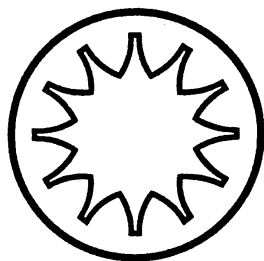
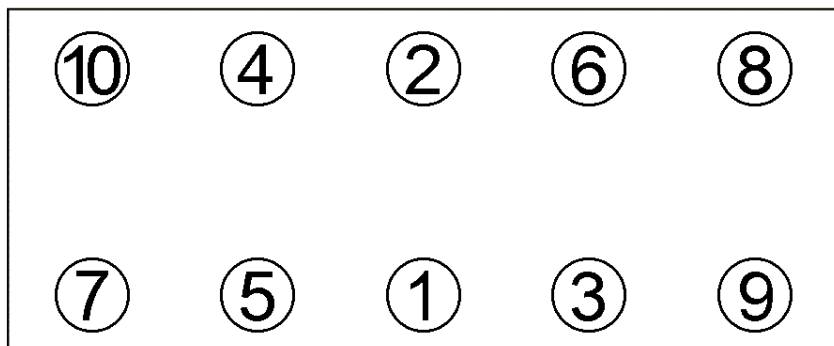


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****593.940**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo351.900
M 12x1,75x206Anziehen/
Tightening/
Serrage/
Apriete

- 30 Nm
- 70 Nm
- 90°
- 90°
- 90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

2,0 TDI EA288 1,63 mm / 2 Loch / hole

CVCA, CRVA, CRVC, CRLB, CRLC, CRBC, CRBD, CRFA, C
CRUA, CSUA, CSUB, CSUE, CSUD, CKFB, CKFC, CRMB, C
CNHA, CNHC, CUUA, CUUB, CUUC, CUUD, CUUE, CUUF, D
DFSB, DFSC, DFSD, DFSE, DFSF, CUXA, CUWA, CUVB, C
CUVC, CUVD, DFLA, DFLD, DFMA, DFUA, CRVA, CYKB, C
DFEA, DFHA, DEUA, DEUB, DESA, CZHA, CZJA, DEUA, D
DETA, DETB, DFVA, CNHA**Elring-Serviceteam**Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

593.940