



## Tightening torque

**640 Nm**

---

### **Please check tightening torques regularly!**



Use a torque spanner to ensure that the specified torques are accurately maintained.

These tightening torques apply subject to different maintenance schedule specifications.