


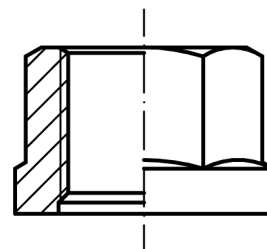

## Tightening torque

**300 Nm**



---

### **Please check tightening torques regularly!**



Use a torque spanner to ensure that the specified torques are accurately maintained.

If the wheels were off, check and re-tighten the wheel nuts after about 200 km of driving.