




Tightening torque

600 Nm

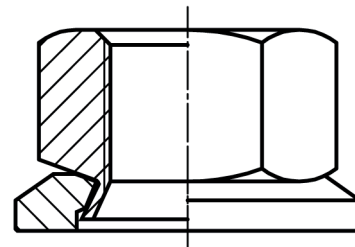

Please check tightening torques regularly!



Use a torque spanner to ensure that the specified torques are accurately maintained.

If the wheels were off, check and re-tighten the wheel nuts after about 50 - 100 km of driving.