



## Tightening torque

**Stage 1 = 50 Nm**

**Stage 2 = 90°**



Use a torque spanner to ensure that the specified torques are accurately maintained.