



IMPORTANT NOTICE

PROPER INSTALLATION & INFLATION PROCEDURES MUST BE FOLLOWED TO AVOID PERMANENT DAMAGE TO THE PART. WARRANTY WILL BE VOIDED IF THESE PROCEDURES HAVE NOT BEEN FOLLOWED.




AIR SPRINGS INFLATED WITHOUT FOLLOWING THE MANUFACTURER'S SPECIFICATIONS/NOT SUPPORTING THE VEHICLE WEIGHT CAN CAUSE THE FORCE TO DISTRIBUTE UNEVENLY, WHICH MAY LEAD TO PREMATURE PART FAILURE.



IMPROPER INFLATION EXAMPLES

Air springs inflated without following the manufacturer's specifications/not supporting the vehicle weight can cause the force to distribute unevenly, which may result in crimp ring failure.

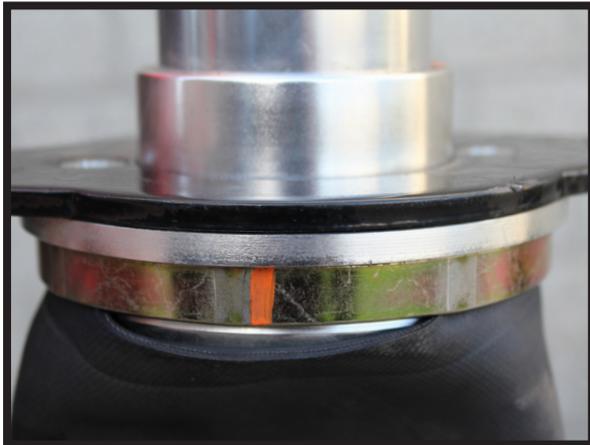

TOP AND BOTTOM MOUNTS OF THE AIR SPRING ARE BROKEN

The top and/or bottom mounts may break if the air spring is not seated properly, or if the correct inflation procedures are not followed.



Arnett® is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com.
(In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)