



# INSTALLATION MANUAL

## AH-5697 Arnett Complete Air Helper Kit Ford Transit V363 FWD



**Engineered to Ride, Built to Last<sup>®</sup>**

# CONGRATULATIONS ON YOUR PURCHASE OF AN ARNOTT® SUSPENSION PRODUCT

WE AT ARNOTT LLC ARE PROUD TO OFFER A HIGH QUALITY PRODUCT WITH ALL THE TECHNICAL SUPPORT YOU NEED. THANK YOU FOR YOUR CONFIDENCE IN US AND OUR PRODUCT.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified and certified automotive professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

## GENERAL INFORMATION

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at [www.arnottinc.com](http://www.arnottinc.com) and [www.arnotteurope.com](http://www.arnotteurope.com).



### WARNING:

The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

### CAUTION:

Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.

To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.

Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

For vehicles with a "Closed Air Supply System," replacement of components requires proper adherence to procedures set forth within OE servicing literature. Failure to comply with the OE prescribed procedures can result in component damage and/or failure.

All Arnott LCV Kits are approved for road-legal use in accordance with German law. After installation is complete, an official test center must prove all requirements and installation correctly match the vehicle application and instructions. [Click here to download the TÜV certificate for this kit.](#)

With the §19/3 regulation, you will receive an approval document specific to your vehicle from the test center.

## COMPONENTS

<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>QTY</b>
29-18449	UPPER BRACKET	2
29-21835	LOWER BRACKET	2
21-20785	HELPER SPRING ACCESSORY KIT	1
29-18647	DOUBLE CONVOLUTED AIR SPRING	2
29-21834	FLAT WASHER, M8 - ZINC PLATED	4
29-21836	COUNTERSUNK SCREW M10 X 45	2
29-17570	M8X1.25 X 20 HEX HEAD SCREW	4
29-21829	COUNTERSUNK SCREW M10 X 1.5 PITCH X 16	4
29-18337	M6 X 8MM HEADLESS SCREW	4
29-18334	ELBOW FITTING 6MM TO 1/4" UNC	2
29-18332	6MM TUBING (BLACK)	5
29-18333	6MM TUBING (YELLOW)	5
29-22250	CONSOLE BRACKET	1
29-22281	CONSOLE ADAPTER FORD	1
AH-5377	ARNOTT WIRELESS AIR HELPER CONTROLLER INCL. HARDWARE	1

# REMOVAL

1. Remove serial bump stop. (Figure 1)



FIGURE 1

2. Remove the bump stop bracket using a wrench with a 13mm hex nut. (Figure 2)



FIGURE 2

3. Clean the surface by removing all dirt and dust. (Figure 3)

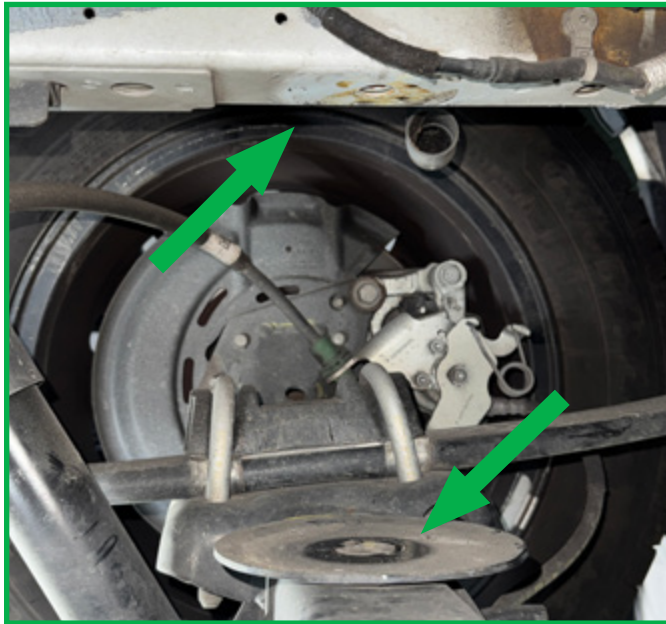


FIGURE 3

## INSTALLATION

1. Mount the upper bracket with the M10 x 45 countersunk screw. Make sure that the cut-out points are to the middle of the axle, 90 degrees towards the driving direction. (Figure 4)

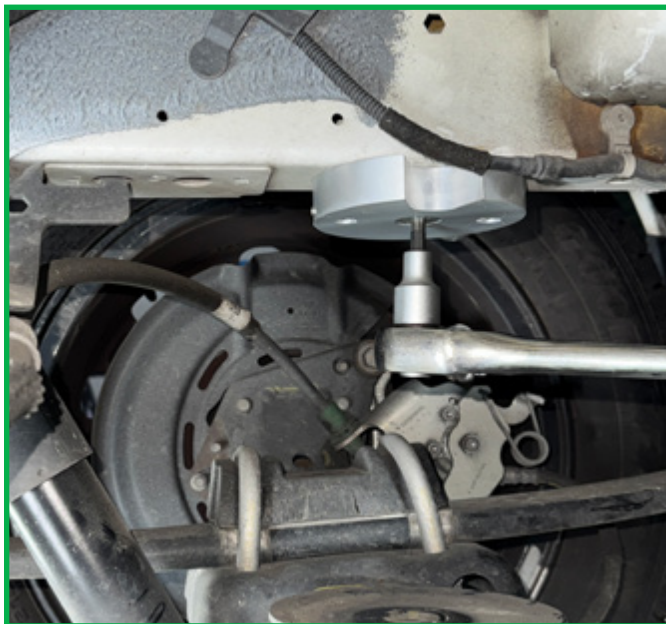


FIGURE 4

2. Bring the pre-assembled air spring in place. **Ensure the air fitting will not be damaged.** Hook in the lower bracket to the plate sitting on top of the axle. Make sure the lower bracket accurately fits flat on the plate. The two bolts on the upper plate of the air spring should match the holes in the upper bracket. (Figure 5)



FIGURE 5

3. Plug in the air line into the fitting (Left Black/Right Yellow). Inflate the air spring manually with the provided inflation valve to max. 2 bar. Check if the air spring is sitting correctly on the lower plate on the axle and verify that the bolts on the upper side of the air spring fit the upper bracket holes.
4. Tighten the headless bolts in the upper bracket with max. 13Nm torque to secure the air spring. Then fixate the lower bracket by tightening the two M8 screws with max. 15 Nm torque. (Figure 6)

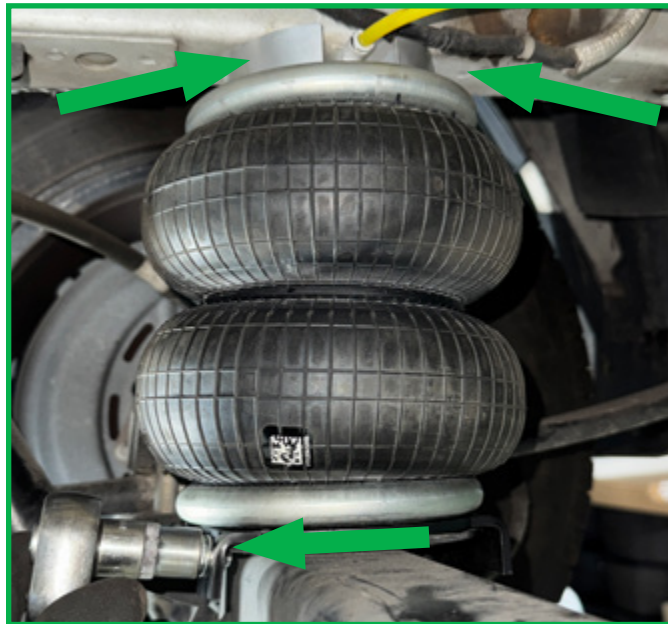


FIGURE 6

5. Route the air line to the installation location of the console. (Figure 7)



FIGURE 7

## CONNECTING CONSOLE AND CONTROLLER

1. Power up the console with the included power cable. Make sure it is fully seated and cannot be pulled out without pressing the retaining clip.
2. Power on the controller with the included 12V power cable or USB-A to USB-C cable. The welcome screen should appear followed by the language selector. (Figures 8, 9)



FIGURE 8

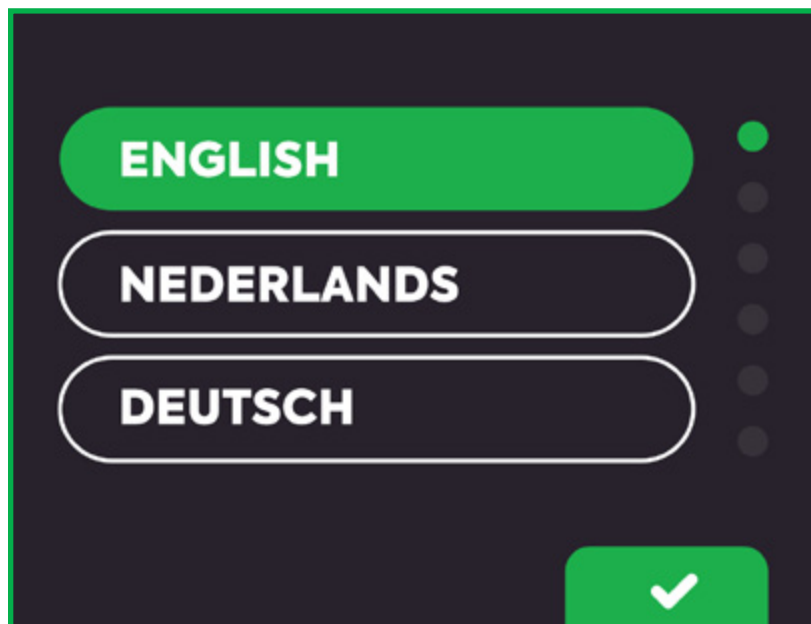


FIGURE 9

3. Select the required language. (Figure 10)



FIGURE 10

4. A screen indicating that the controller is looking for a console will appear. If the controller cannot find the console after 1 minute, move the controller closer to the console. Once the controller found the console, an identification procedure will appear on the display. (Figures 11, 12)

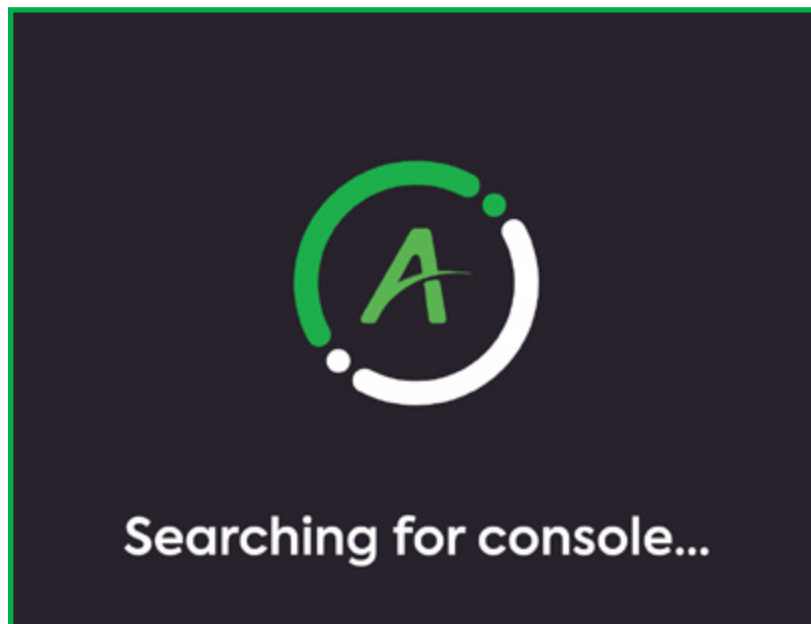


FIGURE 11

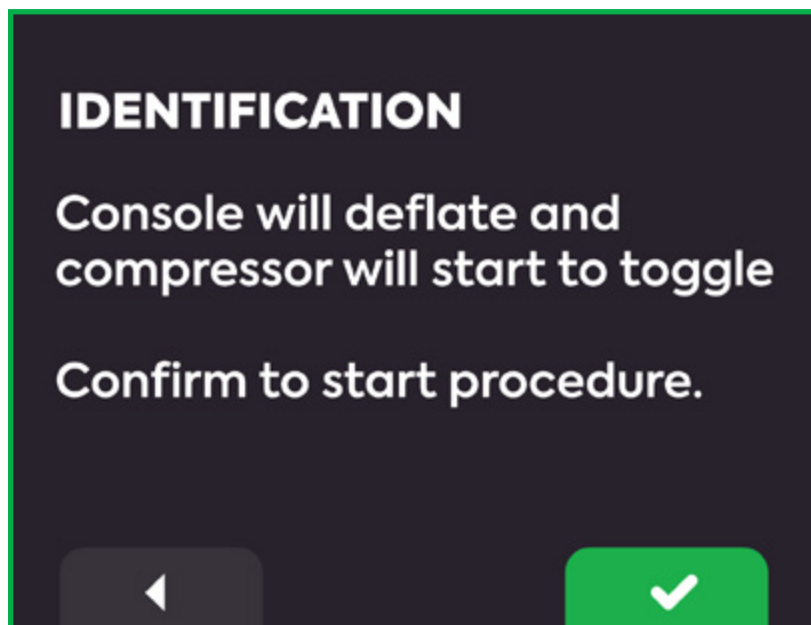


FIGURE 12

5. The identification procedure starts by automatically turning the compressor on and off multiple times. This verifies that the console you are trying to pair with, it the correct unit. When you hear the console, you can confirm pairing the controller. (Figures 13, 14)

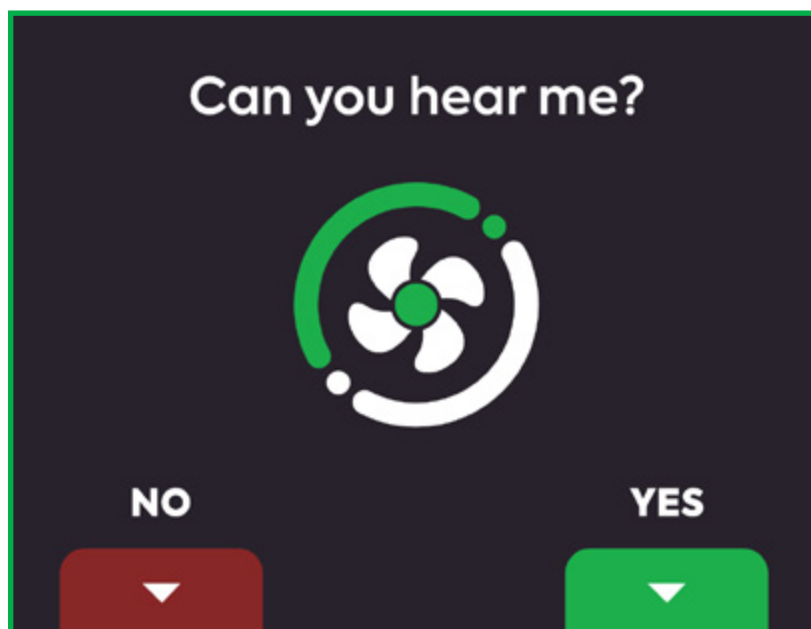


FIGURE 13



FIGURE 14

6. The console and controller are now successfully paired. (Figure 15)

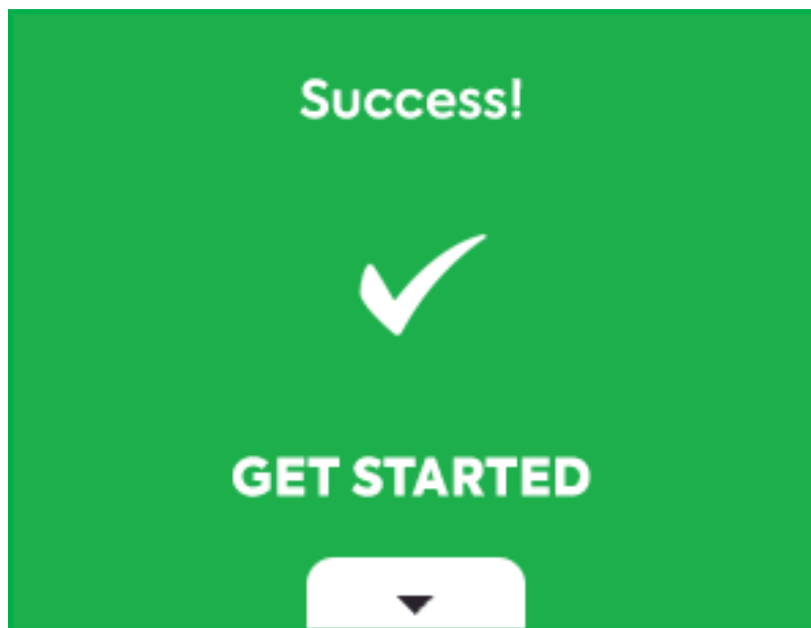


FIGURE 15

# Arnott®

## Suspension Products

### Arnott US Business Office:

[www.arnottinc.com](http://www.arnottinc.com)

100 Sea Ray Drive  
Merritt Island, FL 32953

**Call:** 800.251.8993

321.868.3016

**Fax:** 321.868.3703

**Email:** [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com)

### Arnott Europe Business Office:

[www.arnotteurope.com](http://www.arnotteurope.com)

Industrieweg 19  
5145 PD, Waalwijk (NL)

**NL Phone:** +31 73 7850 580

**DE Phone:** +31 85 2087 438

**UK Phone:** +44 203 3186 124

**BE Phone:** +32 258 846 90


**ES Phone:** +34 91 901 10 56

**FR Phone:** +32 78 48 46 93


**Email:** [info@arnotteurope.com](mailto:info@arnotteurope.com)




Air Springs

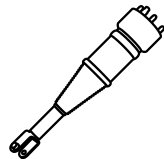


Struts

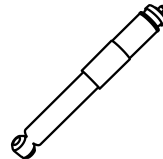


Shocks

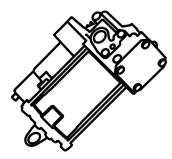


Compressors

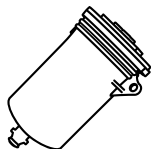


Dryers

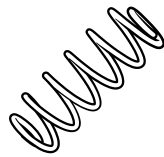

Coil Spring  
Conversion Kits

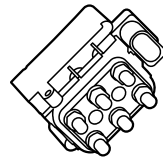

Valve Blocks

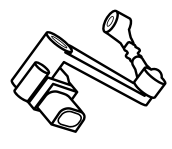

Ride Height  
Sensors