Poor or corroded connections on the rear of the alternator are common creating charging issues, this can also cause the charging light to illuminate when the unit is still charging.

Please double check before ordering and fitting.