

RYCO FILTERS

FITTING INSTRUCTIONS FOR RYCO CABIN AIR FILTER RCA230P/MS NISSAN NAVARA D40 (THAI BUILT)




The cabin air filter is located behind the glove box on the passenger side. Please follow this instruction to replace the element.



Open the glove box. With both hands positioned in both upper corners of the compartment just above the arrow on the picture, apply some force in the arrow direction to unhinge the compartment retaining lugs. Once that is done it will drop completely.



With the glove box compartment completely dropped open, the cabin air filter housing will be highly visible (Pic 3) Refer to the picture above. Proceed to unclip the housing lid and remove.

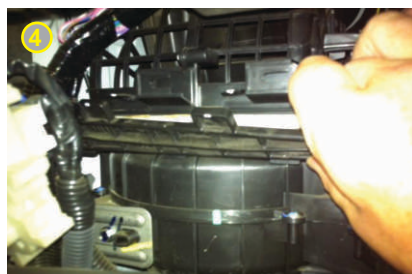

With the lid out of the way the cabin air filter can be reached and removed. It is suggested that the filter is pulled out gently as there might be debris accumulated on top of it. Once the filter is out of the way take the opportunity to clean around the housing and insert new filter facing in the right air flow direction. See side of filter for indication. Refit all components in reverse order.



GUD Automotive Pty Ltd
29 Taras Ave Altona North
Victoria 3025 Australia
www.rycolters.com.au

GUD Automotive - A Division of
GUD (NZ) Holdings Limited
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz

RYCO FILTERS

FITTING INSTRUCTIONS FOR RYCO CABIN AIR FILTER RCA230P/MS NISSAN NAVARA D40 (THAI BUILT)



The cabin air filter is located behind the glove box on the passenger side. Please follow this instruction to replace the element.



Open the glove box. With both hands positioned in both upper corners of the compartment just above the arrow on the picture, apply some force in the arrow direction to unhinge the compartment retaining lugs. Once that is done it will drop completely.



With the glove box compartment completely dropped open, the cabin air filter housing will be highly visible (Pic 3) Refer to the picture above. Proceed to unclip the housing lid and remove.



With the lid out of the way the cabin air filter can be reached and removed. It is suggested that the filter is pulled out gently as there might be debris accumulated on top of it. Once the filter is out of the way take the opportunity to clean around the housing and insert new filter facing in the right air flow direction. See side of filter for indication. Refit all components in reverse order.



GUD Automotive Pty Ltd
29 Taras Ave Altona North
Victoria 3025 Australia
www.rycolters.com.au

GUD Automotive - A Division of
GUD (NZ) Holdings Limited
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz