




## Tightening torque

Centred around wheel bolt / front axles

**Stage 1 = 60 Nm**


**Stage 2 = 300 Nm**

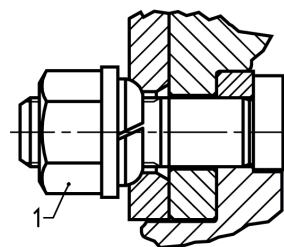

Centred around centre / front axles

**Stage 1 = 60 Nm**

**Stage 2 = 500 Nm**

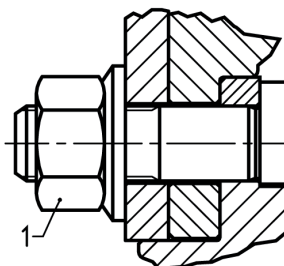

Please check tightening torques regularly !

Use a torque spanner to ensure that the specified torques are accurately maintained.

If the wheels were off, check and re-tighten the wheel nuts after about 200 km of driving.

