

### Stabilisatoren 33705-1 und 33705-2

**Warnung:**

**Nichtbeachtung dieser Einbauanweisung kann zu Schäden am Fahrzeug und zu Personenschäden führen. In diesem Fall weist H&R jegliche Verantwortung zurück.**

**Hinweis:**

Einbauanweisungen ersetzen nicht das Werkstatthandbuch des Fahrzeugherstellers. Sie erheben keinen Anspruch auf Vollständigkeit und/oder Berücksichtigung aller möglichen Toleranzen und Fehlerquellen.

Schellen-Oberteil von Vorderachse und Hinterachse sind identisch.

Kein Schellen-Unterteil an der Hinterachse

**Vorderachse (VA):**

1. Stabilisator nach Herstellerangaben aus dem Fahrzeug demontieren.
2. Gummilager HR33464VA03-25 an den H&R Stabilisator 33705VA montieren. (Abb. 1)
3. Schellen-Oberteil fest auf das Gummilager HR33464VA03-25 stecken. (Abb. 2)
4. H&R Stabilisator nach Herstellerangaben in das Fahrzeug montieren. Verschrauben mit den mitgelieferten Schrauben, U-Scheiben und Schellen-Unterteil. (Abb. 3)

**Hinterachse (HA):**

1. Stabilisator nach Herstellerangaben aus dem Fahrzeug demontieren.
2. Gummilager HR33464VA03-23 an den H&R Stabilisator 33705HA montieren. (Abb. 4)
3. Schellen-Oberteil fest auf das Gummilager HR33464VA03-23 stecken. (Abb. 5)
4. H&R Stabilisator nach Herstellerangaben in das Fahrzeug montieren.

### Anti-roll bar 33705-1 and 33705-2

**Warning:**

**Any non-observance of these installation instructions might lead to damage of the car and injury of persons. In this case H&R rejects any responsibility.**

**Note:**

Installation instructions do not replace the vehicle manufacturer's handbook. They do not claim to cover complete fitment and/or to regard every possible tolerance or source of error.

Upper part of the bracket at front and rear axle is identical.

Rear axle has no lower part of the bracket.

**Front axle (FA):**

1. Dismantle the anti-roll bar according to the manufacturer specifications out of the car.
2. Assemble the bushing HR33464VA03-25 onto the H&R anti-roll bar 33705VA. (Fig. 1)
3. Press the upper part of the bracket onto the bushing HR33464VA03-25. (Fig. 2)
4. Install the H&R anti-roll bar according to the manufacturer specifications in the car with the delivered screws, washer and lower part of the bracket. (Fig. 3)

**Rear axle (RA):**

1. Dismantle the anti-roll bar according to the manufacturer specifications out of the car.
2. Assemble the bushing HR33464VA03-23 onto the H&R anti-roll bar 33705HA. (Fig. 4)
3. Press the upper part of the bracket onto the bushing HR33464VA03-23. (Fig. 5)
4. Install the H&R anti-roll bar according to the manufacturer specifications in the car.

## Vorderachse/front axle



Abb. 1 / Fig. 1

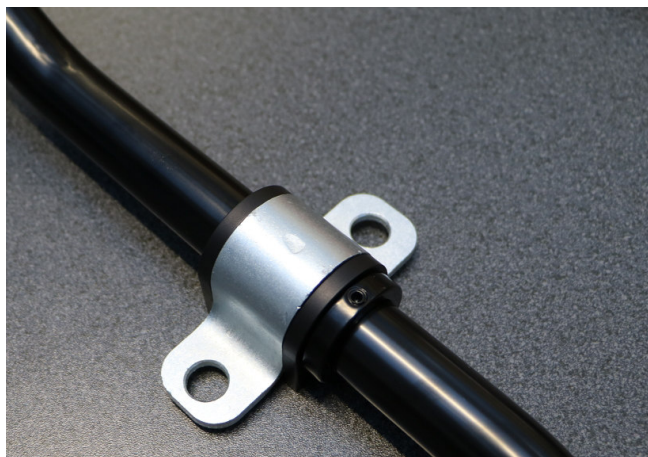


Abb. 2 / Fig. 2



Abb. 3 / Fig. 3

## Hinterachse/rear axle



Abb. 4 / Fig. 4



Abb. 5 / Fig. 5