


**PLEASE NOTE:**



The adapter HAZET 4932-M 27x2 or 4932-M 42x2, may only be changed if the hollow piston cylinder is retracted and depressurized.

The hollow piston cylinder MAY NOT be used without the adapter 4932-M 27x2 or 4932-M 42x2 screwed on.

With kind regards,  
Your HAZET-TEAM

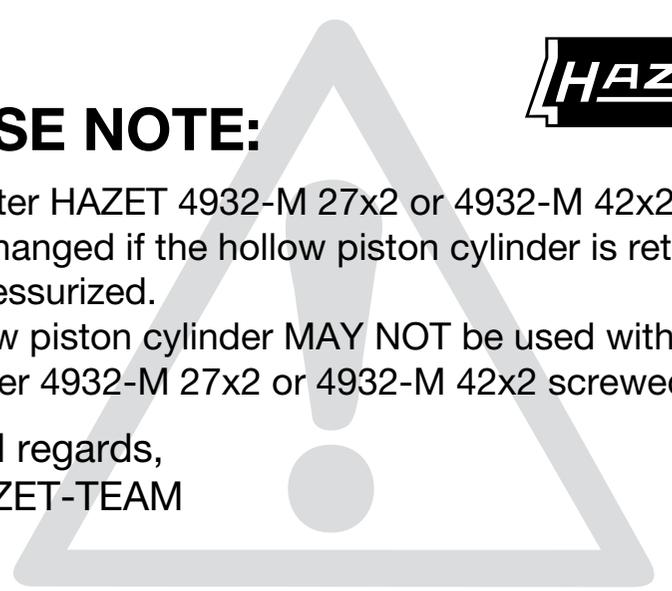


**PLEASE NOTE:**



The adapter HAZET 4932-M 27x2 or 4932-M 42x2, may only be changed if the hollow piston cylinder is retracted and depressurized.

The hollow piston cylinder MAY NOT be used without the adapter 4932-M 27x2 or 4932-M 42x2 screwed on.

With kind regards,  
Your HAZET-TEAM

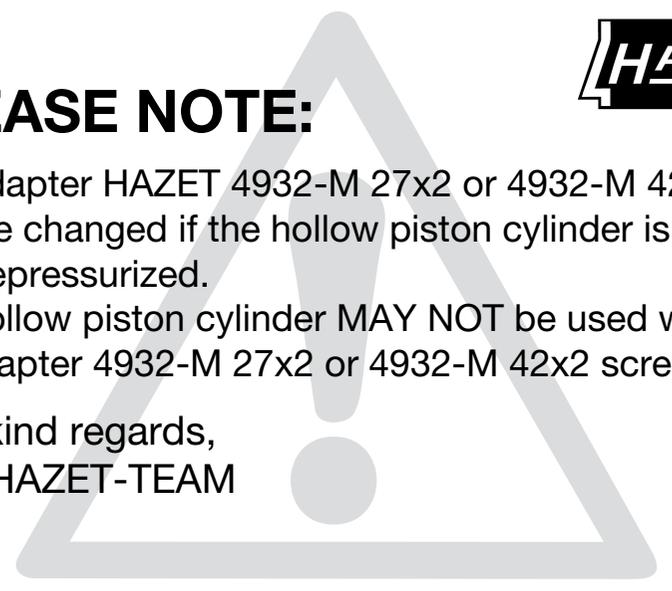


**PLEASE NOTE:**



The adapter HAZET 4932-M 27x2 or 4932-M 42x2, may only be changed if the hollow piston cylinder is retracted and depressurized.

The hollow piston cylinder MAY NOT be used without the adapter 4932-M 27x2 or 4932-M 42x2 screwed on.

With kind regards,  
Your HAZET-TEAM

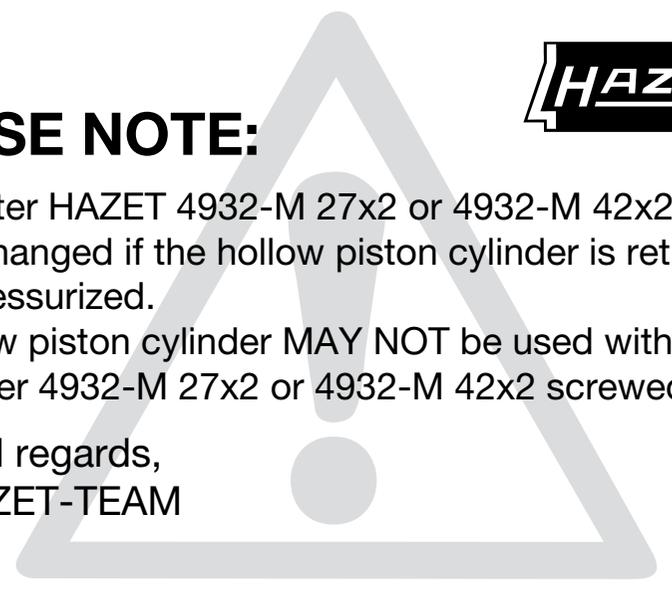

**PLEASE NOTE:**



The adapter HAZET 4932-M 27x2 or 4932-M 42x2, may only be changed if the hollow piston cylinder is retracted and depressurized.

The hollow piston cylinder MAY NOT be used without the adapter 4932-M 27x2 or 4932-M 42x2 screwed on.

With kind regards,  
Your HAZET-TEAM

## **ACHTUNG:**



Die Adapter HAZET 4932-M 27x2 bzw. 4932-M 42x2, dürfen nur gewechselt werden, wenn der Hohlkolben-Zylinder eingefahren und drucklos ist.

Der Hohlkolben-Zylinder darf nicht ohne angeschraubten Adapter 4932-M 27x2 oder 4932-M 42x2 betrieben werden.

Mit freundlichen Grüßen  
Ihr HAZET TEAM

## **ACHTUNG:**



Die Adapter HAZET 4932-M 27x2 bzw. 4932-M 42x2, dürfen nur gewechselt werden, wenn der Hohlkolben-Zylinder eingefahren und drucklos ist.

Der Hohlkolben-Zylinder darf nicht ohne angeschraubten Adapter 4932-M 27x2 oder 4932-M 42x2 betrieben werden.

Mit freundlichen Grüßen  
Ihr HAZET TEAM

## **ACHTUNG:**



Die Adapter HAZET 4932-M 27x2 bzw. 4932-M 42x2, dürfen nur gewechselt werden, wenn der Hohlkolben-Zylinder eingefahren und drucklos ist.

Der Hohlkolben-Zylinder darf nicht ohne angeschraubten Adapter 4932-M 27x2 oder 4932-M 42x2 betrieben werden.

Mit freundlichen Grüßen  
Ihr HAZET TEAM

## **ACHTUNG:**



Die Adapter HAZET 4932-M 27x2 bzw. 4932-M 42x2, dürfen nur gewechselt werden, wenn der Hohlkolben-Zylinder eingefahren und drucklos ist.

Der Hohlkolben-Zylinder darf nicht ohne angeschraubten Adapter 4932-M 27x2 oder 4932-M 42x2 betrieben werden.

Mit freundlichen Grüßen  
Ihr HAZET TEAM