

# Anziehvorschrift Zylinderkopf

# Tightening Instructions for Cylinder Head

# Instructions de serrage pour culasse

# Prescripciones de apriete para culatas


003.910

passend für / suitable for  
adaptable à / adaptable a




Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo

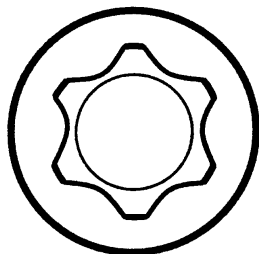

906.610  
M11 x 1,5 x 175

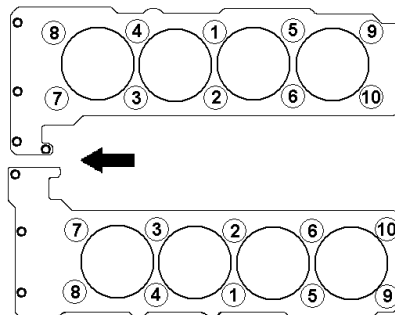

Anziehen/ Tightening/ Serrage/ Apriete	M11 10 Nm 50 Nm > 90° > 90° > 90°	M8 20 Nm
---	--	-------------

## Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

## Motortyp / Engine type / Type de moteur / Tipo de motor

links/left/gauche/izquierda

Mot.: M 156, M 159

C 63 AMG, E 63 AMG, ML 63 AMG, S 63 AMG

CLK 63 AMG, CLS 63 AMG

SLS AMG (197)

**Elring-Serviceteam**  
Fon +49 7123 724 799  
Fax +49 7123 724 798  
[service@elring.de](mailto:service@elring.de)

24/01/22

**\*003.910\***