


Montageanleitung | Installation Instruction | Notice de montage
Istruzioni di montaggio | Instrucciones de montaje
Instruções de montagem | Installationsanvisning | Montagehandleiding

de Innenraumfilter
en Cabin filter
fr Filtre d'habitacle
it Filtro abitacolo
es Filtro ventilacion para interior
pt Filtro de purificação do habitáculo
sv Kupéfilter
nl Interieurfilter

1 987 434 E20






BOSCH



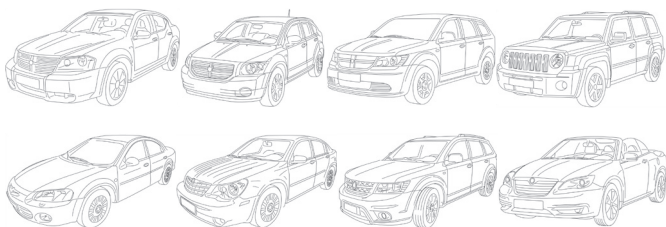


1 987 432 273

Dodge Avenger	06.07 ->
Dodge Caliber	06.06 ->
Dodge Journey	06.08 ->
Jeep Patriot	07.08 ->
Chrysler Sebring	04.01 -> 01.07
Chrysler Sebring	01.07 -> 12.10
Fiat Freemont	08.11 ->
Lancia Flavia Cabriolet	03.12 ->

10 min.

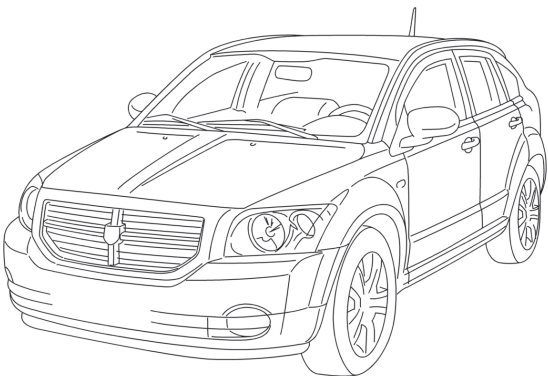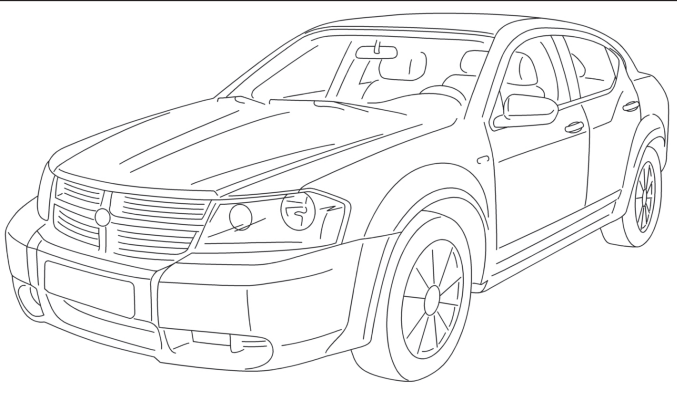

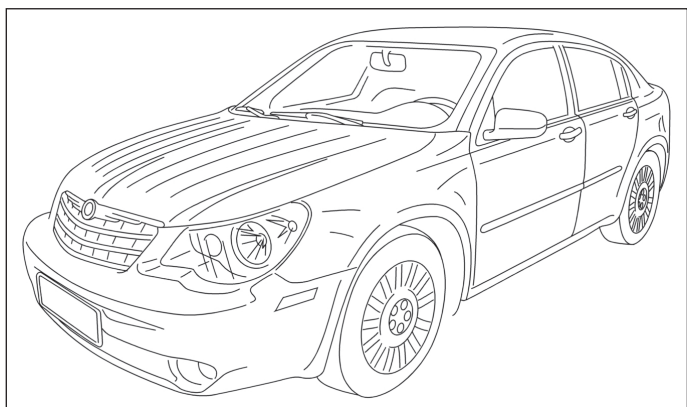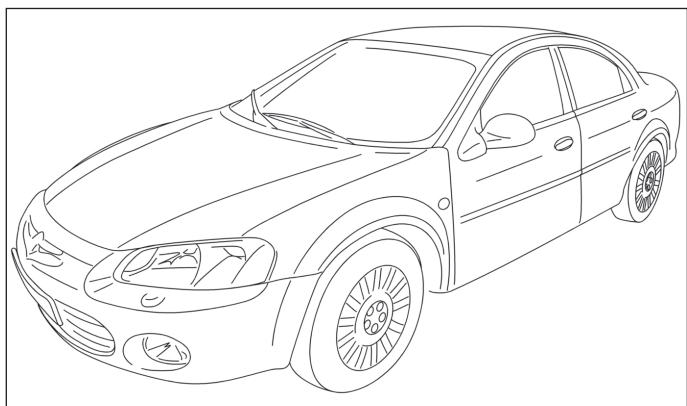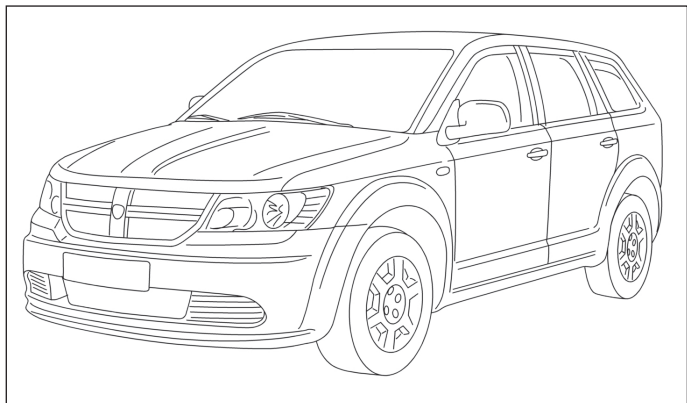

10 min.

