


THE LITTLE DIFFERENCE: PAGID DRUM BRAKE SHOE FOR BOSCH&AP BRAKE SYSTEMS

On the patented OEM solution, the hand brake cable can be slotted into the holder fixture without problems once the brake drum has been fitted. This is only necessary, however, to simplify the assembly process in the production of new cars.

The Pagid drum brake shoes for Bosch&AP brake systems have a lever that differs in its appearance from the OEM version but which can be used without any problems.

The photos show the difference between PAGID and OEM

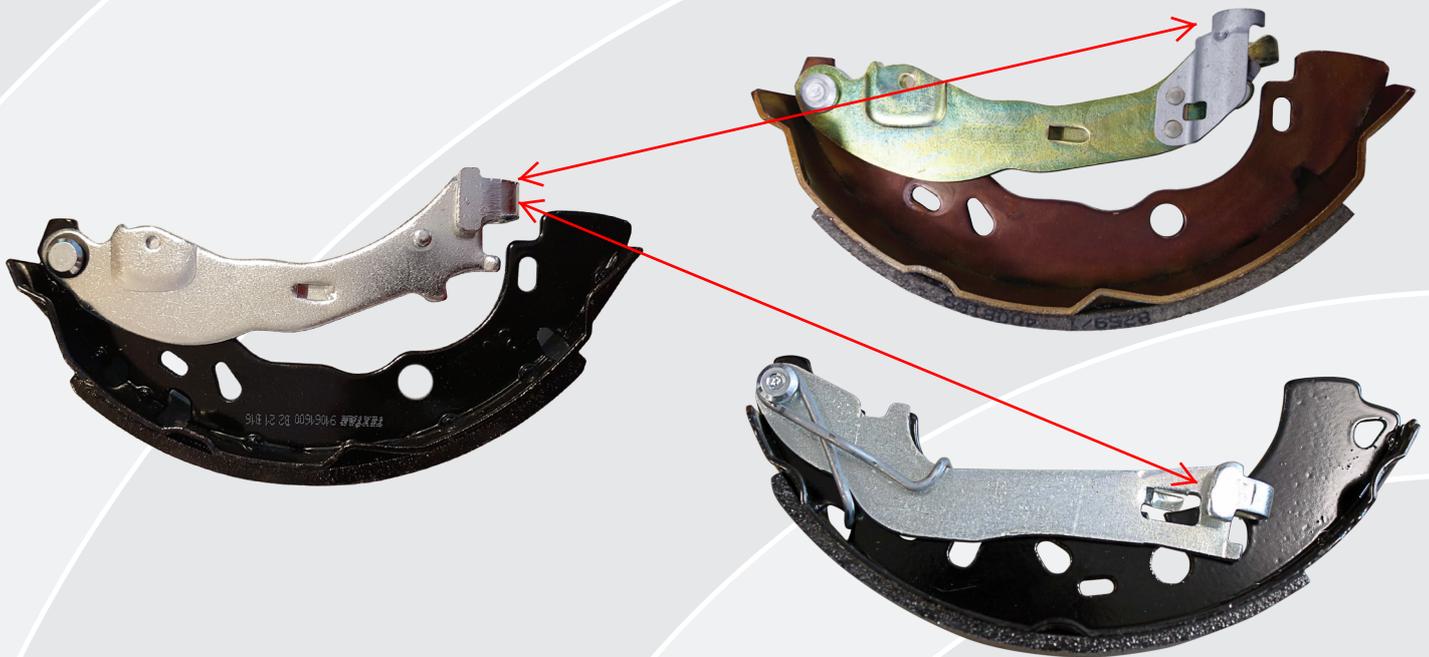

Pagid solution:

Engage the hand brake cable before fitting the drum brake shoe to the anchor plate.

