
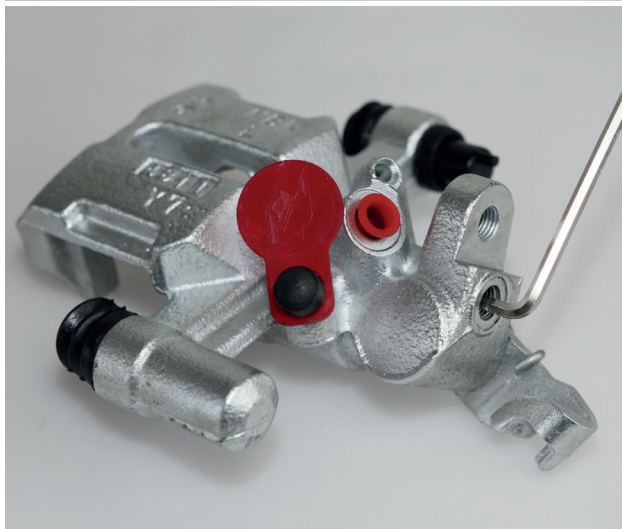
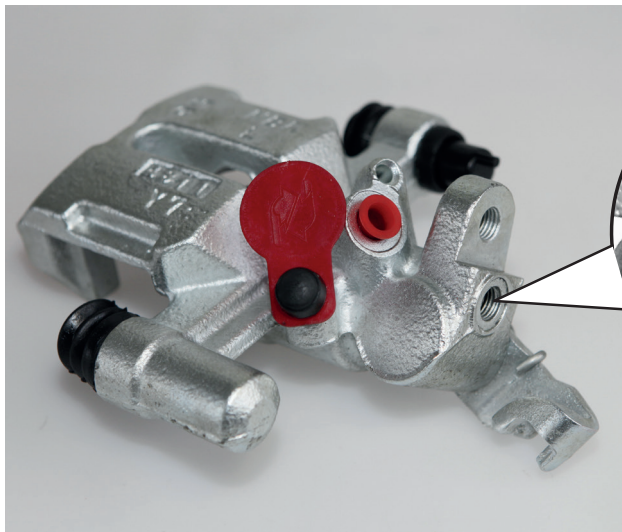


## Handbrake setting - BHN1106E, BHN1107E

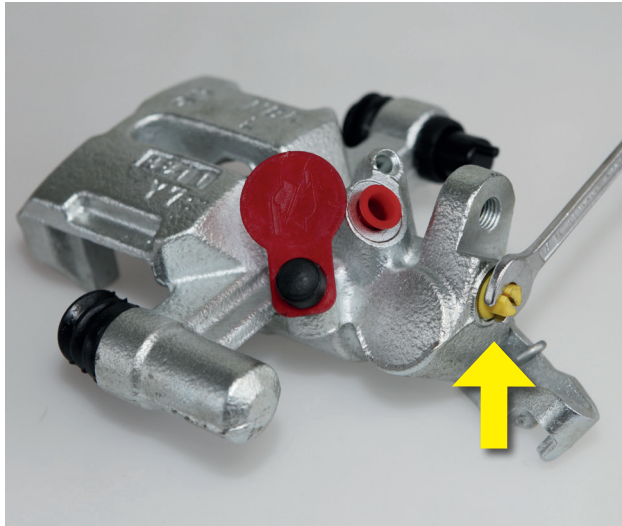


*Note: The images in this service information are examples and are for illustration purposes only.*

### Prerequisites

- Brake caliper installed and bled
- Handbrake cables loosened, so that the handbrake lever on the brake caliper is touching the stop pin

### Procedure

1. Remove the locking screw of the adjuster.
2. Use a 4 mm Allen key to turn the adjuster screw clockwise, until the brake pads touch the disc.

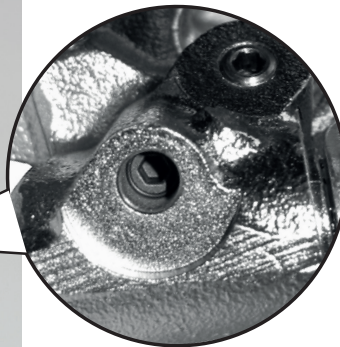

3. Now turn the screw slightly counter-clockwise, until the brake turns freely.
4. Turn the locking screw back in and tighten it.  
*Note: Observe the vehicle manufacturer's specifications regarding the specified torque.*
5. Adjust the handbrake cables according to the vehicle manufacturer's specifications.
6. On a brake test stand, check that both handbrake and foot brake function correctly.
7. Perform a test drive.

