



CLUTCHTECH



TSB-249

Holden Barina & Combo Concentric Slave Cylinder Fitment

CSCOP007

This vehicle is fitted with an O-ring behind the concentric slave cylinder. It is important to ensure the O-ring is seated before installation of the concentric slave cylinder. Failure to do so will cause the slave cylinder to leak when operating the clutch pedal.

Note: Do not remove the red transport safety tag until the concentric slave cylinder is mounted to the gearbox.

Once the old slave cylinder is removed, using a small screw driver or pick, remove the old O-ring. Clean the mounting surface before installing the new O-ring.




Carefully install the new concentric slave cylinder and reinstall the 3 mounting bolts.



You can now remove the red transport safety tag.



youtube.com/watch?v=jSLPZ4CdEZs

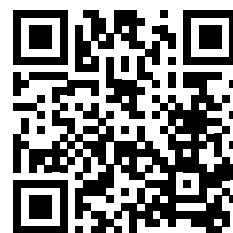

Scan with a QR app on your smart phone

LEADING BRANDS

CLUTCHPRO CLUTCHPRO



australianclutch.com.au

1800 CLUTCH (258824)