


MONROE

Technical Notes


TECHNICAL NOTES FROM THE LEADERS IN RIDE PERFORMANCE

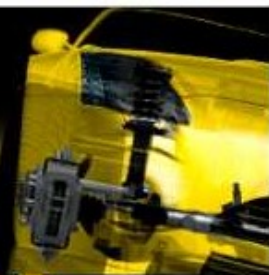

Monroe Technical Note

137

Mercedes Benz Sprinter and Volkswagen LT Series vehicles have two different front strut lengths. Refer to the table to select either V4503 or V4507.

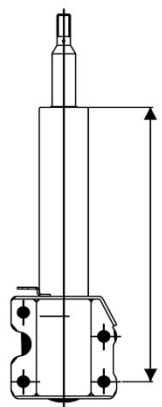

X=319,5 : V4503

OE

901 320 02 30	901 320 18 30	903 320 02 30
901 320 03 30	901 320 20 30	903 320 03 30
901 320 08 30	901 320 21 30	903 320 05 30
901 320 13 30	901 320 22 30	2D0 413 029
901 320 14 30	901 320 29 30	2D0 413 029 B
901 320 15 30	903 320 01 30	

X=345,5 : V4507

OE

904 320 07 30	904 320 16 30	904 320 25 30
904 320 08 30	904 320 18 30	904 320 26 30
904 320 13 30	904 320 19 30	2D0 413 029 A
904 320 14 30	904 320 23 30	



Monroe Technical Helpline
1800 088 205

www.monroe.com.au