


## Monroe Technical Note 233 MONROE

FITTING INSTRUCTIONS - ML4833

## 80 SERIES TOYOTA LANDCRUISER

Remove the bolt securing the original mounting bracket to vehicle body.

The extended (gold passivated) ball stud on the rod end of ML4833 mounts directly to this mounting point.

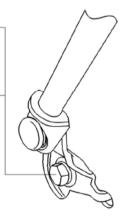

## 100 SERIES TOYOTA LANDCRUISER

Install ML4833 as follows:

- Rod end with extended (gold passivated) ball stud - attached to vehicle body.
- Body end with standard (black) ball stud - attach to bonnet.