


MONROE

Technical Notes


TECHNICAL NOTES FROM THE LEADERS IN RIDE PERFORMANCE

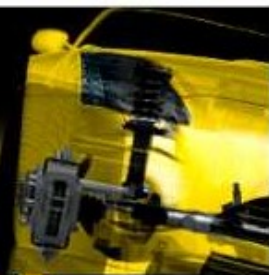

Monroe Technical Note

252

Select the correct shock absorber from the table below

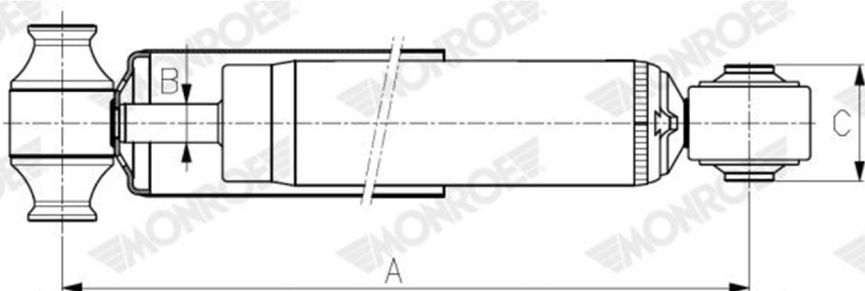

	A	B	C
V2160	660	15	48
V2161	510	15	40
V2162	590	15	40

[mm]



Monroe Technical Helpline
1800 088 205

www.monroe.com.au