


Anziehvorschrift Zylinderkopf
Tightening Instructions for Cylinder Head
Instructions de serrage pour culasse
Prescripciones de apriete para culatas


966.200
 passend für / suitable for
 adaptable à / adaptable a
Land Rover / Jaguar



Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
 Tête de vis / Cabeza de tornillo

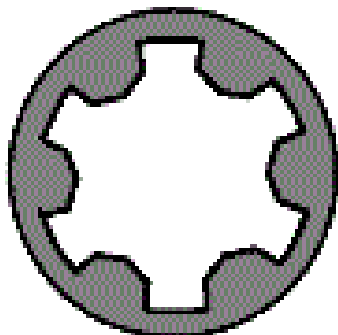

966.170
 M 11x1,5x178

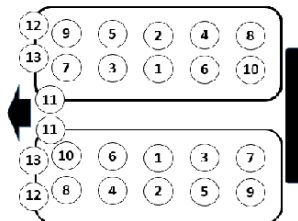

Anziehen/ Tightening/ Serrage/ Apriete	Pos. 1-10 20 Nm 35 Nm ➤ 90° ➤ 120°	Pos. 11 25 Nm Pos. 12-13 12 Nm
---	--	---

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Mot: AJ133 / 508PN / 508PS