


Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724

Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724


Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724

Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme DIN/ISO 1724
prise 12-N

Instrucciones de montaje de juego de
cables eléctricos para gancho de
remolque con base 12-N según
norma DIN/ISO 1724

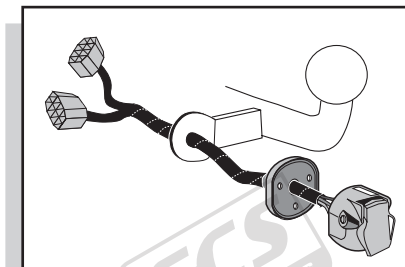

CITROËN XSARA PICASSO 1999-

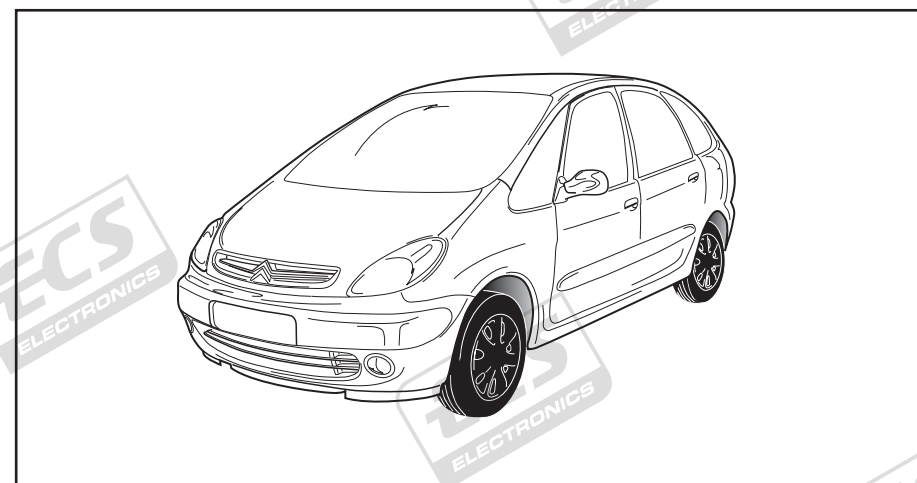







Bestel Nr.: CT-003-BB





* Teilliste






* Liste de pieces










* Part list







* Onderdelenlijst

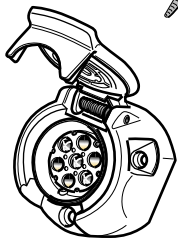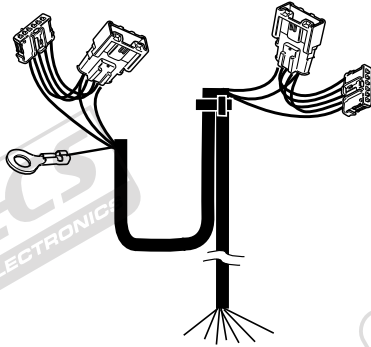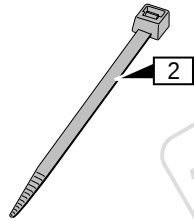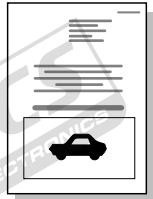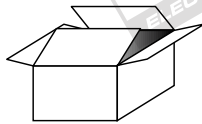

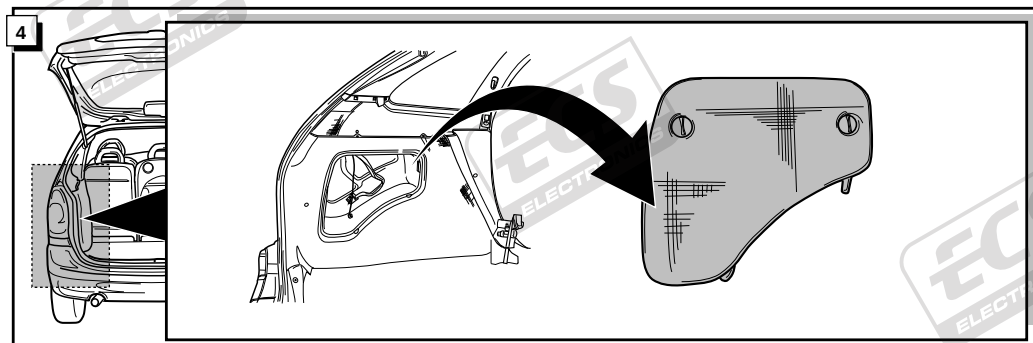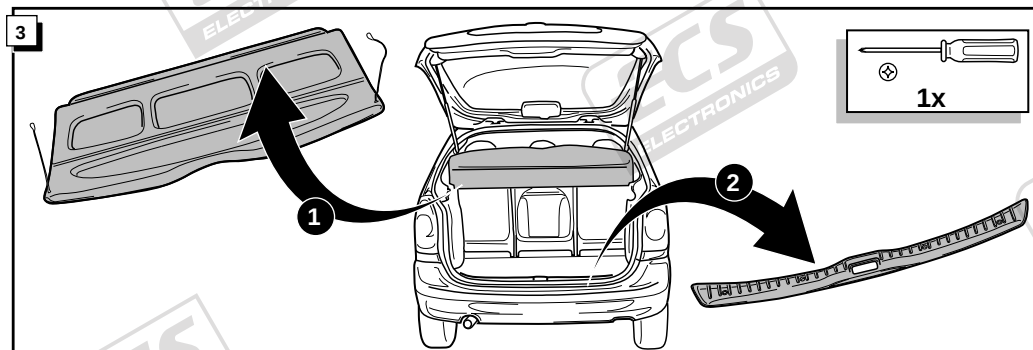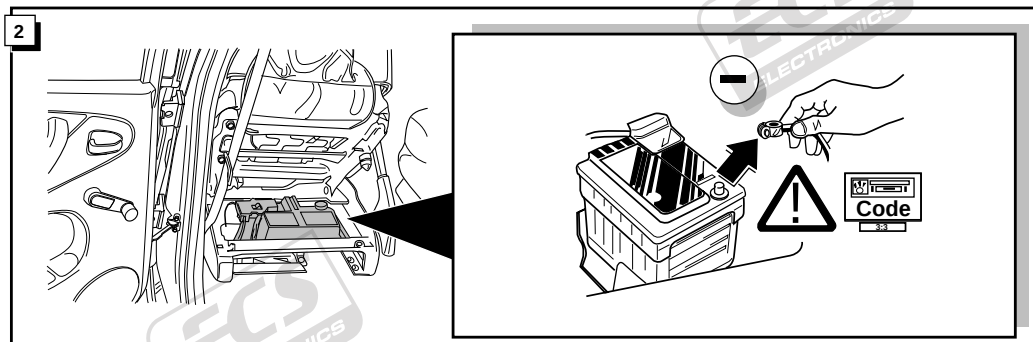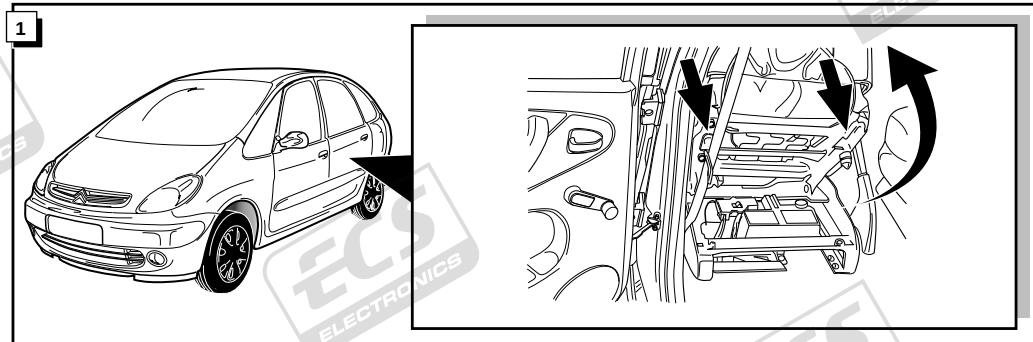

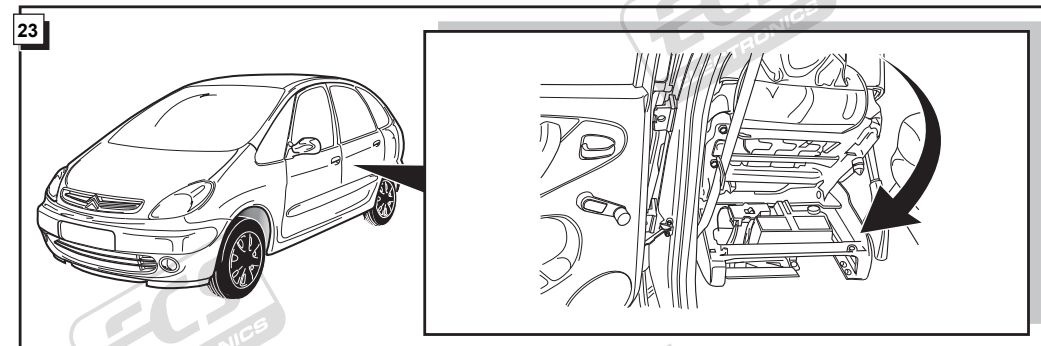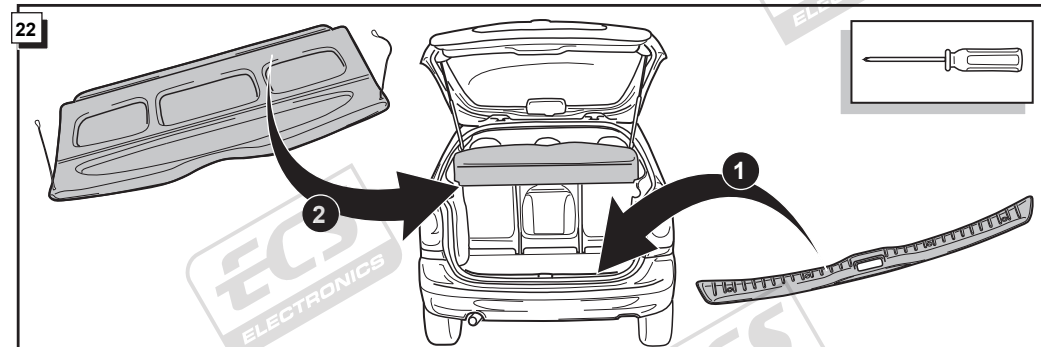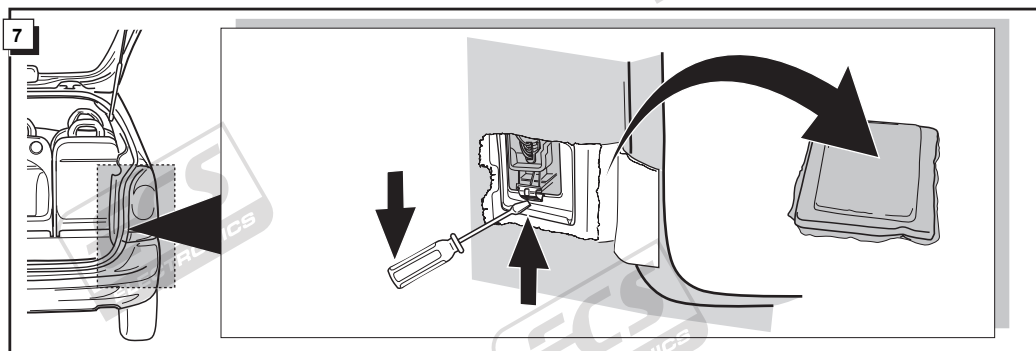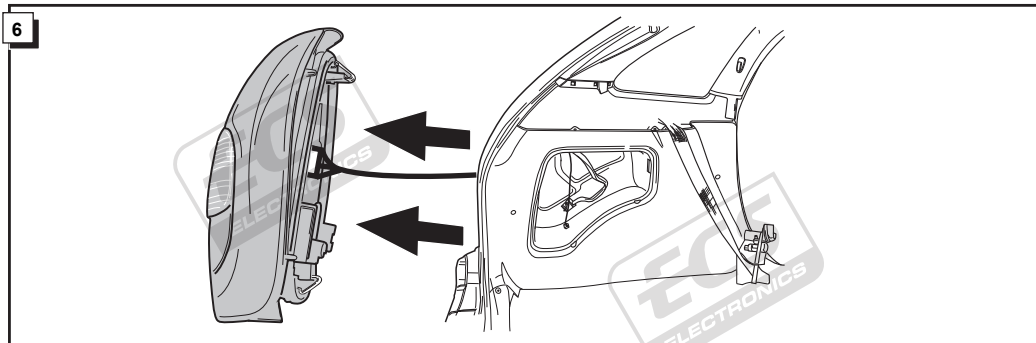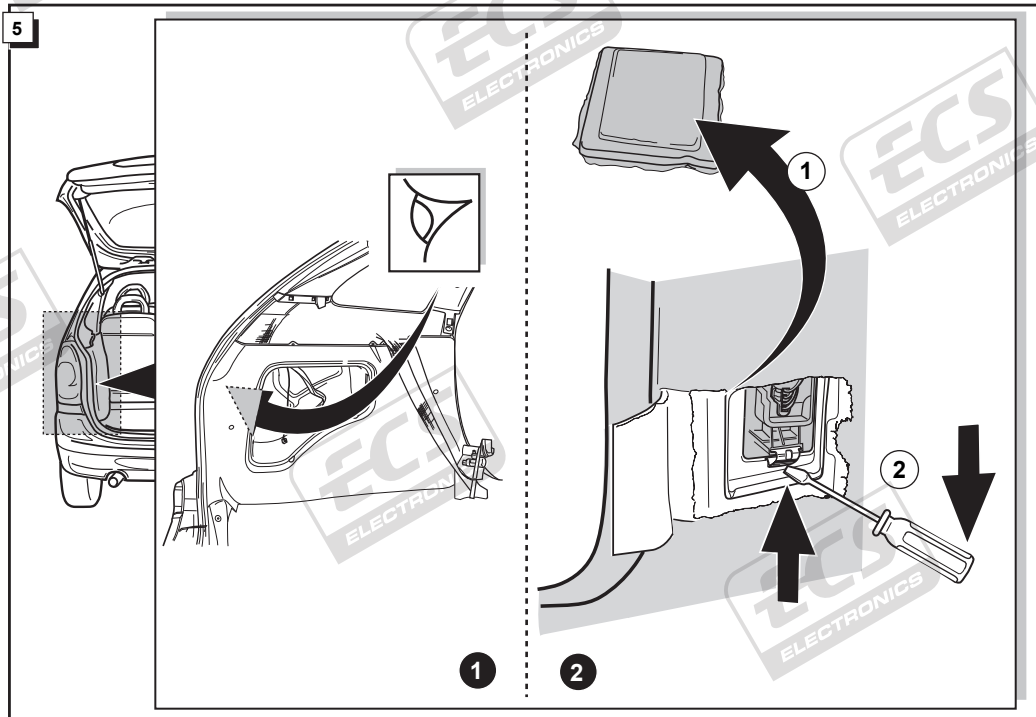

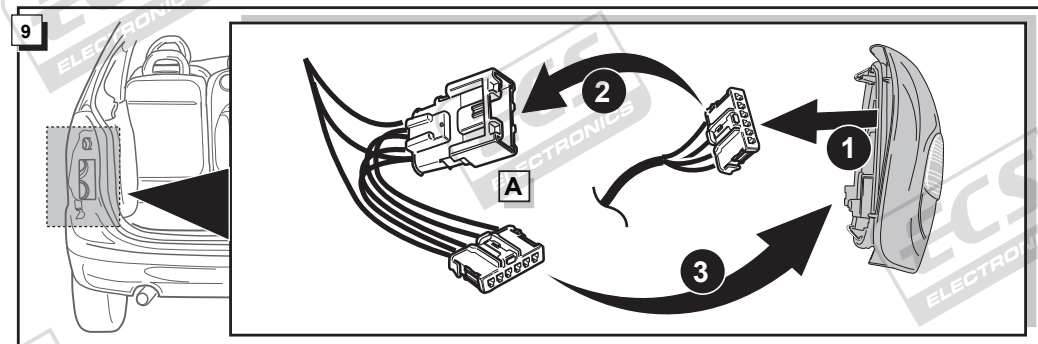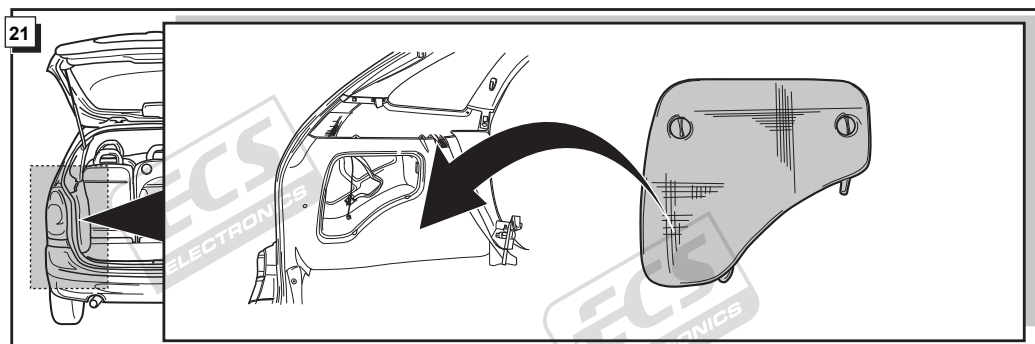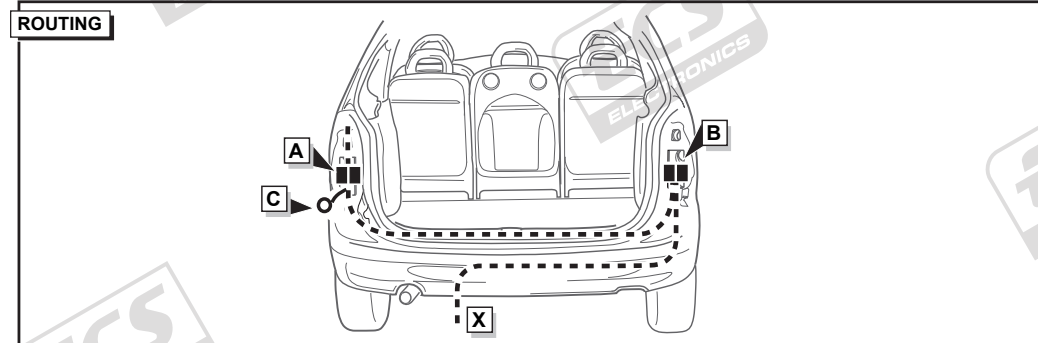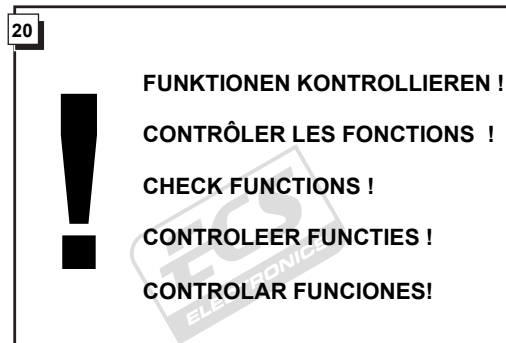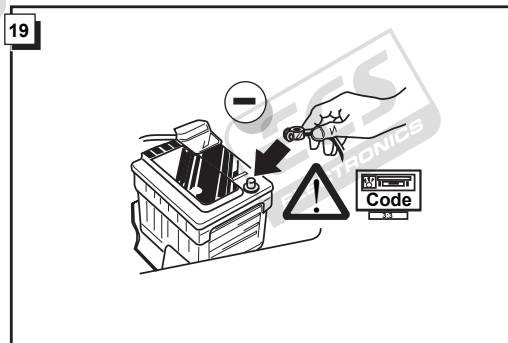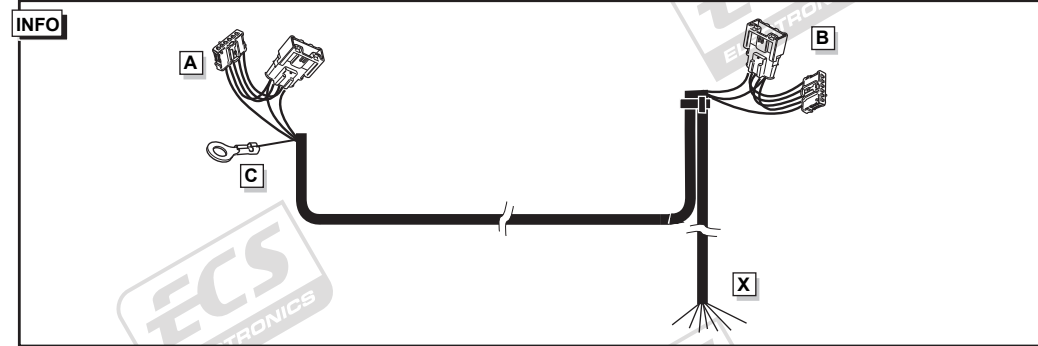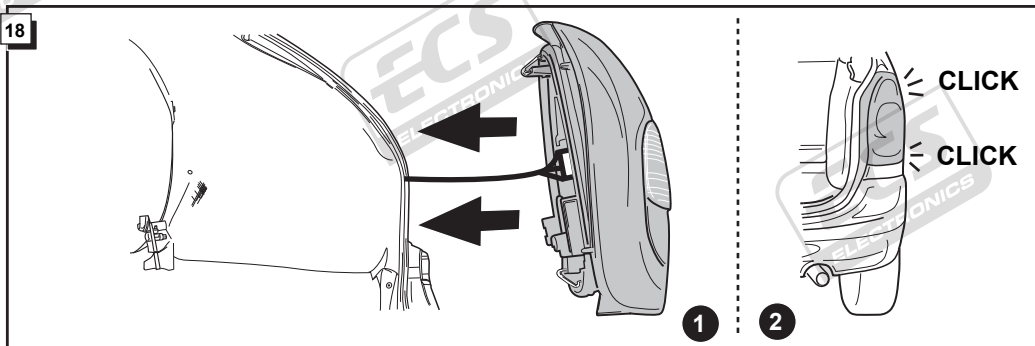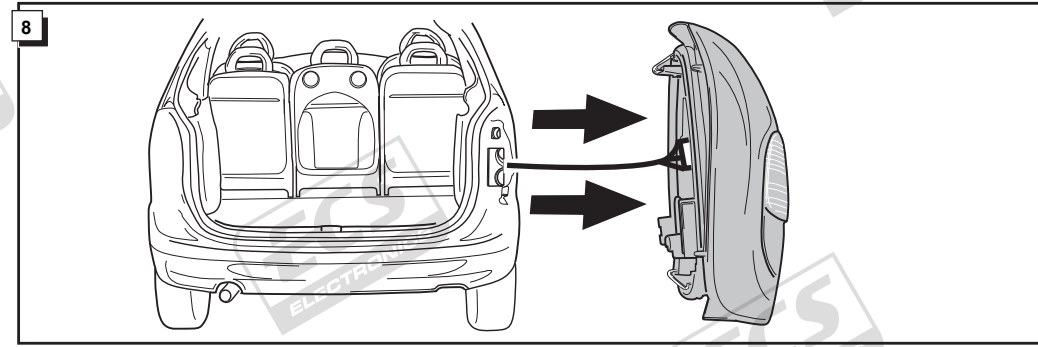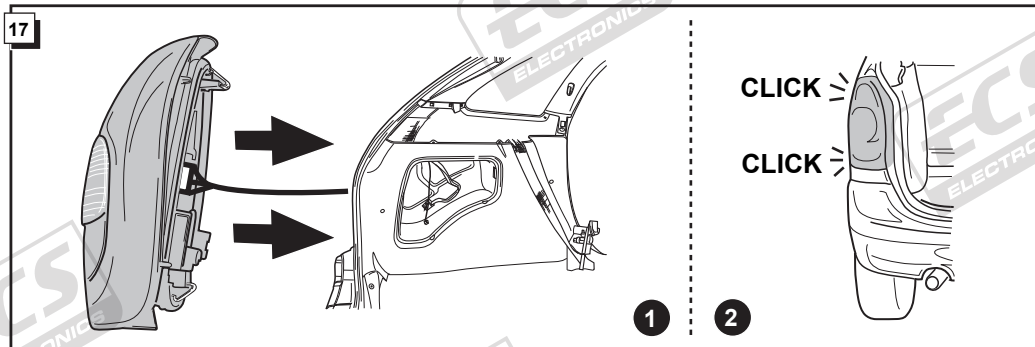

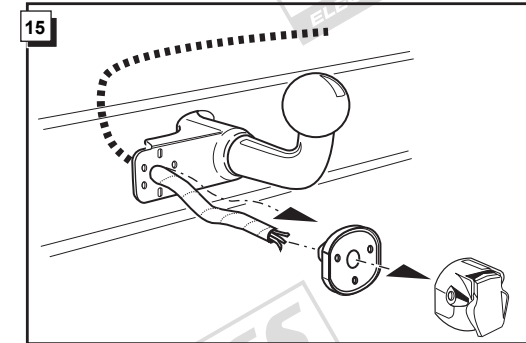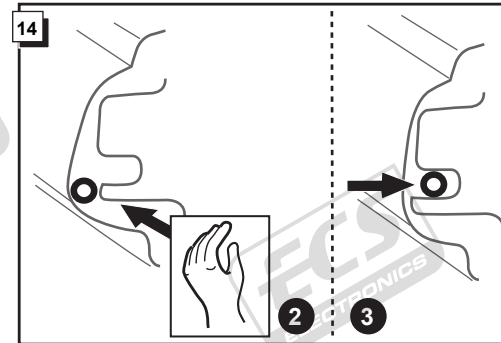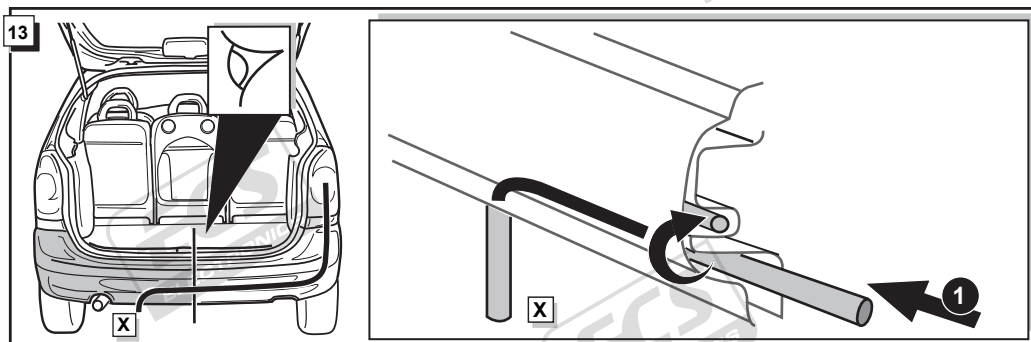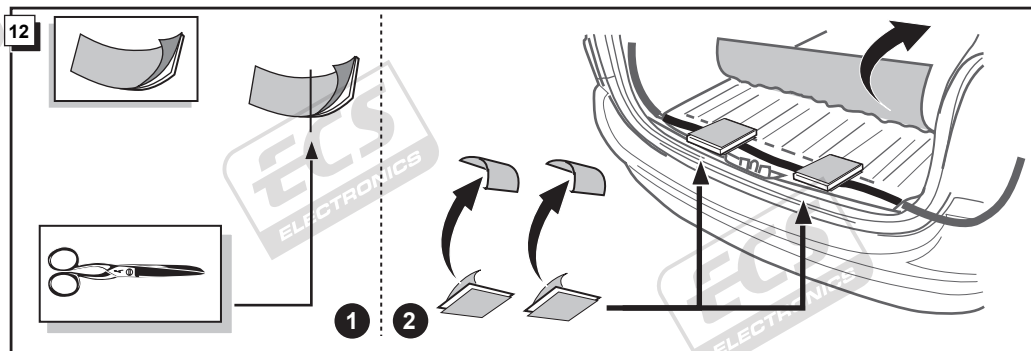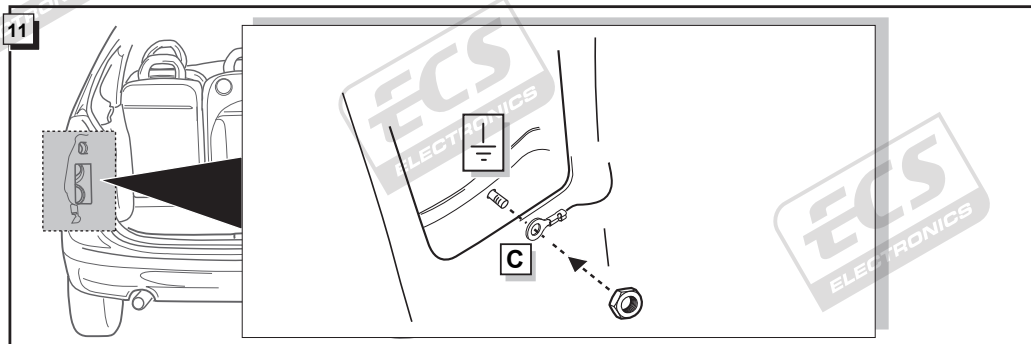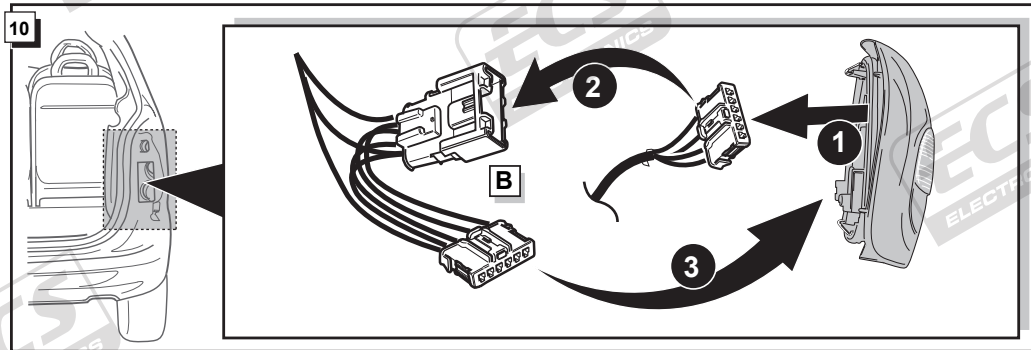

DIN/ISO 1724		Anschluß Steckdose / Connection de la prise / Socket connection Contactdoos aansluiting / Conexión de la base				
		D	F	GB	NL	ES
↶	1/L	gelb	jaune	yellow	geel	amarillo
↷	2	blau	bleu	blue	blauw	azul
⏏ 1-8	3/31	weiß	blanc	white	wit	blanco
↶	4/R	grün	vert	green	groen	verde
☀	5/58-R	braun	marron	brown	bruin	marrón
STOP	6/54	rot	rouge	red	rood	rojo
☀	7/58-L	schwarz	noir	black	zwart	negro
⏏ → ⏏	8/58-b	grau	gris	grey	grijs	gris

