



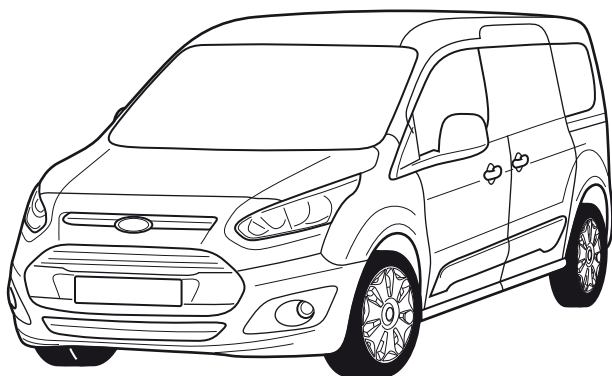

Ford Transit Connect 01/2014 >>
Ford Tourneo Connect 01/2014 >>



Partnr.: FR-066-D1U

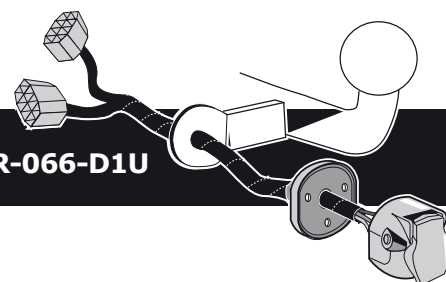







- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
ukts@ecs-electronics.com / 07440 202 052.




Part list

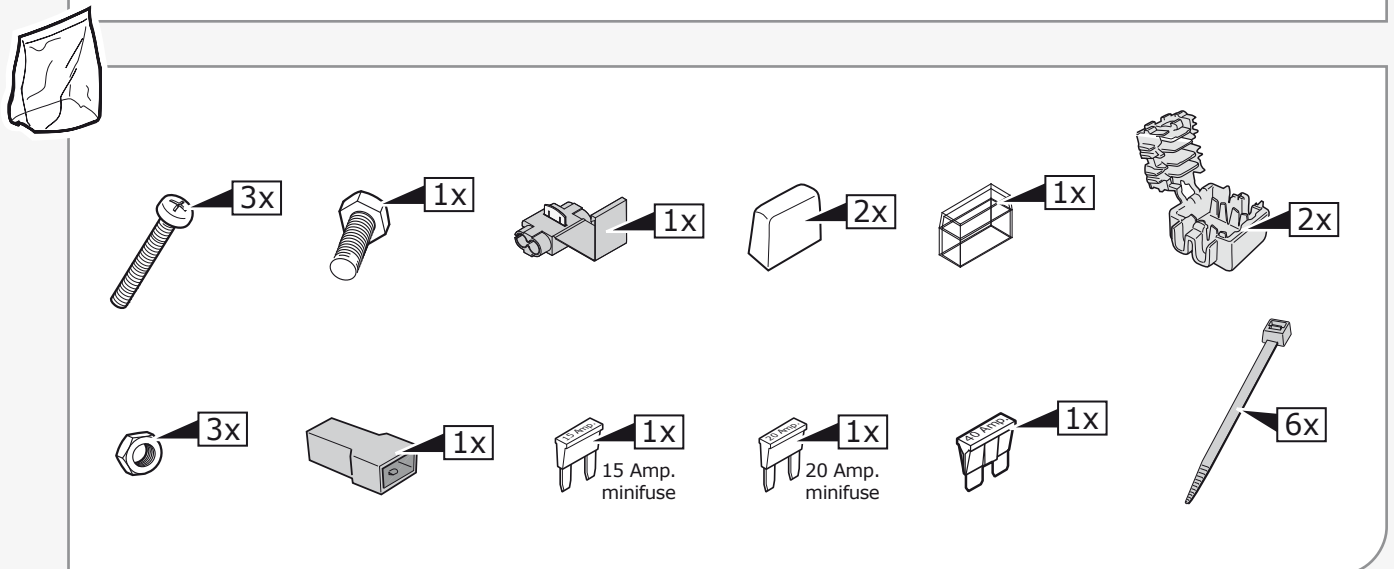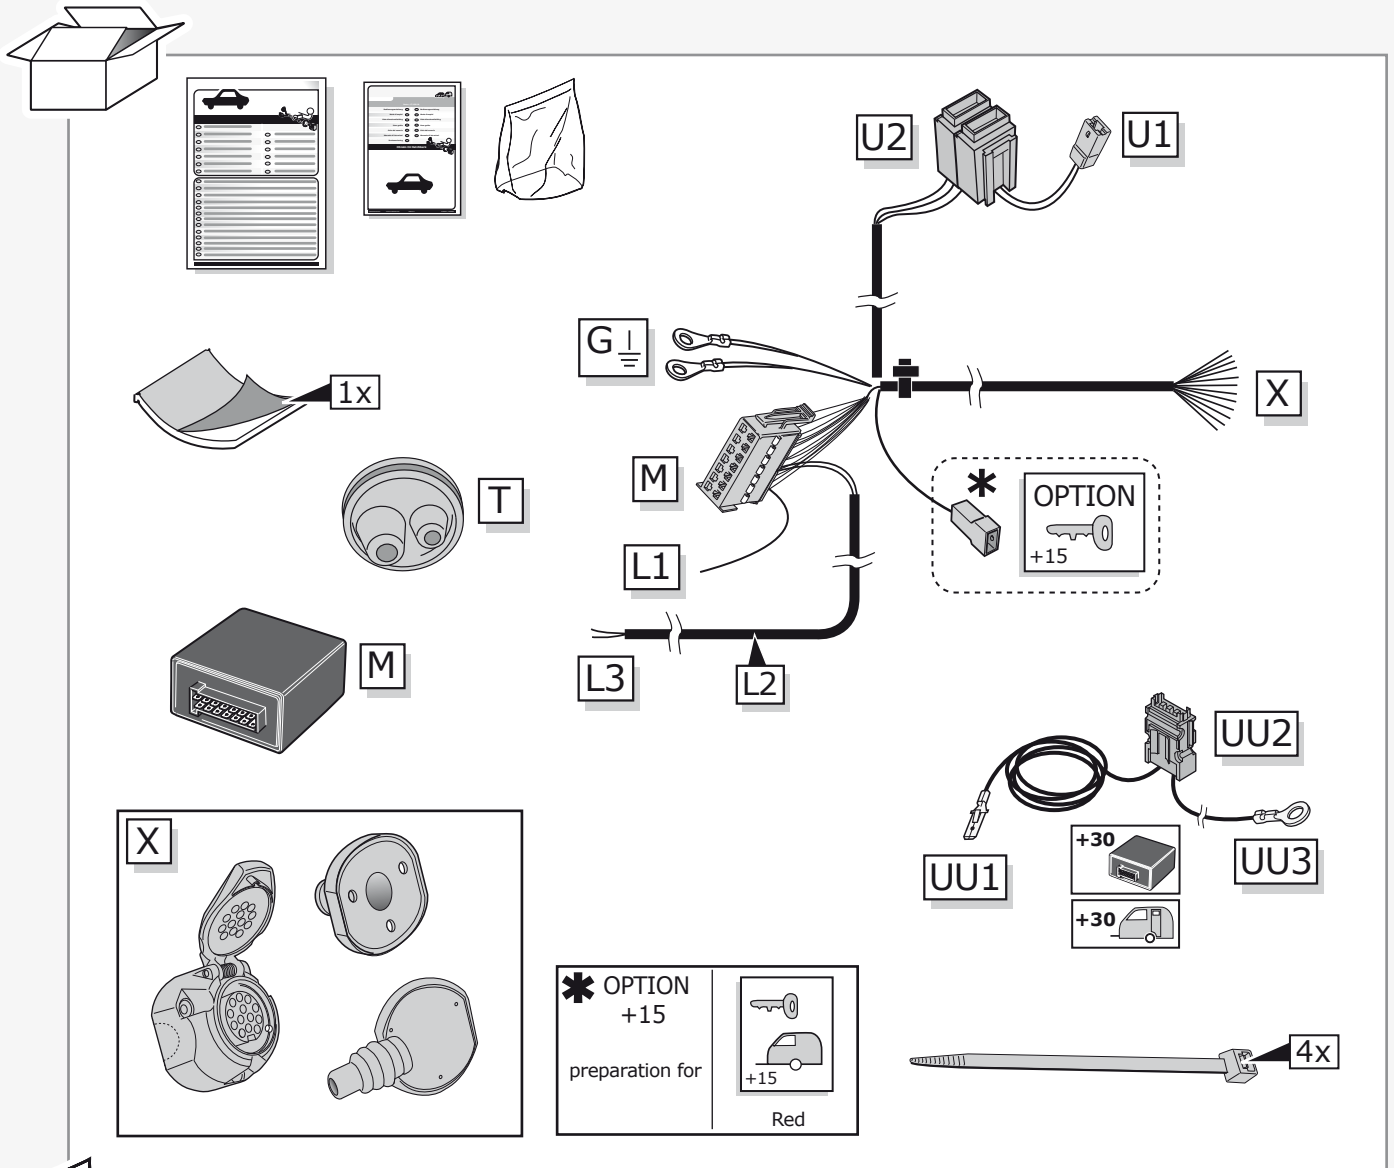


TOOLS

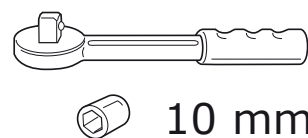




ROUTING

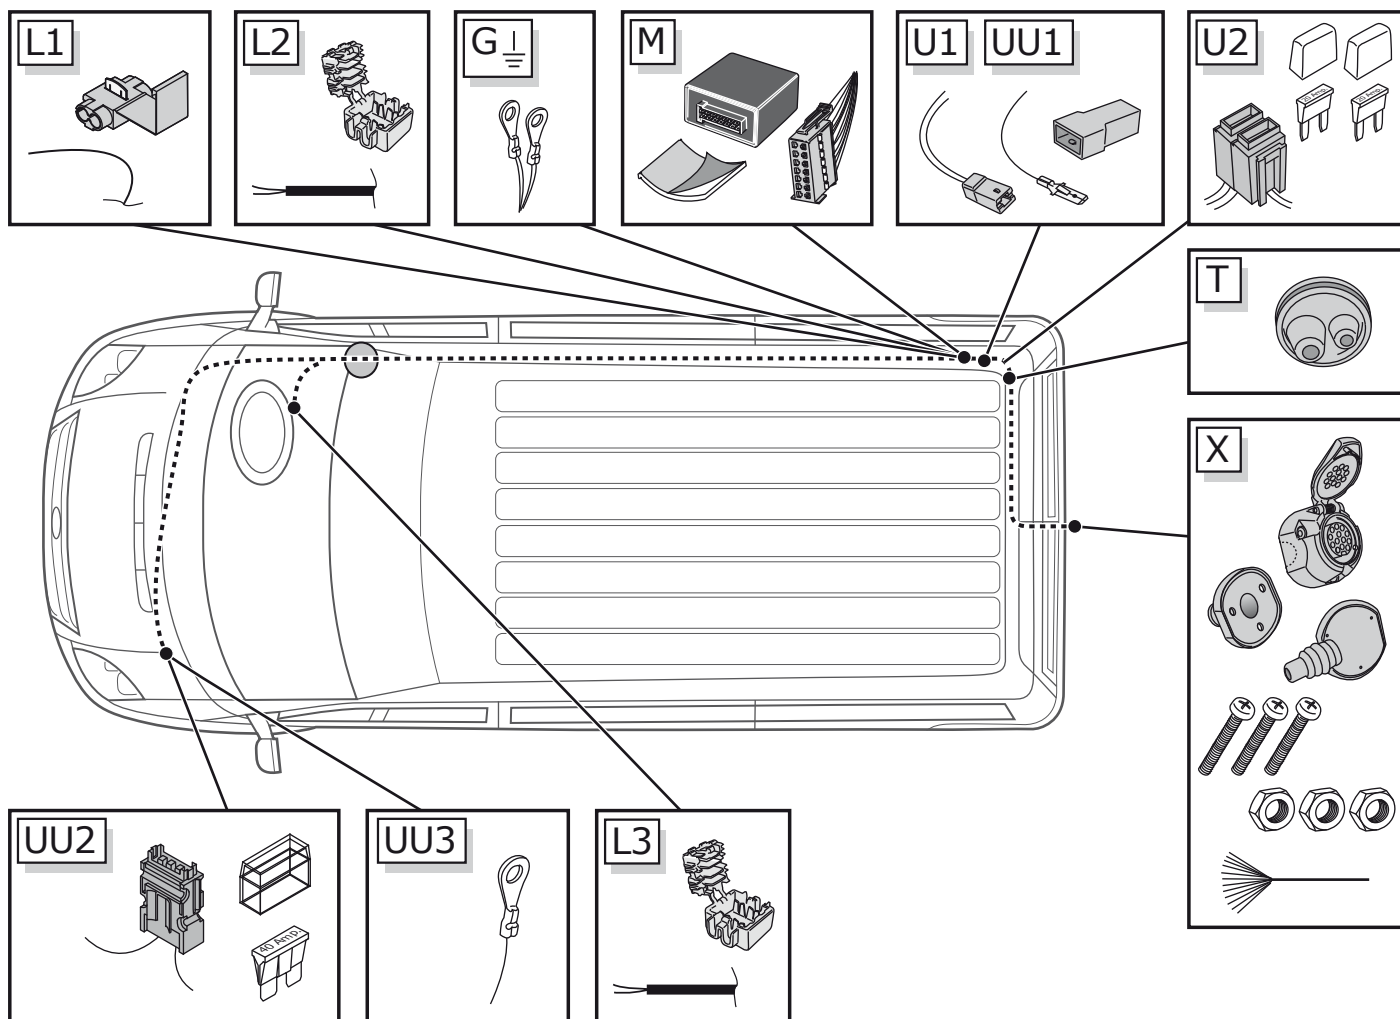





1

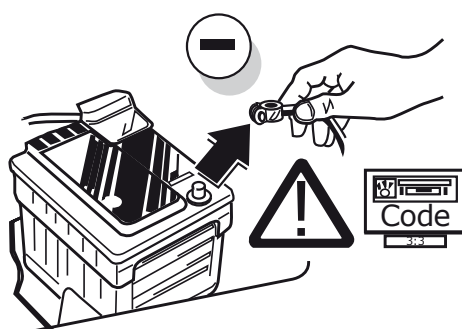

2

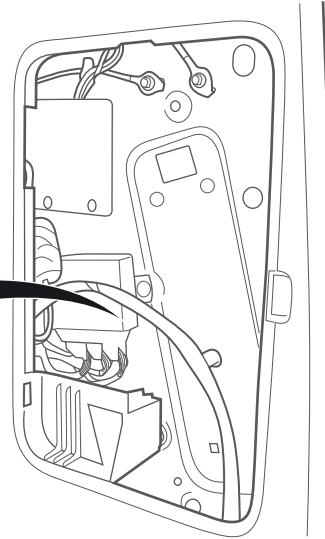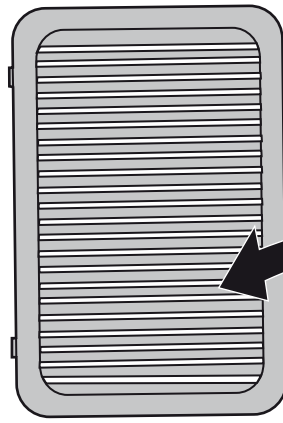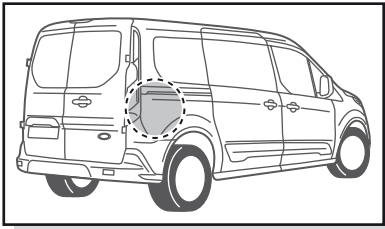


3

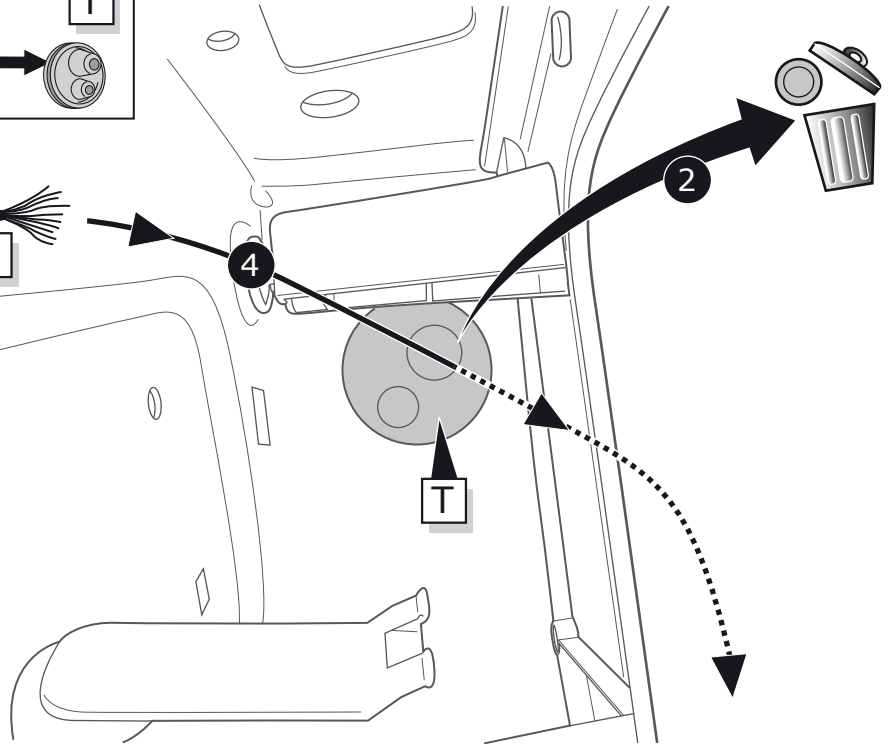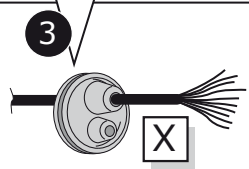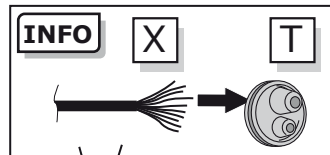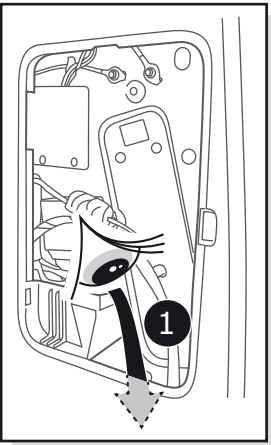


A


Option 1

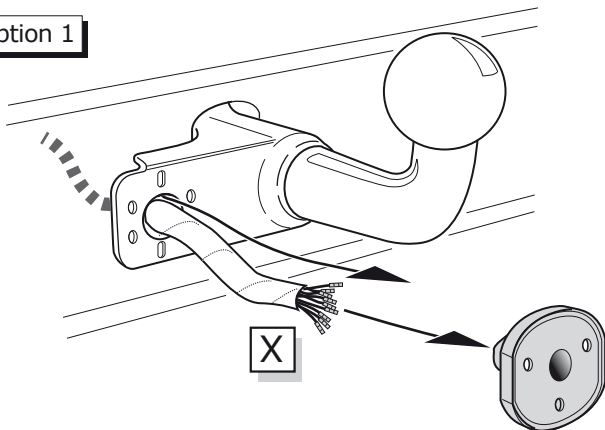

Option 2

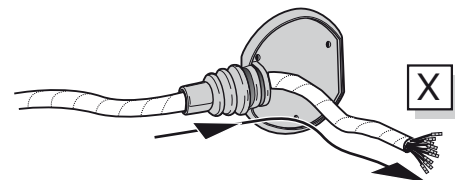

Option 3

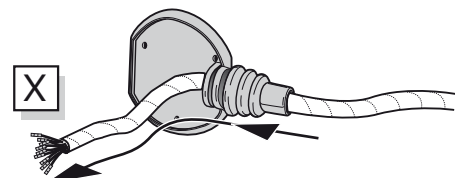


SOCKET CONNECTION



Page 13

B


Option 1

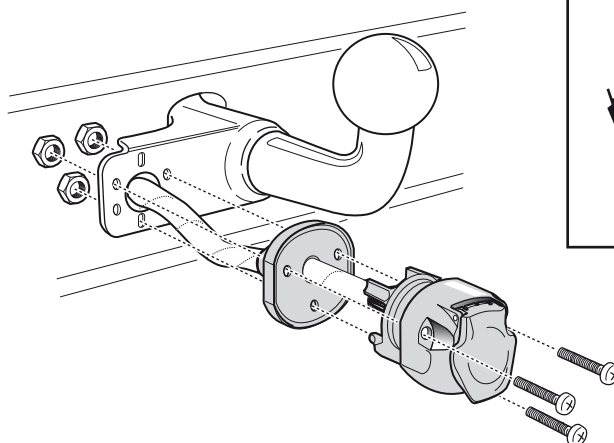


C

Option 2


1

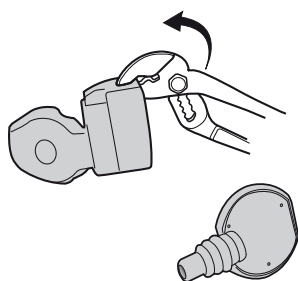


2

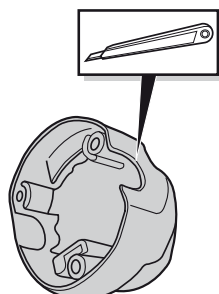

3

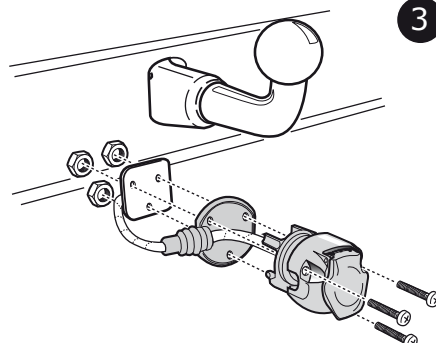


4

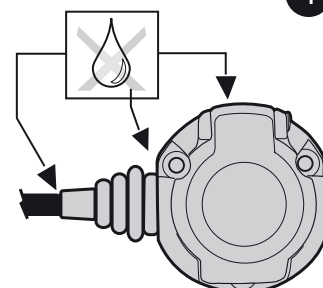


D

Option 3


1

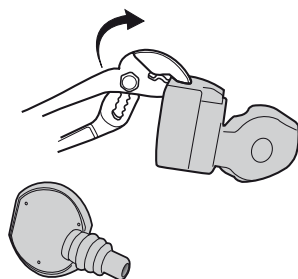


2

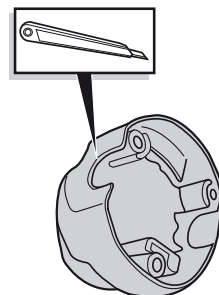

3

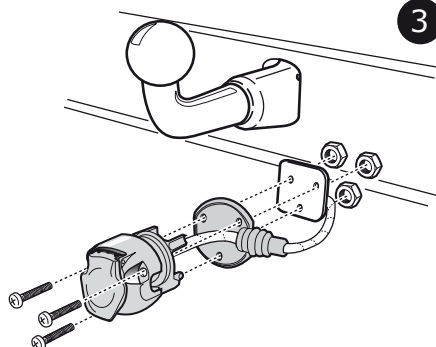


4


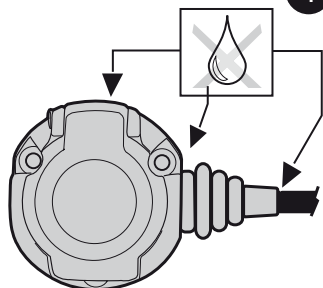


4


1

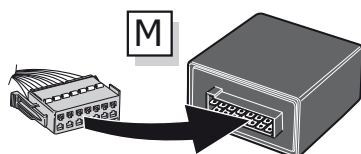



2

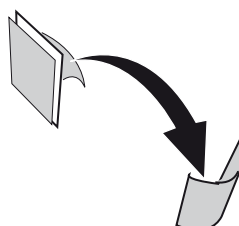




3

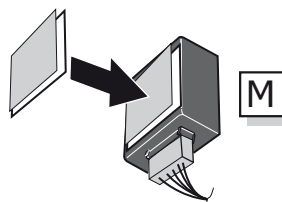

4

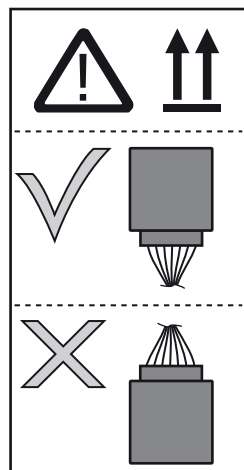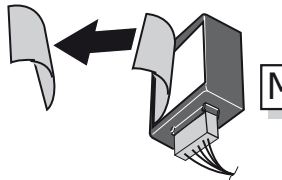




5

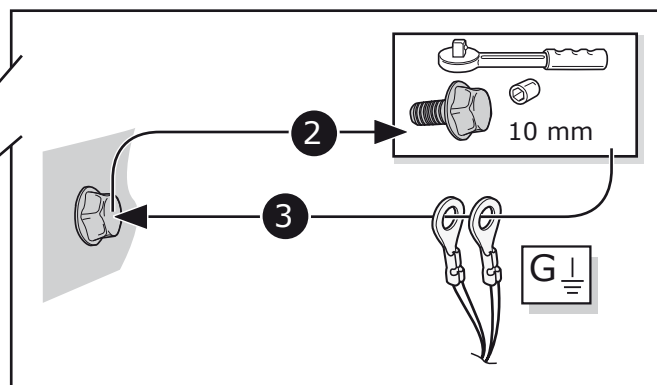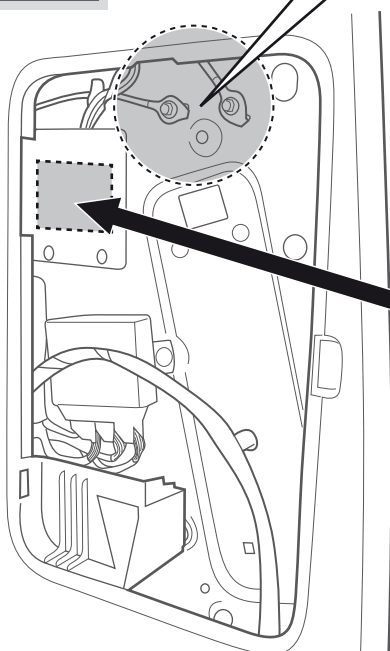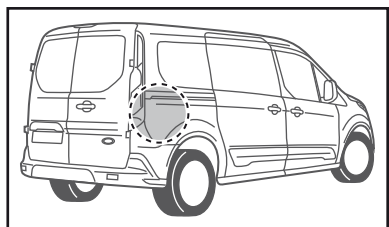


1

M

6

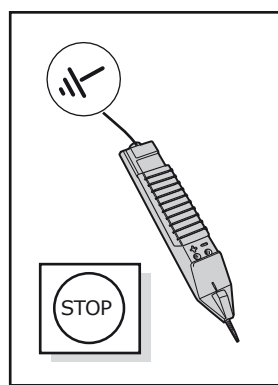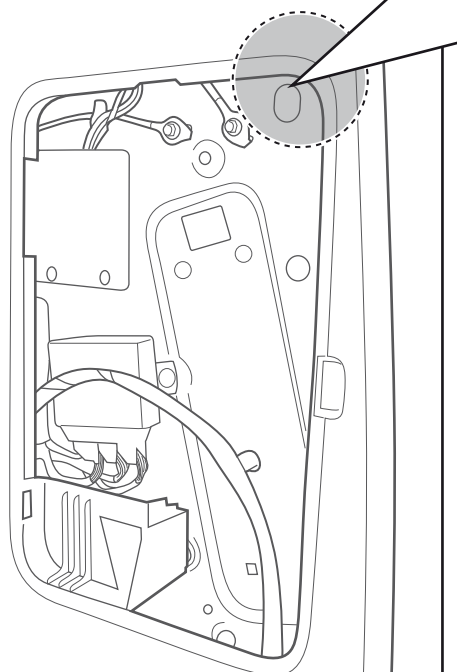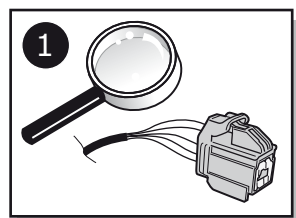

2


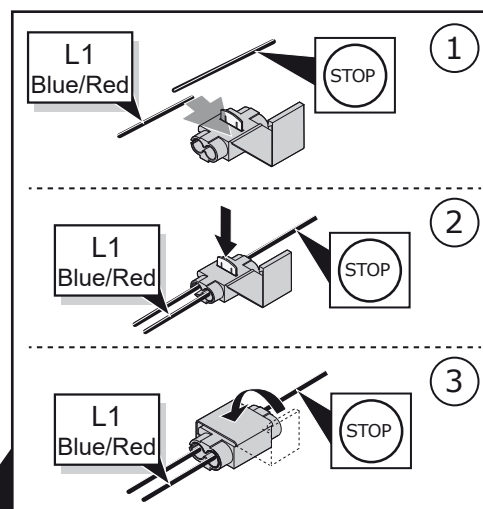


1

2


3

3



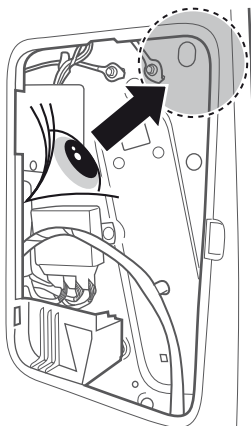


5pole Green

or




4pole Black

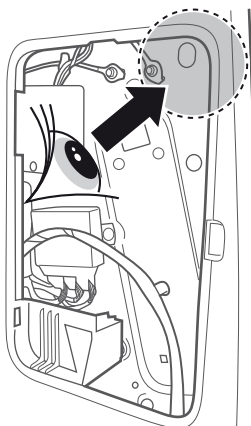


5pole Green

or






4pole Black

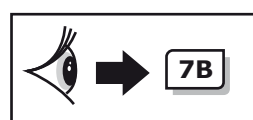


7A


OPTION 1

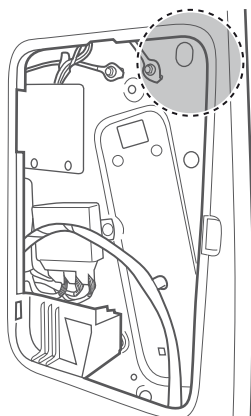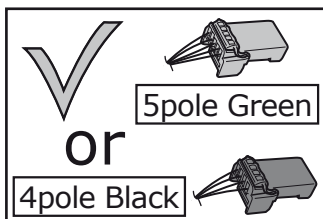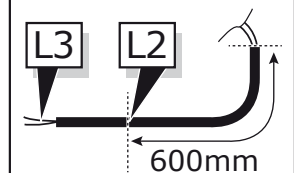

1

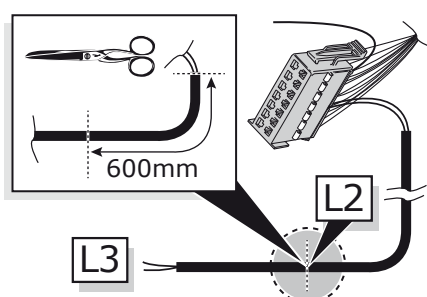


2

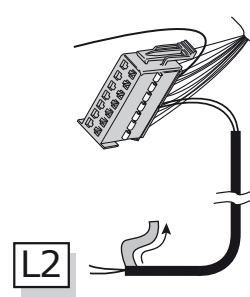



3

4pole Black




or

5pole Green



4

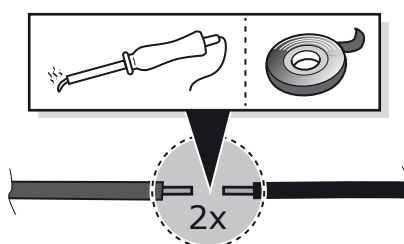

L2	Brown	→	Grey/Orange
L2	Green	→	Purple/Orange


OPTION 2

L3






X

or

4pole Black




5pole Green

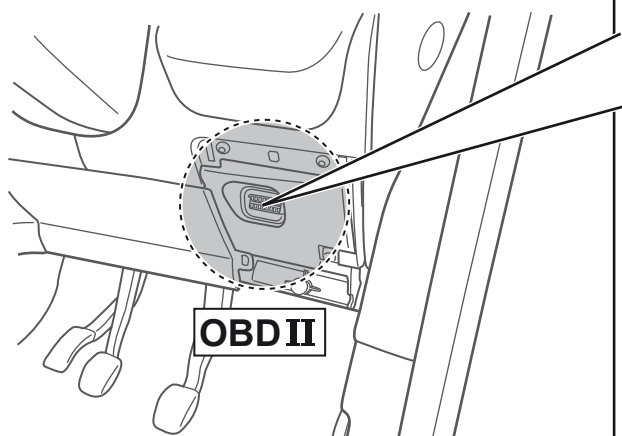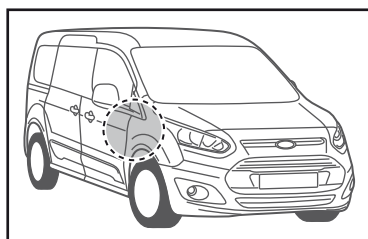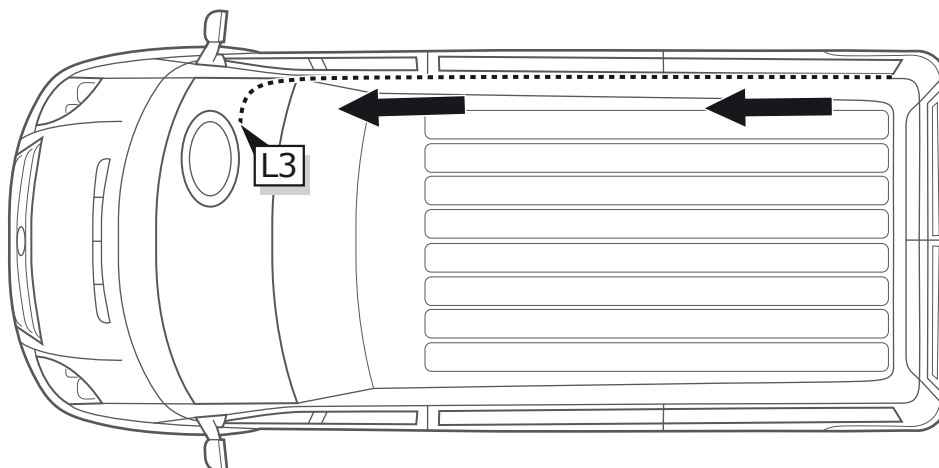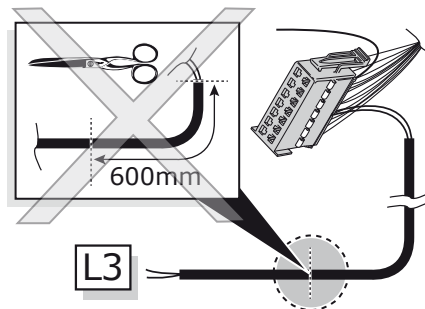








OBD II

CAN H

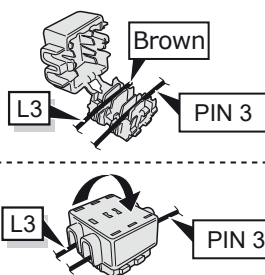







CAN L

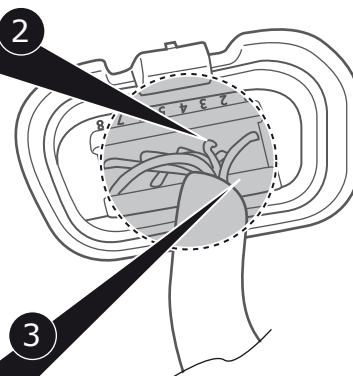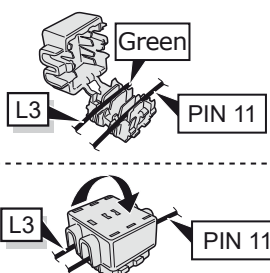

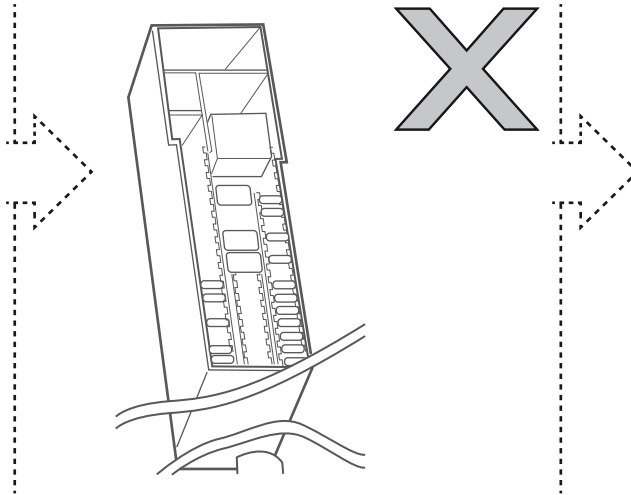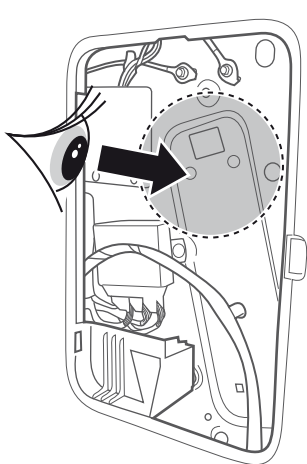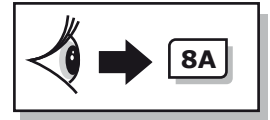
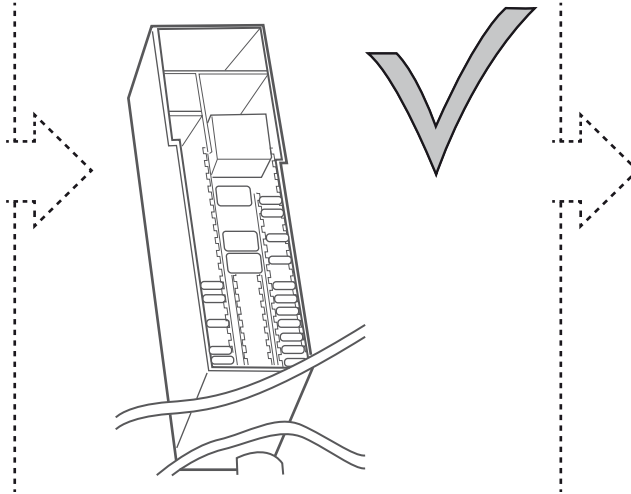
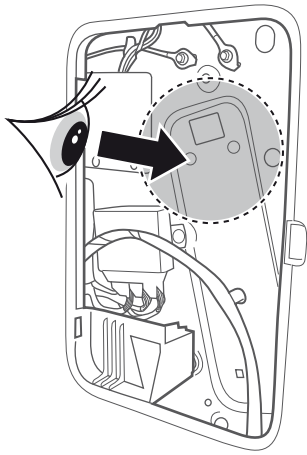


8A


OPTION 1

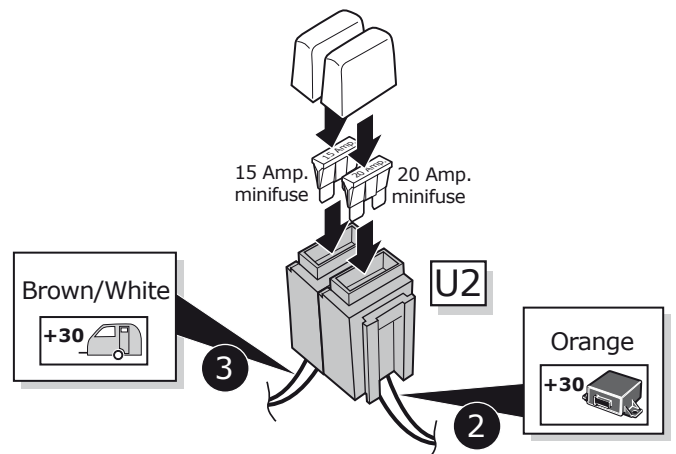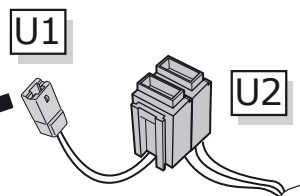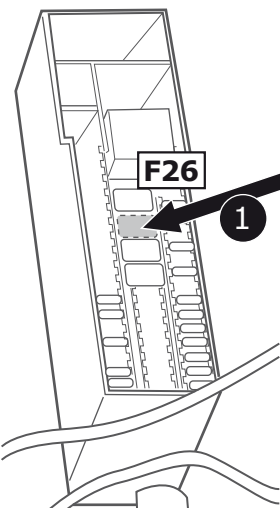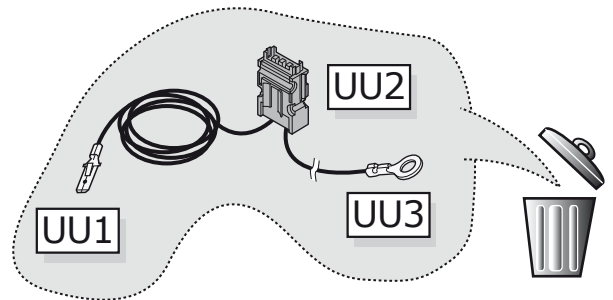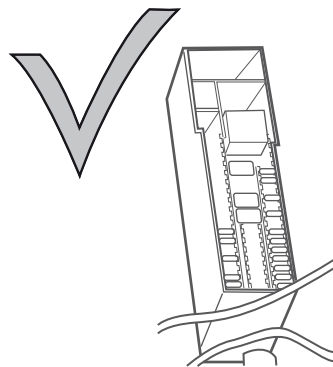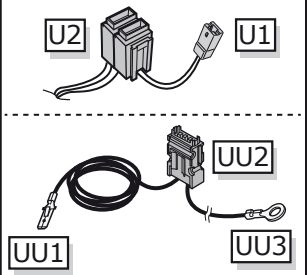

OPTION 2

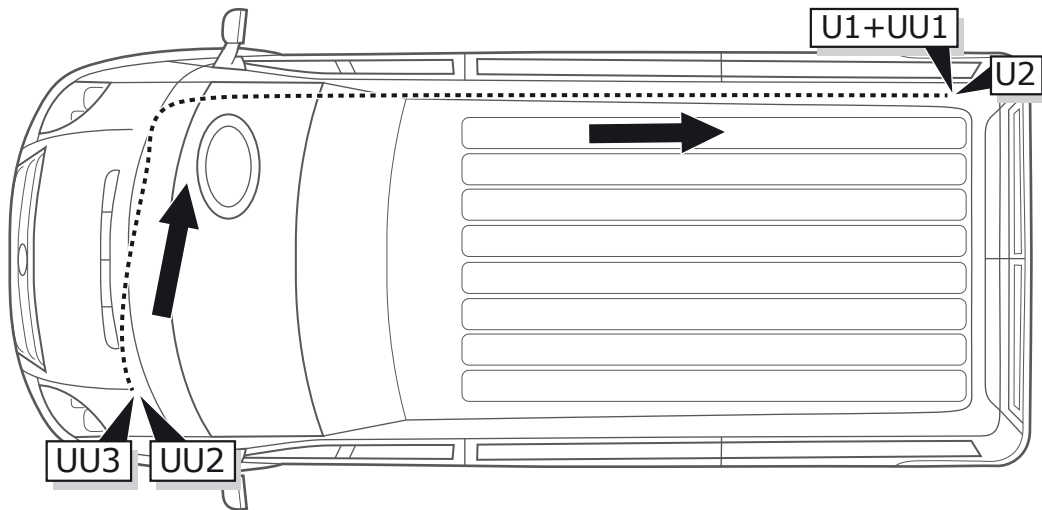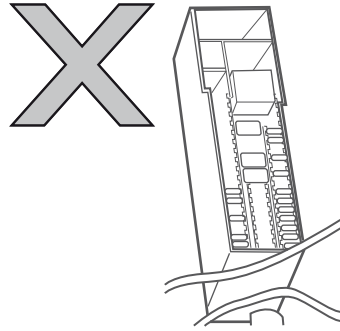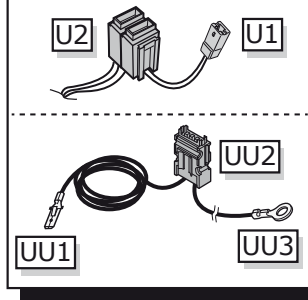


1




2




3

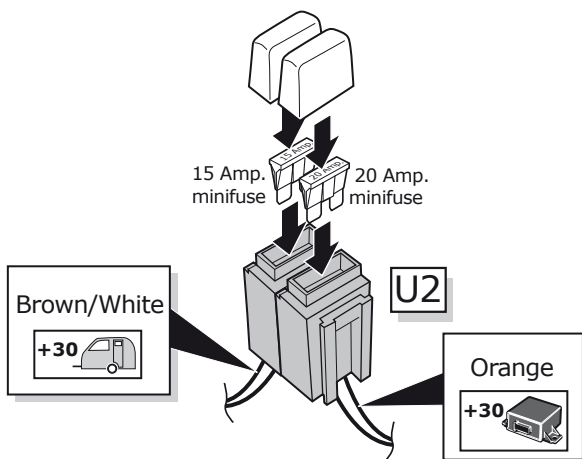


4

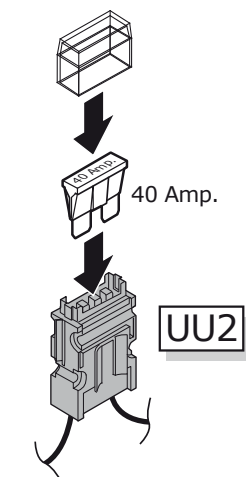


5

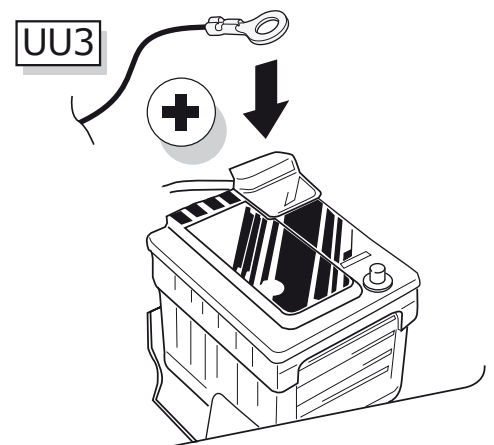


6

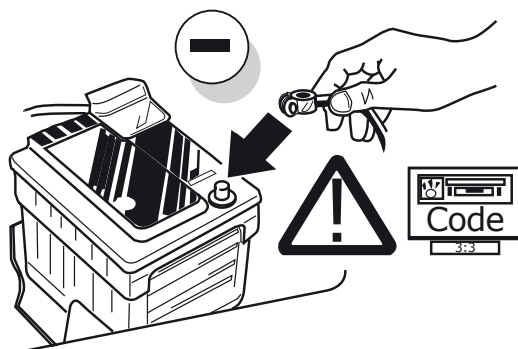


Option 1

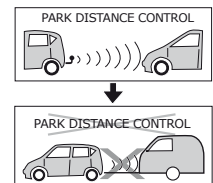Manual PDC





P
OFF

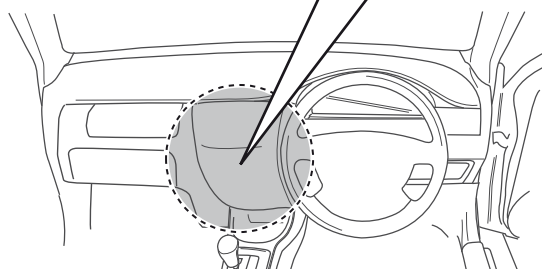

Option 2

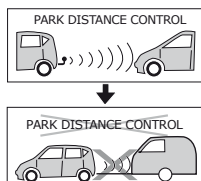Auto PDC


C2

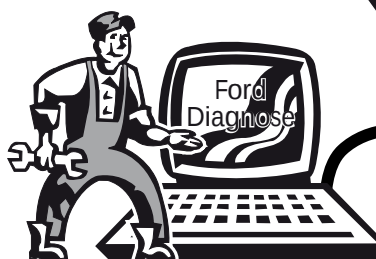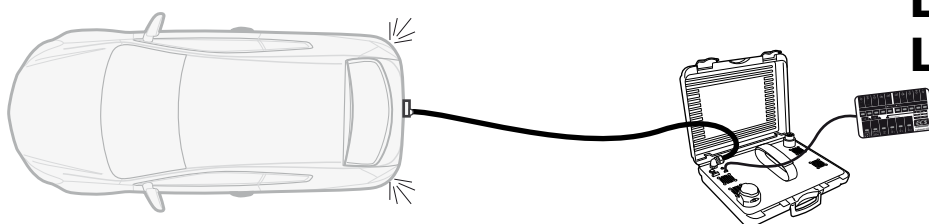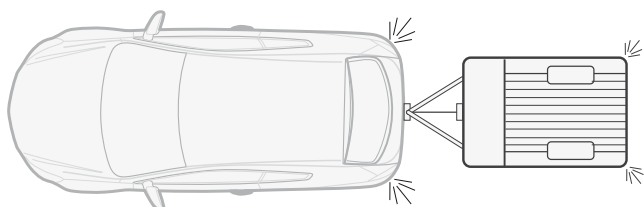
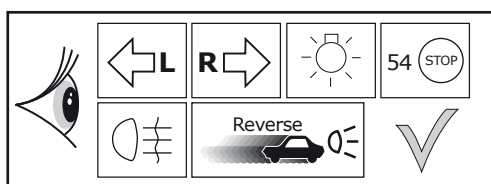
**Functional test**

LIGHTMATE®

ECS part no.
LIGHTMATEII
LIGHTMATEIII

REINSTALL TRIM.

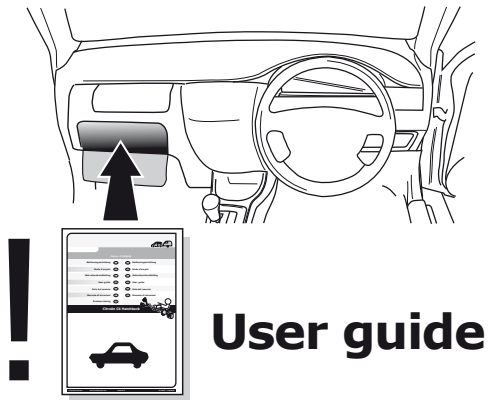

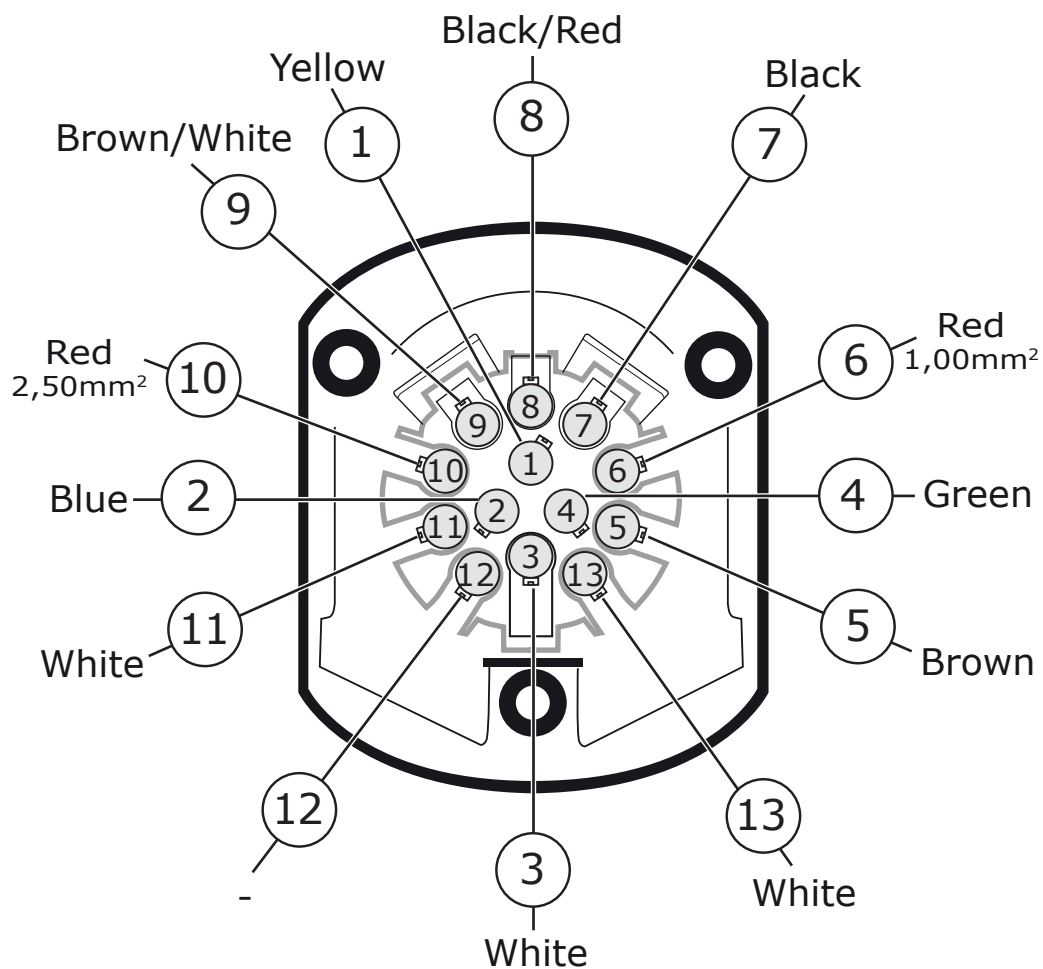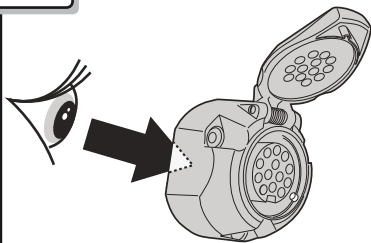

SOCKET CONNECTION

DIN/ISO 11446													
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	21W		21W	42W	3x21W	42W	21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red 1,00 mm²	Black	Black/Red	Brown/White	Red 2,50 mm²	White	-	White