



# INSTALLATION MANUAL

**MC-2972**  
**Arnott Smooth Ride Kit**  
**90-08 Harley-Davidson® Touring Series**



***ELEVATE YOUR RIDE.®***

# CONGRATULATIONS ON YOUR PURCHASE OF AN ARNOTT® MOTORCYCLE SUSPENSION SYSTEM

This system provides you with the ability to maintain your bike at a constant level regardless of load, resulting in enhanced vehicle ride, handling, and performance. We at Arnott LLC are proud to offer a high quality product with all the technical support you need. Thank you for your confidence in us and our product.

## GENERAL INFORMATION

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your motorcycle. The removal and installation of air suspension products should only be performed by a fully qualified, certified motorcycle professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the motorcycle and isolation of any stored energy to prevent personal injury or property damage.

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at [www.arnottcycles.com](http://www.arnottcycles.com) and [www.arnottcycles.eu](http://www.arnottcycles.eu).



### WARNING:

DO NOT inflate the air suspension system until it is installed. Inflation of the air suspension system before both ends are supported by the motorcycle's frame and/or appropriate suspension components may result in serious personal injury and/or damage to the air suspension system. The maximum recommended air spring inflation pressure is 100 psi.

- Avoid damage to air lines and electrical components.
- Removal and installation is only to be performed by fully qualified personnel.

### CAUTION:

This manual is meant to provide basic installation guidelines which can help prevent damage to the motorcycle and air suspension system. Each owner or installer is unique, therefore installation of this system can be done many different ways. The mounting locations of the compressor and inflation switch are suggestions by our engineers. If proper wiring guidelines and instructions are followed, relocation of the compressor or switch will neither affect the system operation nor void your warranty.

To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.

Refer to the Owner's Manual for the bike and instructions for the motorcycle lift for all correct lifting procedures. It is also recommended that you protect any chrome or painted surfaces that may be damaged during lifting, removal or installation process.

Adjust air shock pressure as required for desired ride quality to maximize the benefits of your system. Excess pressure will result in a firmer ride, too little pressure will allow the suspension to bottom out.

# COMPONENTS

## MC-2972 — 90-08 HARLEY-DAVIDSON TOURING SERIES — BLACK

20-10552 INFLATION KIT		
PART NO.	DESCRIPTION	QTY
21-3312	TOURING BIKE COMPRESSOR ASSY 1990-2008	1
21-9761	90 DEGREE PUSH CONNECT MANIFOLD ASSY	1
29-13435	POTTED RELAY	1
21-7267	1/4" NYLON TUBING ACCESSORY KIT	1
21-7268	4MM AIRLINE X 6FT. ACCESSORY KIT	1
21-7269	4MM VOSS AIR FITTING ACCESSORY KIT	1
21-7271	HARNESS CABLE TIES ACCESSORY KIT	1
21-7272	SPLIT LOOM- 1 FT LENGTHS ACCESSORY KIT	1
K-2632	BLACK PUSHBUTTON HANDLEBAR SWITCH	1
21-2698	UNIVERSAL FUSE HOLDER ASSEMBLY KIT	1
21-7262	MANIFOLD BRACKET W/ FASTENER ACCY KIT	1
21-7282	COMPRESSOR WIRE EXTENSION ACCESSORY KIT	1
11-MC-FLT2-SR	INSTALL MANUAL	1
21-7266	BLACK BOLT COVERS ACCESSORY KIT	1
21-8034	MOTORCYCLE BOLT KIT	1

21-13489 SHOCK KIT		
PART NO.	DESCRIPTION	QTY
21-13498	SHOCK ASSY, BLACK, SMOOTH RIDE	2

The use and installation of any Arnott Air Suspension product or kit may adversely affect or void your factory warranty. It is the responsibility of the motorcycle owner to check federal, state and local laws and ordinances before modifying or customizing his or her motorcycle. It is the exclusive and total responsibility of the motorcycle owner to determine the suitability of this product for his or her use. The user shall assume all legal obligations, personal injury risk and all liability duties and risk associated with the use of this product. Arnott Air Suspension products are designed and intended for the experienced on-road motorcyclists only and intended for closed course operation. Arnott Air Suspension products and kits are designed exclusively for OEM manufactured and equipped motorcycles with no modifications. Any installation of aftermarket or customized components may adversely affect the operation and performance of Arnott Air suspension kits and components and may void the manufacturer's warranty. These directions are accurate at time of publication. Arnott Inc. reserves the right to revise specifications without notice.

*Use a solid, level surface to position the bike on a motorcycle lift and use all recommended safety techniques. Lift the bike so the rear wheel is just slightly off the ground.*

1. Support the motorcycle under its frame. Remove the saddle bags, right side cover and seat. (Figures 1, 2, 3)



FIGURE 1



FIGURE 2



FIGURE 3



2. Remove both OE shocks. (Figure 4)



FIGURE 4

3. Remove both of the fender support bracket bolts as indicated by the arrows. Reusing the bolts, fasten the compressor to the bracket. (Figure 5, 6)

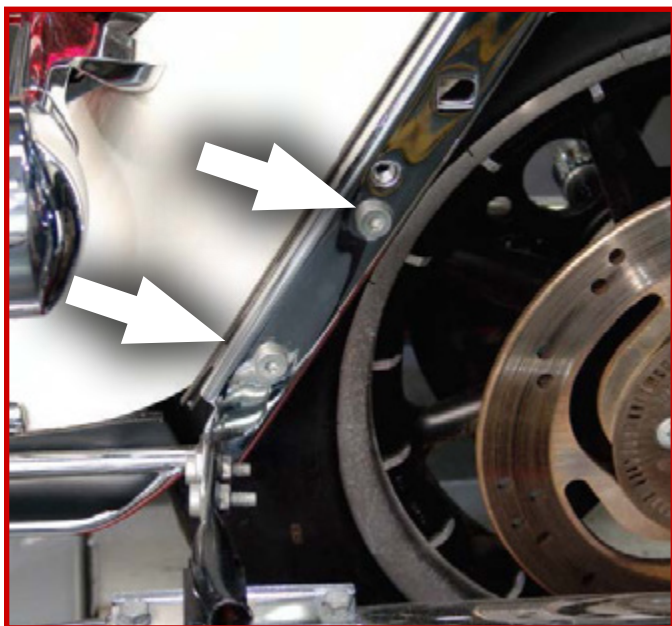


FIGURE 5

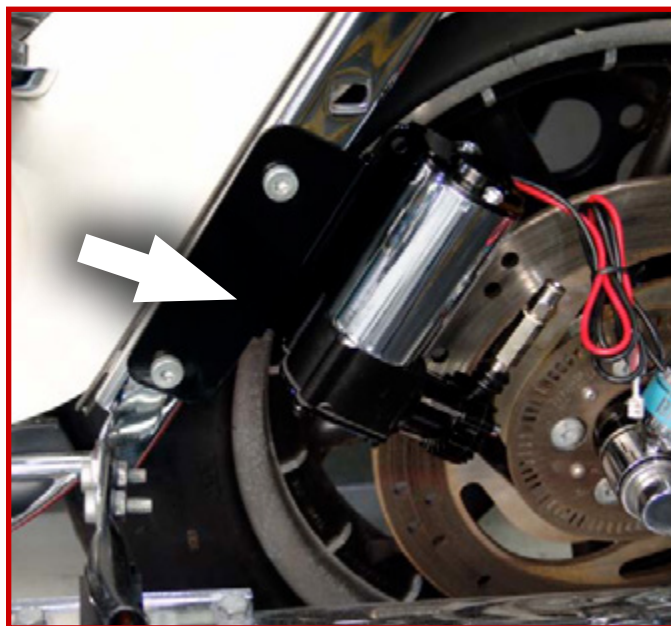
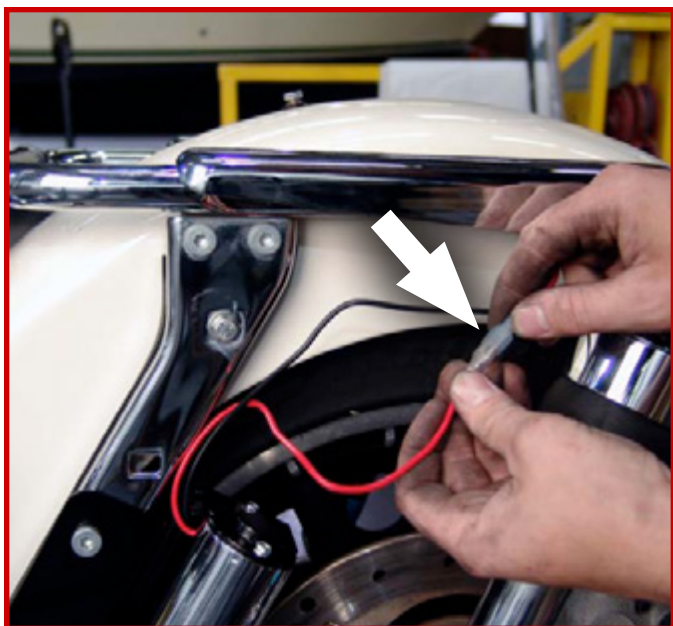
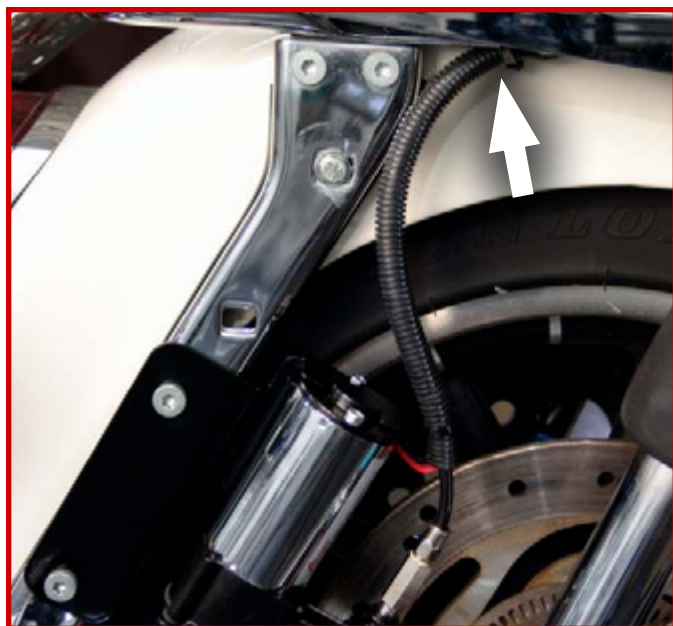


FIGURE 6

4. Attach the included wire extension to the compressor and wrap the wires with the included split loom. Insert the included  $\frac{1}{4}$ " air hose into the push-to-connect fitting on the compressor. Route the wires and air hose toward the right side battery cover attaching them to the frame with the included zip ties. (Figure 7, 8)



**FIGURE 7**



**FIGURE 8**

5. Screw a VOSS fitting into one of the air shocks. Pull out the white plug and insert the 4mm air hose until you feel it seat. Unscrew the VOSS fitting from the shock and verify that the keeper is attached to the hose. Screw the fitting back into the shock and snug tight with a 10mm wrench. (Figure 9, 10, 11)



**FIGURE 9**



**FIGURE 10**





FIGURE 11

6. Apply blue thread lock to the included  $\frac{1}{2}$ " cap screws. Mount the right shock to the motorcycle with the VOSS fitting pointing toward the motorcycle. Route the air line toward the right-side battery cover. Trim the air line & repeat with the left shock. Route the air line to the right-side battery cover. Make sure the air line will not be pinched when the seat is placed back on the motorcycle. Apply some soapy water to the o-rings inside the included bolt covers and slide them over the heads of the bolts. (Figures 12, 13, 14)



FIGURE 12



FIGURE 13



FIGURE 14

7. Mount the included air manifold under the right-side battery cover. The images below show some options with the included mounting hardware. Trim the  $\frac{1}{4}$ " compressor hose and insert it into the push-to-connect fitting on the air manifold. Screw the 2 VOSS fittings into the manifold and following the same procedure as in step #5 attach the 4mm air lines. (Figures 15, 16)

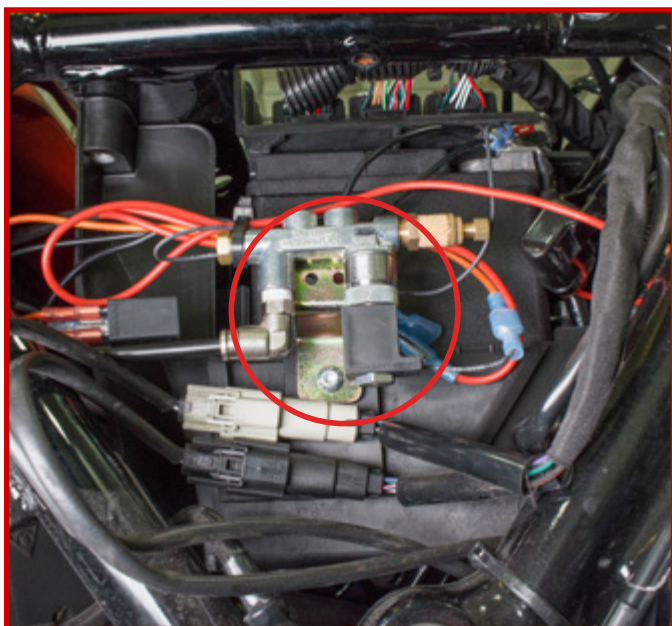


FIGURE 15

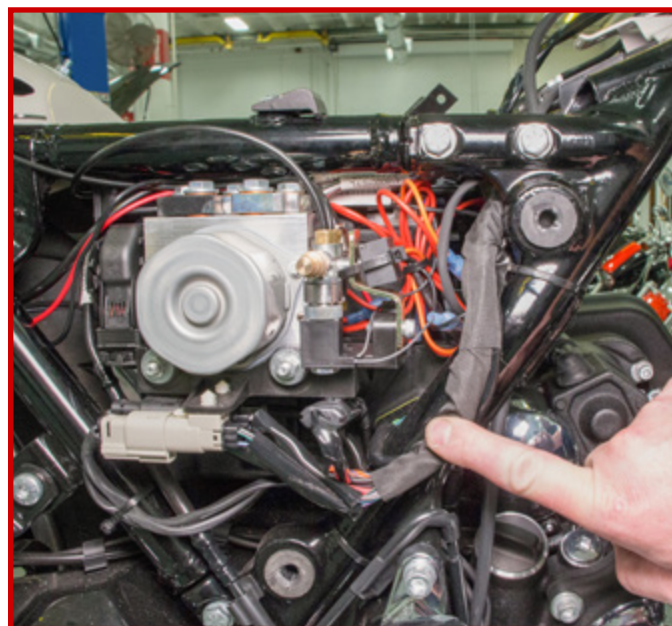


FIGURE 16



8. Remove the lower clutch lever perch bolt. Reusing the same bolt mount, the handle bar switch to the handlebar. Route the switch wires down the handle bars, under the fuel tank to the manifold. Using the wiring diagram in the back of this manual complete the electrical connections. (Figures 17, 18)



**FIGURE 17**



**FIGURE 18**

9. Before putting the motorcycle completely back together, it is recommended that you air up the system. Spray all the hose connections and fittings with soapy water. If there are any air leaks in the system bubbles will form at these locations.

10. The orientation of the VOSS fill port can be changed in relation to the shock mounting eyelets. Unscrew and remove the shock can. Snug the lower shock eye in a vise. Grasping the lower portion of the air spring and twist it on the shock body until the desired clocking is reached. Flip the shock in the vise. This time gripping the other end of the air spring. Twist to realign the shock eyes. (Figures 19, 20, 21, 22)



FIGURE 19



FIGURE 20




FIGURE 21





FIGURE 22

The terms Harley-Davidson®, Harley®, H-D®, Buell®, Softail®, Dyna®, V-Rod®, Tri-Glide®, and Sportster® are used for reference only. Arnott Air Suspension products are in no way authorized by nor associated with the Harley-Davidson Motor Company. All references to Harley-Davidson terms and models are for reference and identification purposes only. The use and installation of any Arnott Air Suspension product or kit may adversely affect or void your Harley-Davidson® factory warranty. It is the responsibility of the motorcycle owner to check federal, state and local laws and ordinances before modifying or customizing his or her motorcycle. It is the exclusive and total responsibility of the motorcycle owner to determine the suitability of this product for his or her use. The user shall assume all legal obligations, personal injury risk and all liability duties and risk associated with the use of this product. Arnott Air Suspension products are designed and intended for the experienced on-road motorcyclists only and intended for closed course operation. Arnott Air Suspension products and kits are designed exclusively for OEM manufactured and equipped motorcycles with no modifications. Any installation of aftermarket or customized components may adversely affect the operation and performance of Arnott Air suspension kits and components and may void the manufacturer's warranty. These directions are accurate at time of publication. Arnott Inc. reserves the right to revise specifications without notice.



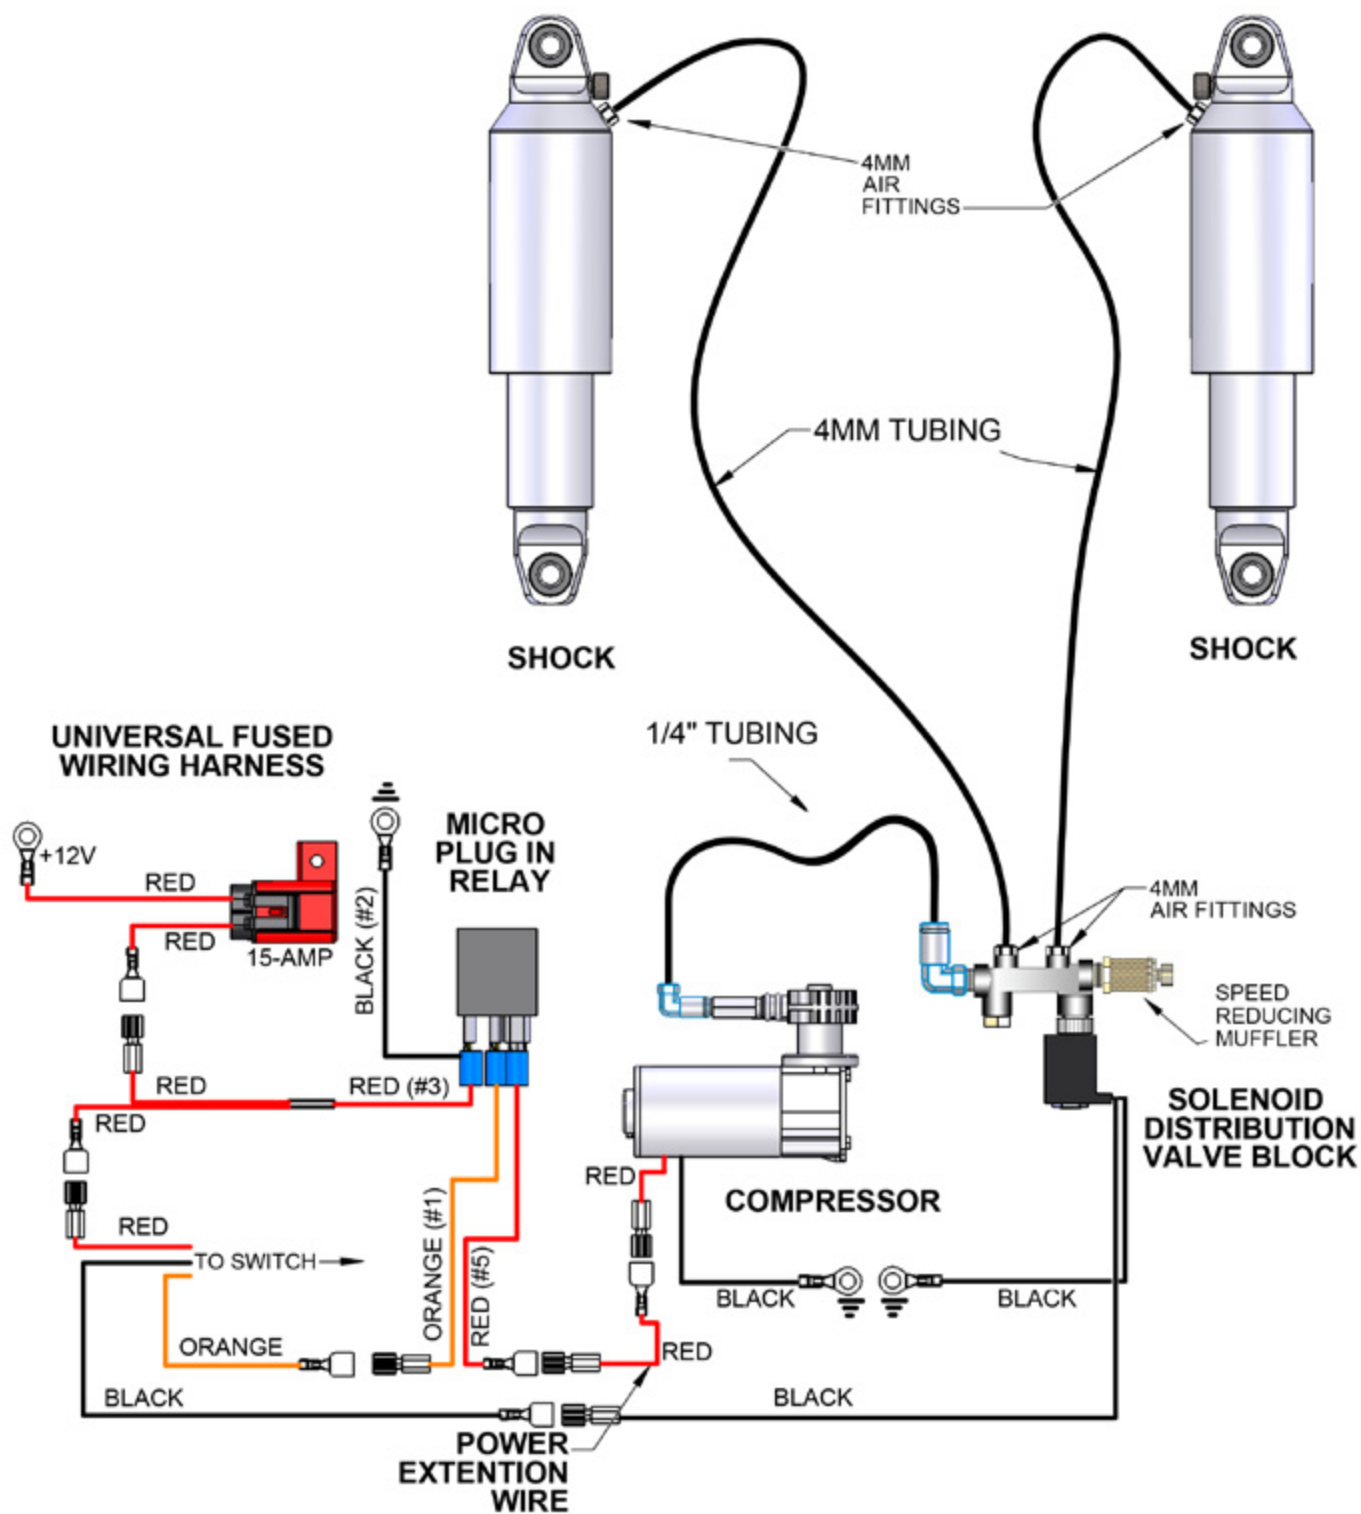

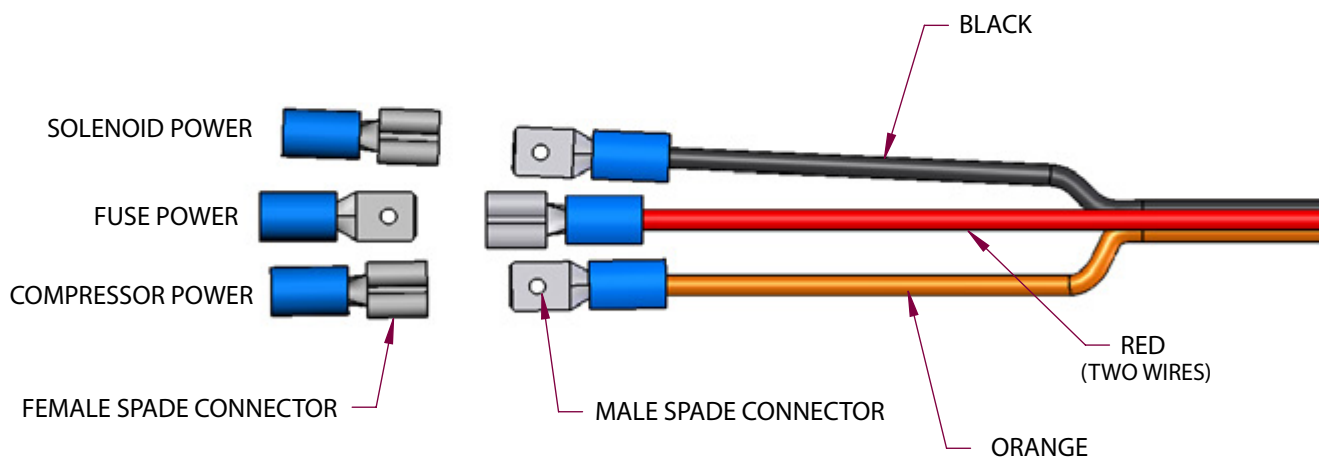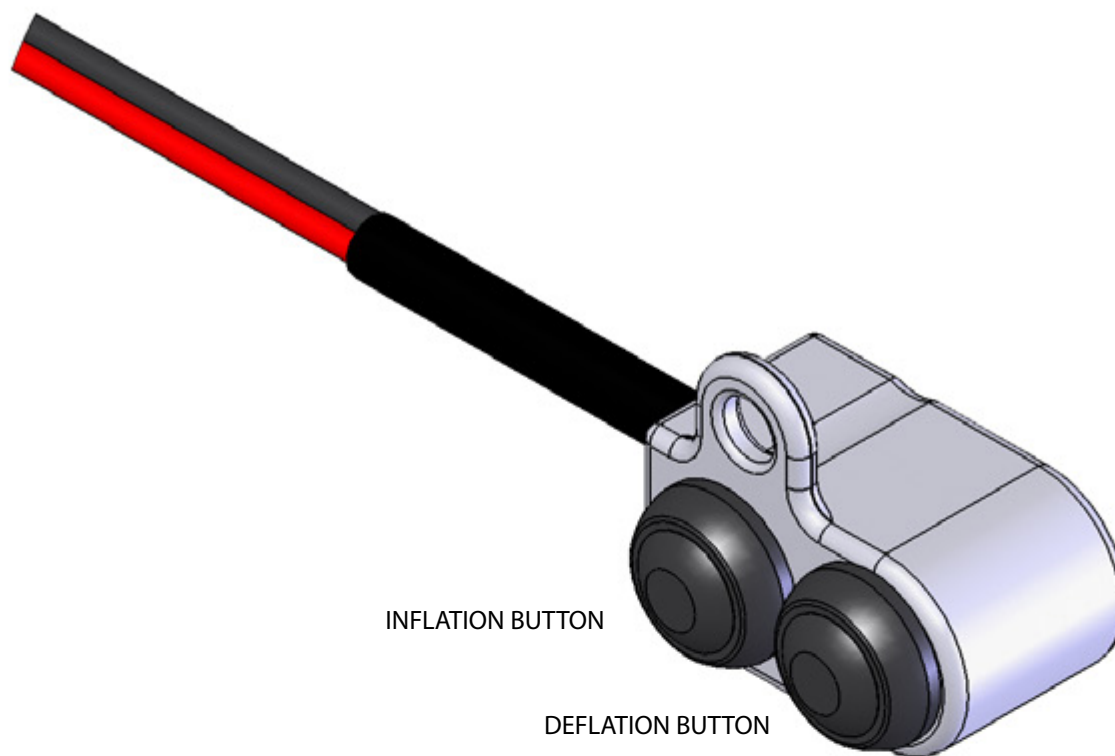

- AS SHOWN IN ILLUSTRATION ABOVE;
1. CUT SWITCH WIRING TO APPROPRIATE LENGTH.
  2. CRIMP THE TWO MALE SPADE CONNECTORS TO THE ORANGE WIRE AND TO THE BLACK WIRE.
  3. CRIMP THE FEMALE SPADE CONNECTOR TO THE DOUBLE RED WIRE.

# Arnott®

## Motorcycle Suspension

### Arnott US Business Office:

[www.arnottinc.com](http://www.arnottinc.com)

100 Sea Ray Drive  
Merritt Island, FL 32953

**Call:** 800.251.8993

321.868.3016

**Fax:** 321.868.3703

**Email:** [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com)

### Arnott Europe Business Office:

[www.arnotteurope.com](http://www.arnotteurope.com)

Industrieweg 19  
5145 PD, Waalwijk (NL)

**NL Phone:** +31 73 7850 580

**DE Phone:** +31 85 2087 438

**UK Phone:** +44 203 3186 124

**BE Phone:** +32 258 846 90

**ES Phone:** +34 91 901 10 56

**FR Phone:** +32 78 48 46 93

**Email:** [info@arnotteurope.com](mailto:info@arnotteurope.com)



**Exceptional  
Ride Comfort**



**Easy  
Installation**



**Designed for  
Motorcycles**



**TruAIR®  
Technology**



**Rest  
Flat-Footed**



**Reduced  
Painful  
Bottoming**



**Rigorously  
Tested**



**Prevent  
Dangerous  
Tire Wear**



**Prevent Extra  
Drivetrain  
Stress**



**Global,  
Multilingual  
Tech Support**