





FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA112P.

Volkswagon Transporter T5 & Multivan.


(For Touareg, filter is under glove box)

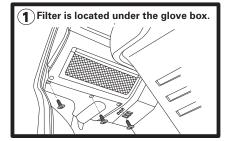

Remove 3 screws as shown.

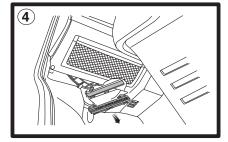


Pull filter cover down and out to remove, pull used filter out from housing.

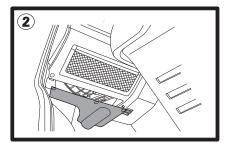


Pull cover down and out to remove.



Push new Ryco RCA112P filter into housing.

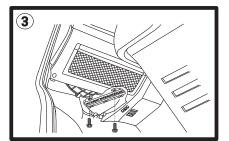

Remove 2 hex headed screws as shown.

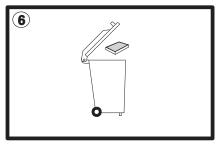

Refit all previously removed components in reverse sequence.
Dispose of used filter correctly.

GUD Automotive Pty Ltd 245 Sunshine Road Tottenham Victoria 3012 Australia. www.rycofilters.com.au GUD (NZ) Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz







FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA112P.

Volkswagon Transporter T5 & Multivan.


(For Touareg, filter is under glove box)

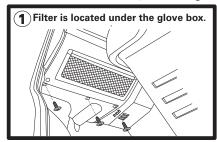


Remove 3 screws as shown.

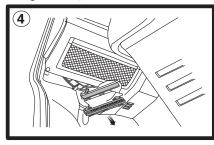


Pull filter cover down and out to remove, pull used filter out from housing.

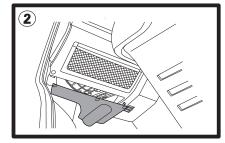


Pull cover down and out to remove.

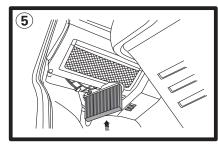

Push new Ryco RCA112P filter into housing.

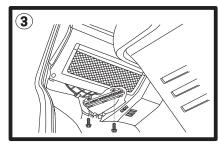

Remove 2 hex headed screws as shown.

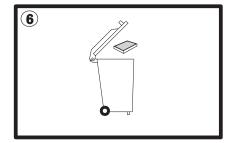

Refit all previously removed components in reverse sequence.

Dispose of used filter correctly.

GUD Automotive Pty Ltd 245 Sunshine Road Tottenham Victoria 3012 Australia. www.rycofilters.com.au

GUD (NZ) Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz