



Die bestimmungsgemäße Verwendung dieser Werkzeuge ist die Reparatur, Instandhaltung und Wartung. Prager & Co. KG übernimmt keine Haftung für eine unsachgemäße Verwendung dieser Werkzeuge. Prager & Co. KG kann nicht für Schäden an Personen, Gegenständen oder Geräten verantwortlich gemacht werden, die sich bei der Nutzung dieser Werkzeuge ergeben.



Nr. 36634 - Motoreinstell-Werkzeug-Satz, VAG / Porsche

- für 2.8, 3.2, 3.6, 4.0, 6.0 und 6.3 L Benzinmotoren mit 6 und 8 Zylindern
- im Audi A3, A8, Q7, S8 und TT
- im VW Eos, Golf IV/V, Passat, Passat CC, Phaeton, Sharan, Touareg, und T4
- im Porsche Cayenne
- im Skoda Superb II
- zum Blockieren der Nockenwellen, Kurbelwelle und Einspritzpumpe
- beim Steuerkettenwechsel oder der Motorreparatur

für Motorcodes:

AMV, AXZ, AYL, BAN, BAP, BDB, BDE, BDN, BDP, BHK, BHL, BJN, BMJ, BRN, BRP, BTT, BUB, BWS, CBRA, CDVA, CEJA, CGRA, CHNA, CMTA, CTNA, M5501, M5502

OEM Vergleichsnummern:

3242, T10068A, T10069, T10332, T10363, T40237

Nr.	Art. Nr.	Beschreibung	OEM Vergleichsnummer
1	36634-01	Nockenwellenblockierung (2 Stück)	T10068A
2	36634-02	Gegenhalteschlüssel für Kurbelwelle	T10069
3	36634-03	Blockierung Einspritzpumpe	T10332
4	36634-04	Blockierung Einspritzpumpe	T10363
5	6634	Kurbelwellen-Absteckdorn, VAG	3242 / T40237



- Motor nicht starten, wenn die Werkzeuge noch montiert sind.
- Die Blockierwerkzeuge dürfen nicht beim Lösen oder Festziehen von Kurbelwellen- oder Nockenwellen-Rädern zum Gegenhalten verwendet werden.
- Angegebene Daten erfolgen unter Vorbehalt.
- Diese Werkzeuge nur unter Beachtung aller Sicherheitshinweise, technischen Dokumentationen und Vorgaben des Fahrzeugherstellers verwenden.



The intended purpose of these tools is for repairing, servicing and maintaining. Prager & Co. KG does not accept any liability for incorrect use of any of these products. Prager & Co. KG cannot be held responsible for any damage to personnel, property or equipment when using these tools.



No. 36634 - Timing Tool Set, Audi / VW / Porsche

- for 2.8, 3.2, 3.6, 4.0, 6.0 and 6.3 L petrol engines with 6 and 8 cylinders
- in Audi A3, A8, Q7, S8 and TT
- in VW Eos, Golf IV/V, Passat, Passat CC, Phaeton, Sharan, Touareg, and T4
- in Porsche Cayenne
- in Skoda Superb II
- for locking the camshafts, crankshaft and injection pump
- for timing chain replacement or engine repair


for engine codes:

AMV, AXZ, AYL, BAN, BAP, BDB, BDE, BDN, BDP, BHK, BHL, BJN, BMJ, BRN, BRP, BTT, BUB, BWS, CBRA, CDVA, CEJA, CGRA, CHNA, CMTA, CTNA, M5501, M5502

OEM Comparison Numbers:

3242, T10068A, T10069, T10332, T10363, T40237

No.	Item No.	Description	OEM Comparison Number
1	36634-01	Camshaft Locking Tool (2 pcs.)	T10068A
2	36634-02	Crankshaft Counter Holder	T10069
3	36634-03	Injection Pump Locking Tool	T10332
4	36634-04	Injection Pump Locking Tool	T10363
5	6634	Crankshaft Locking Pin, Audi / VW / Porsche	3242 / T40237

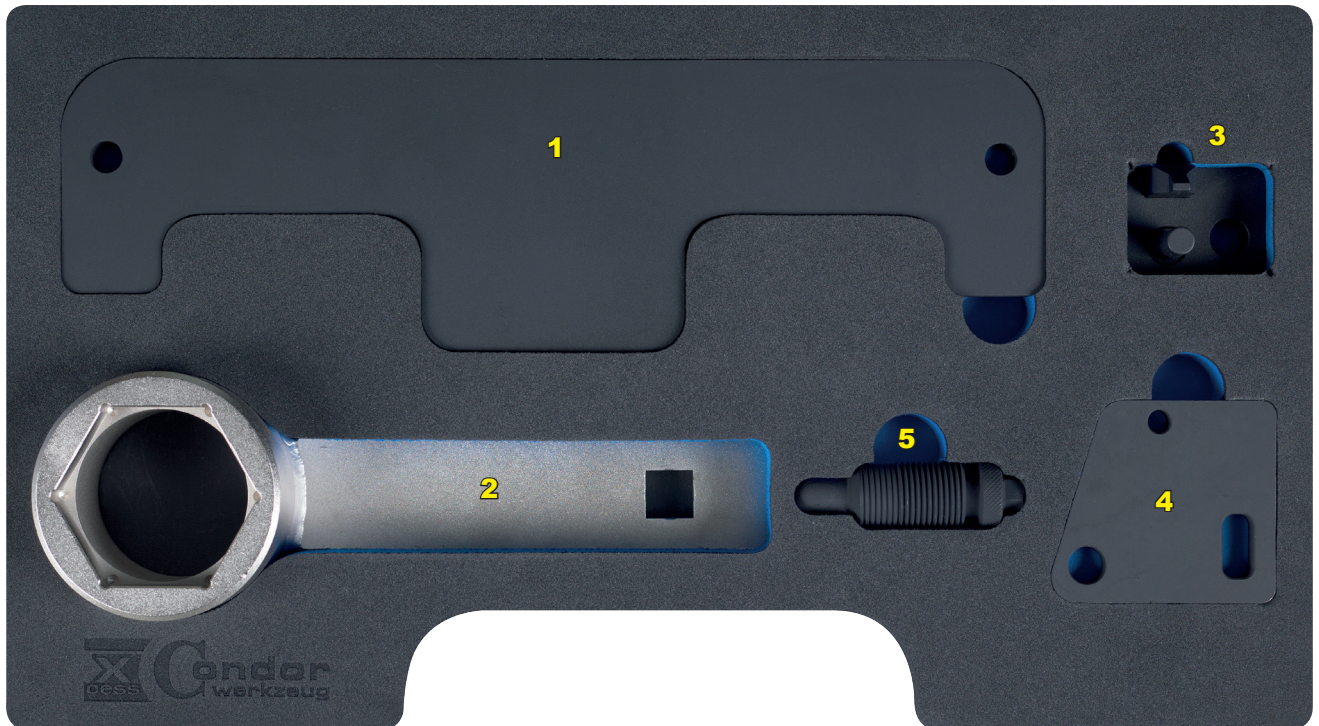

- Remove all tools before starting engine.
- Do not use the locking tools as counterholder when loosening or tightening camshaft or crankshaft sprockets.
- No responsibility is taken for the correctness of this data.
- Always observe and follow all safety notes, technical documentations, specifications and instructions of the vehicle manufacturer.