


Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724


Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlgs. DIN/ISO norm 1724

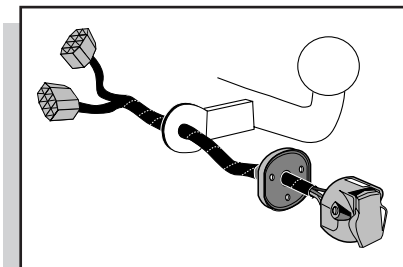

RENAULT LAGUNA II BREAK

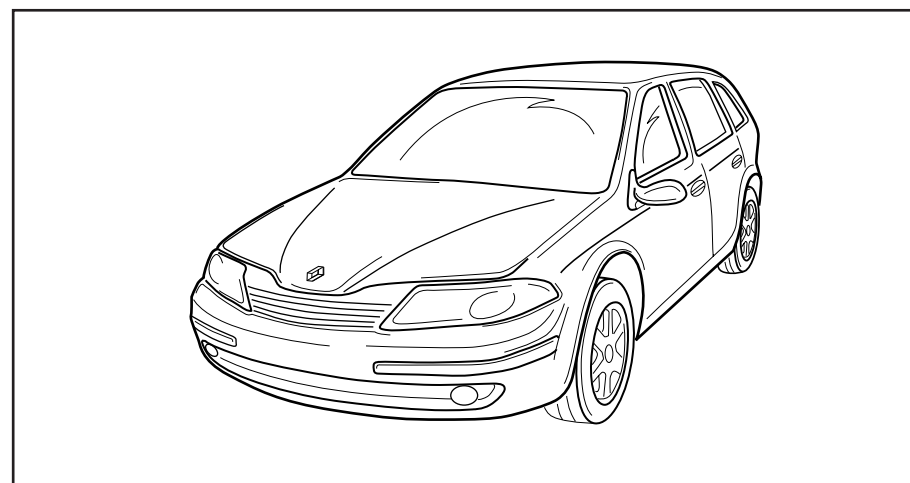









Bestel Nr.: RN-031-BL




* Teilliste







* Liste de pieces








* Part list

* Onderdelenlijst

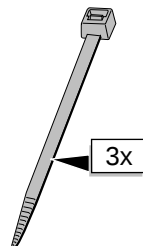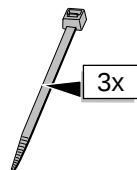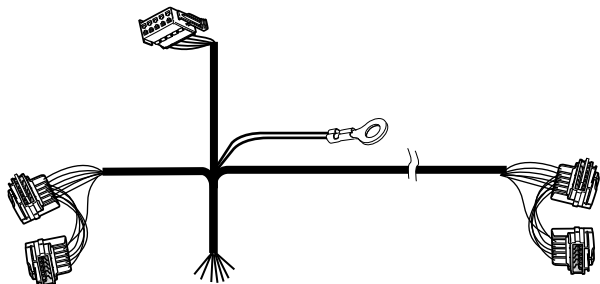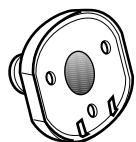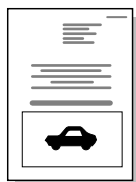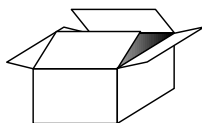

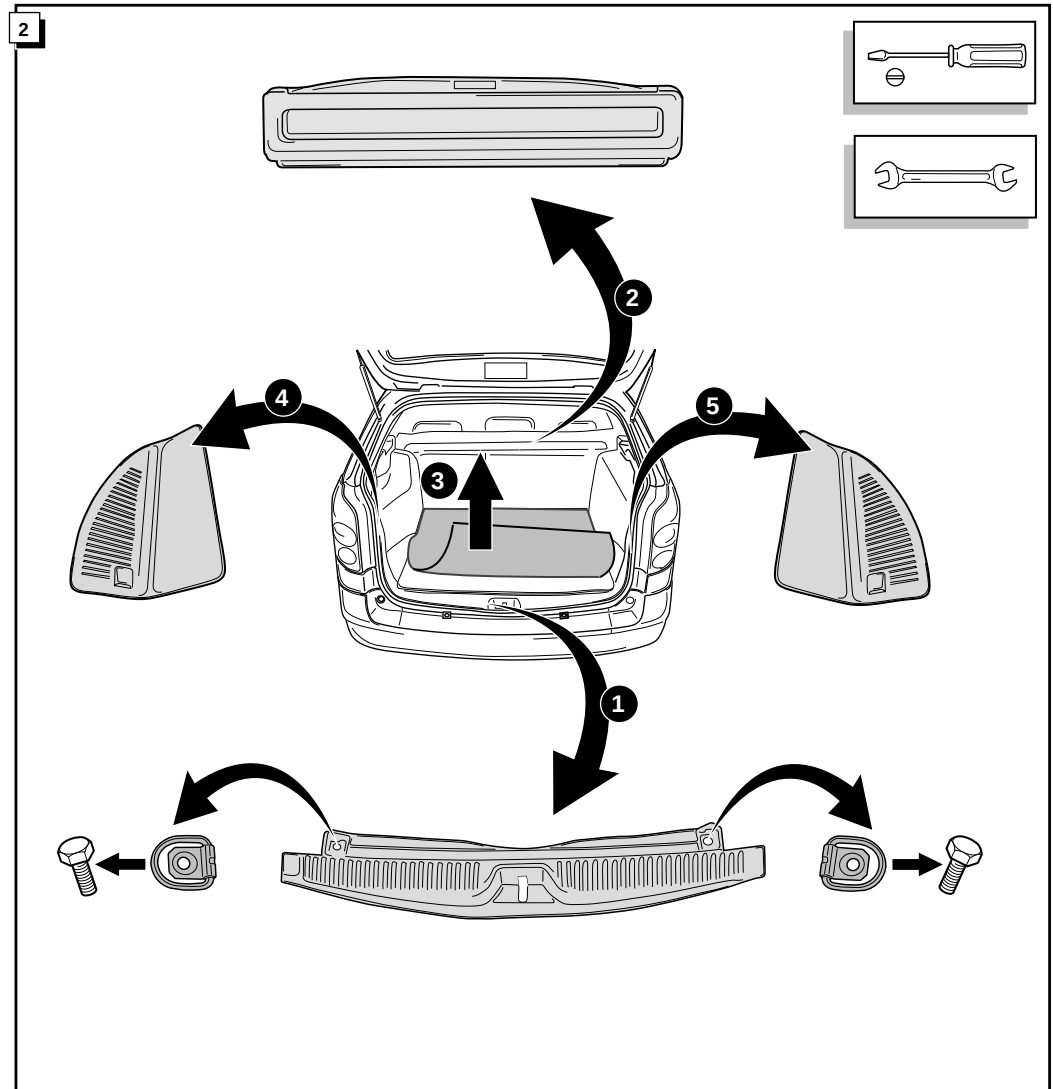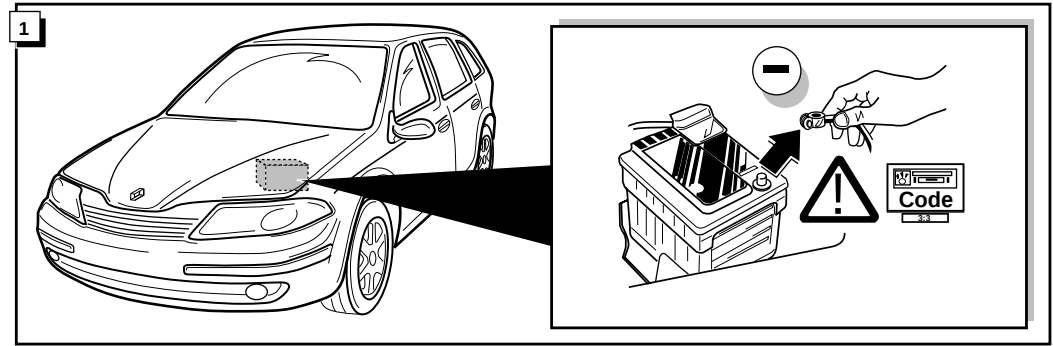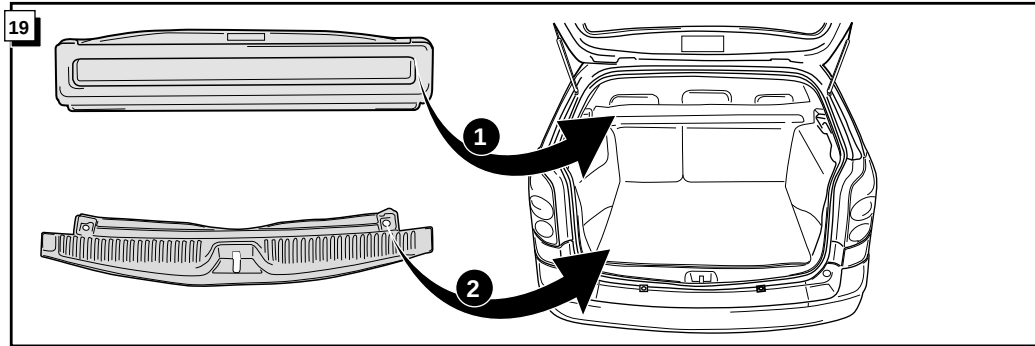

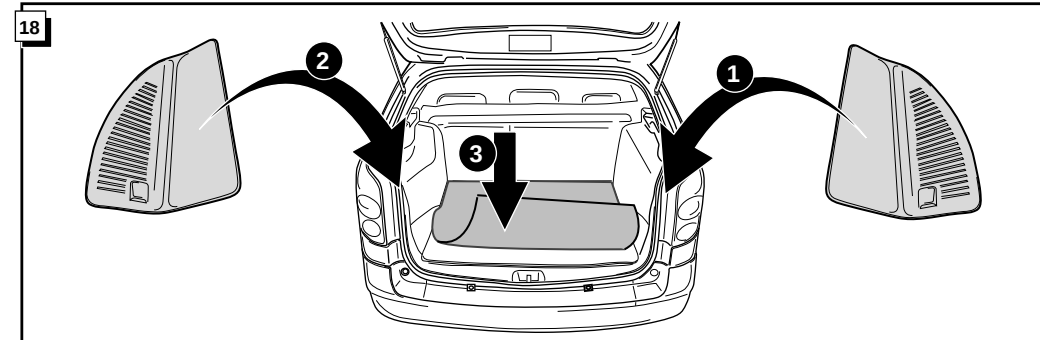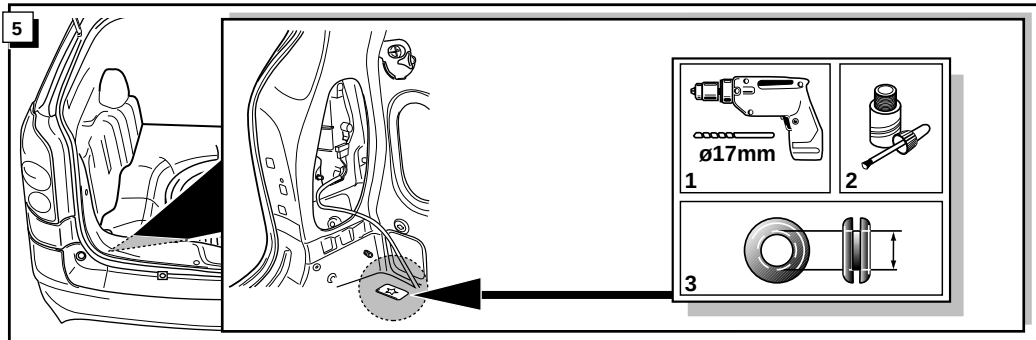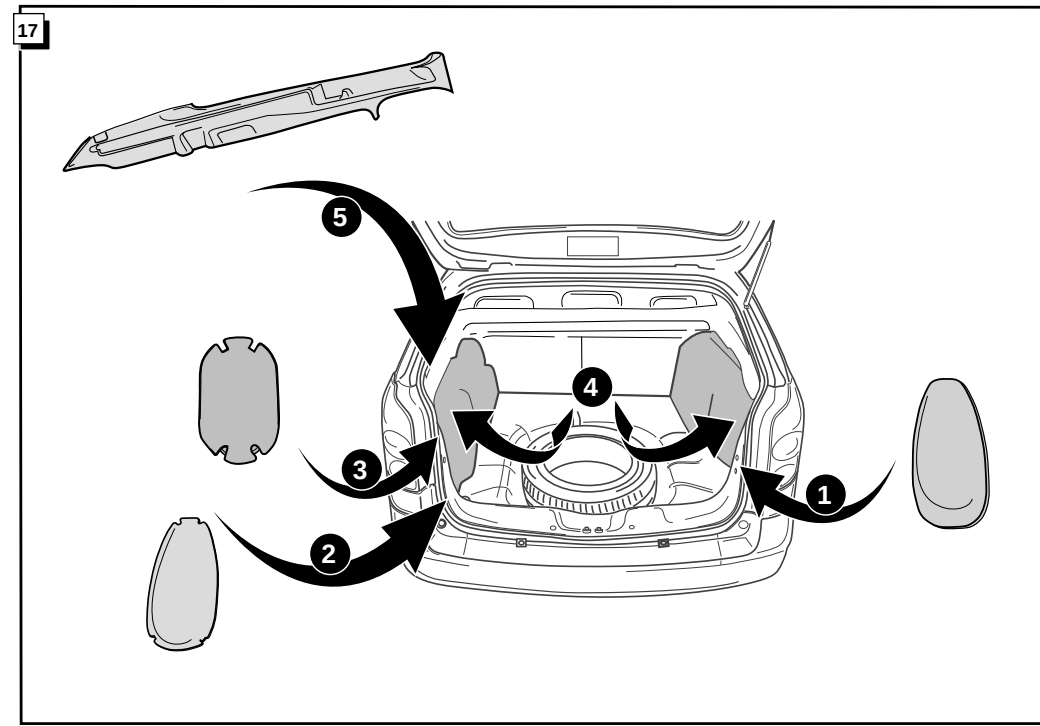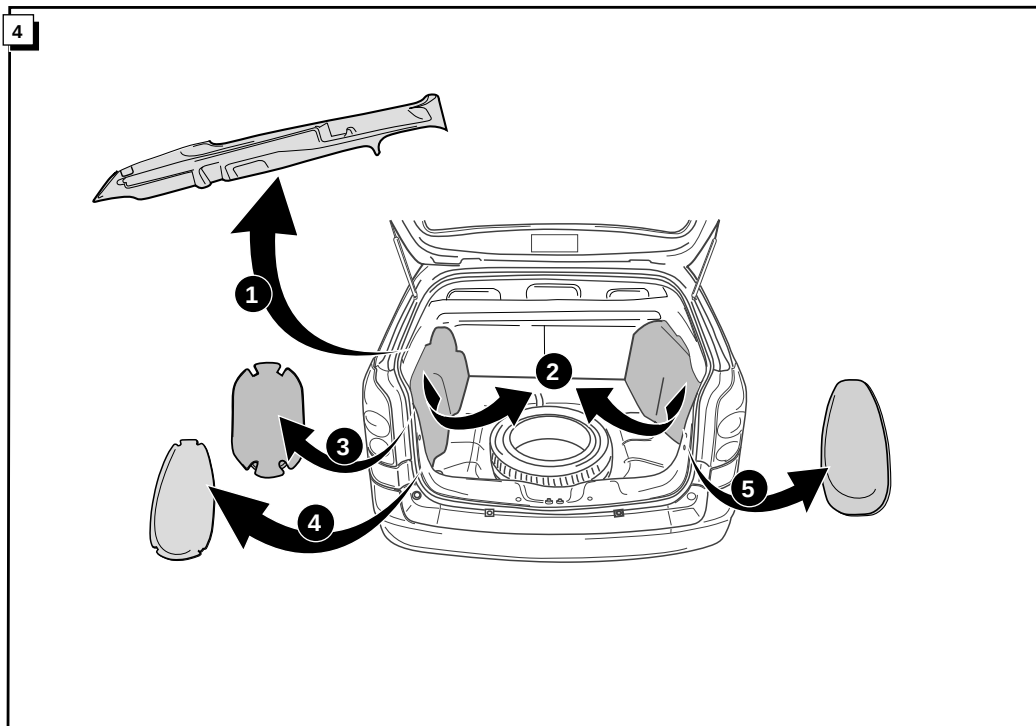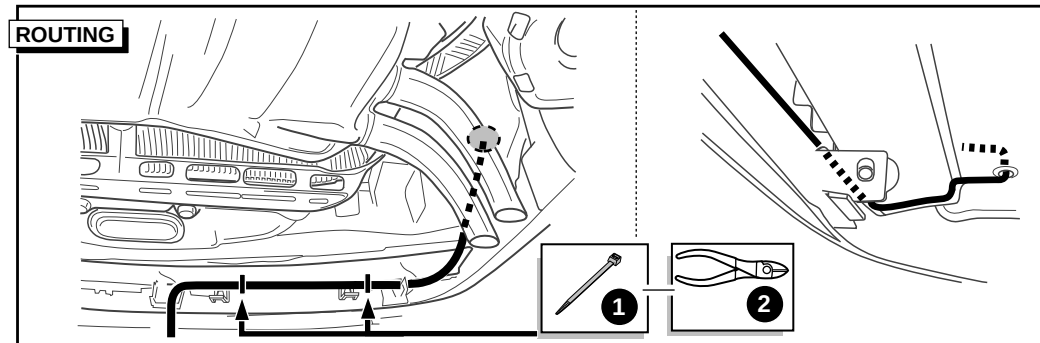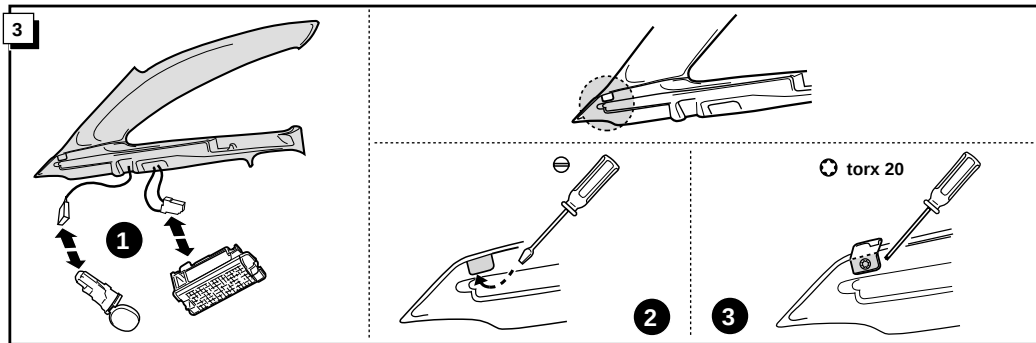

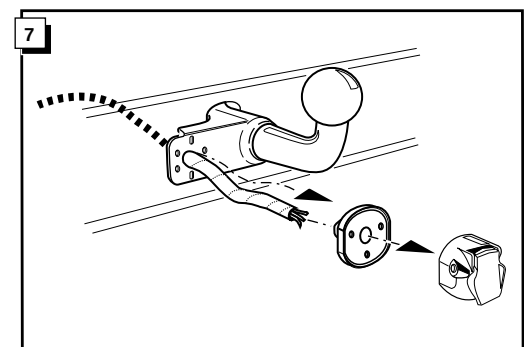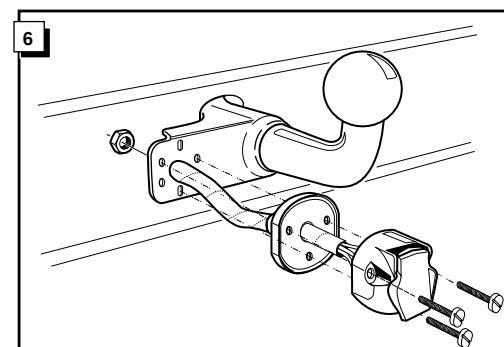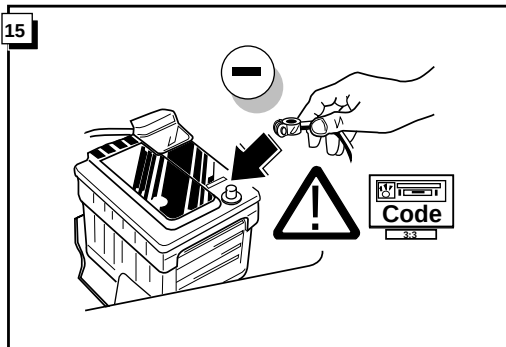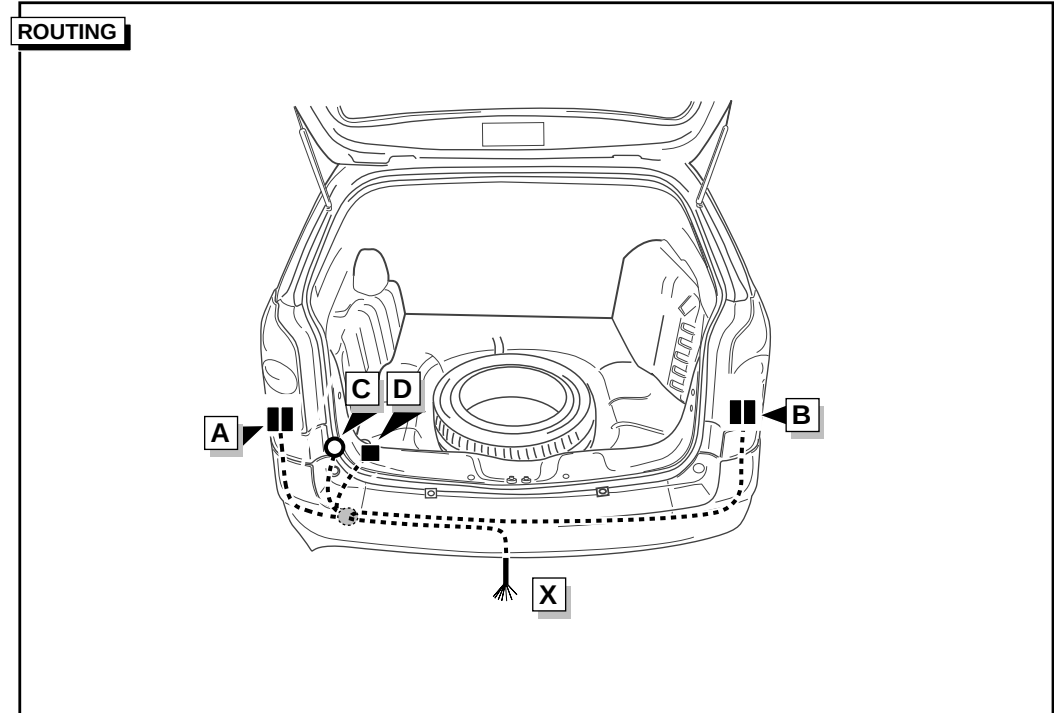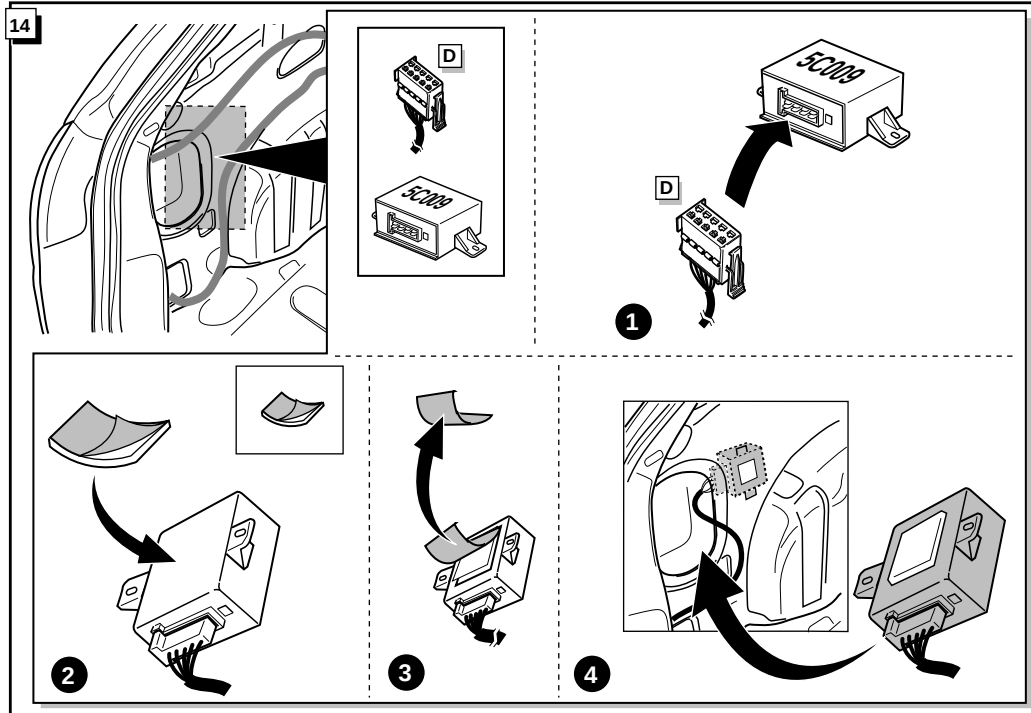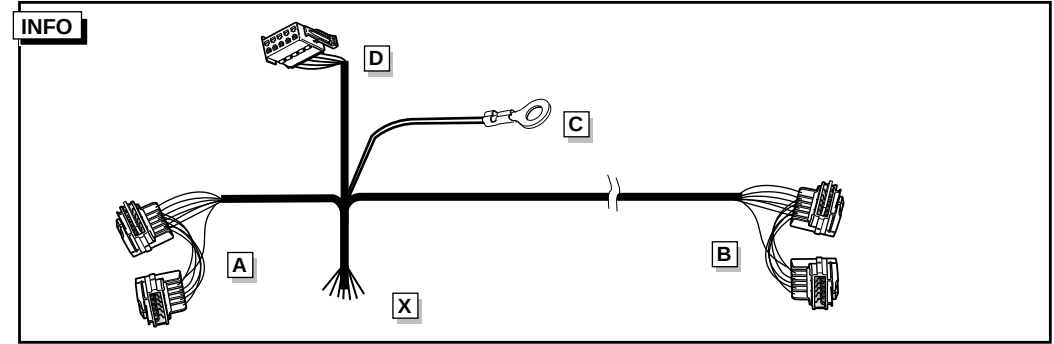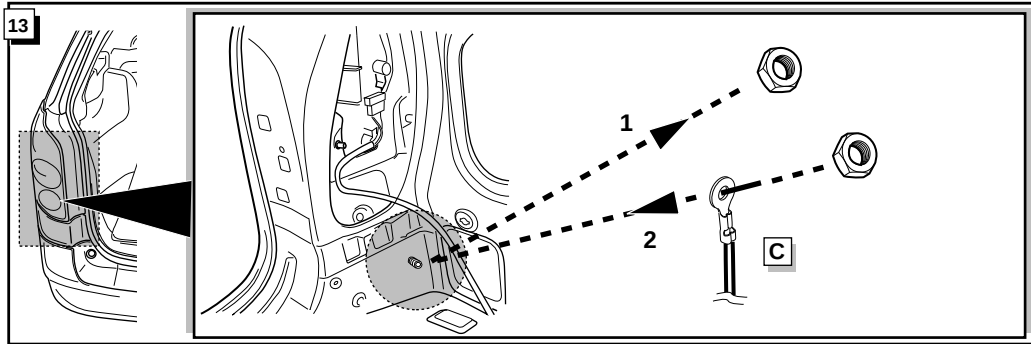

DIN/ISO 1724		(D)	(F)	(GB)	(NL)
⇐	1/L	gelb	jaune	yellow	geel
⚡	2	blau	bleu	blue	blauw
⏏ 1-8	3/31	weiß	blanc	white	wit
⇒	4/R	grün	vert	green	groen
☀	5/58-R	braun	marron	brown	bruin
STOP	6/54	rot	rouge	red	rood
☀	7/58-L	schwarz	noir	black	zwart
⚡ → ⚡	8/58-b	grau	gris	grey	grijs

