




ERICH JAEGER

# Installation instructions

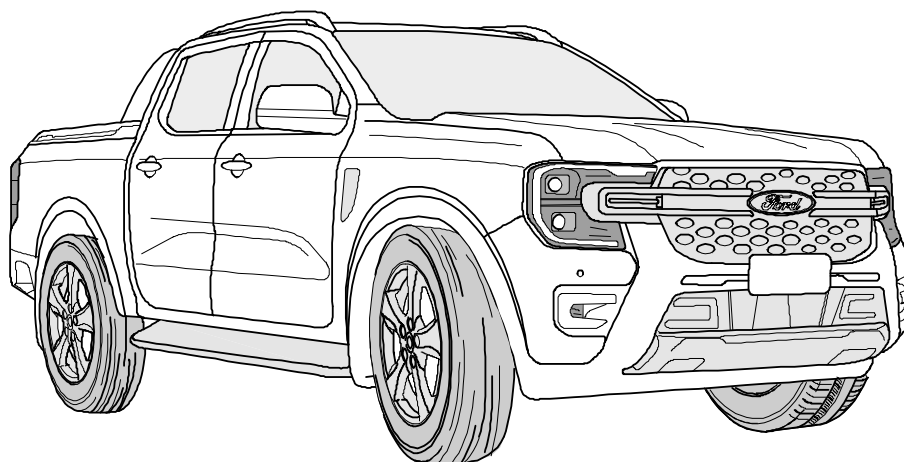

**750150**

**FORD Ranger**



**VOLKSWAGEN Amarok**

**06/22 >>**

**11/22 >>**



SCAN FOR  
LATEST  
INSTRUCTIONS

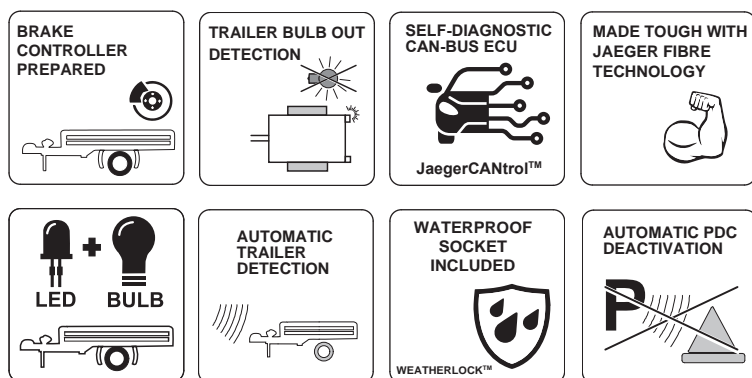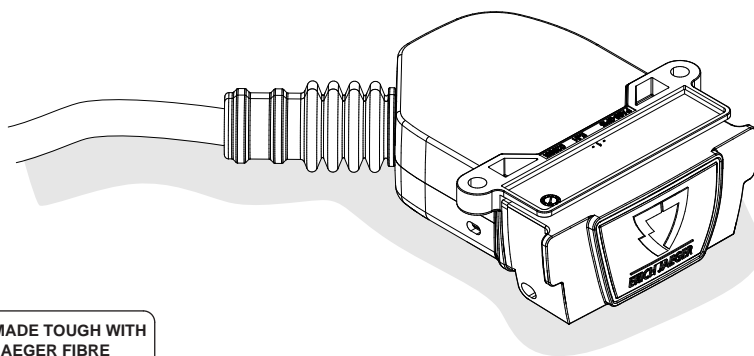

## Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.


The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.










The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


# OVERVIEW

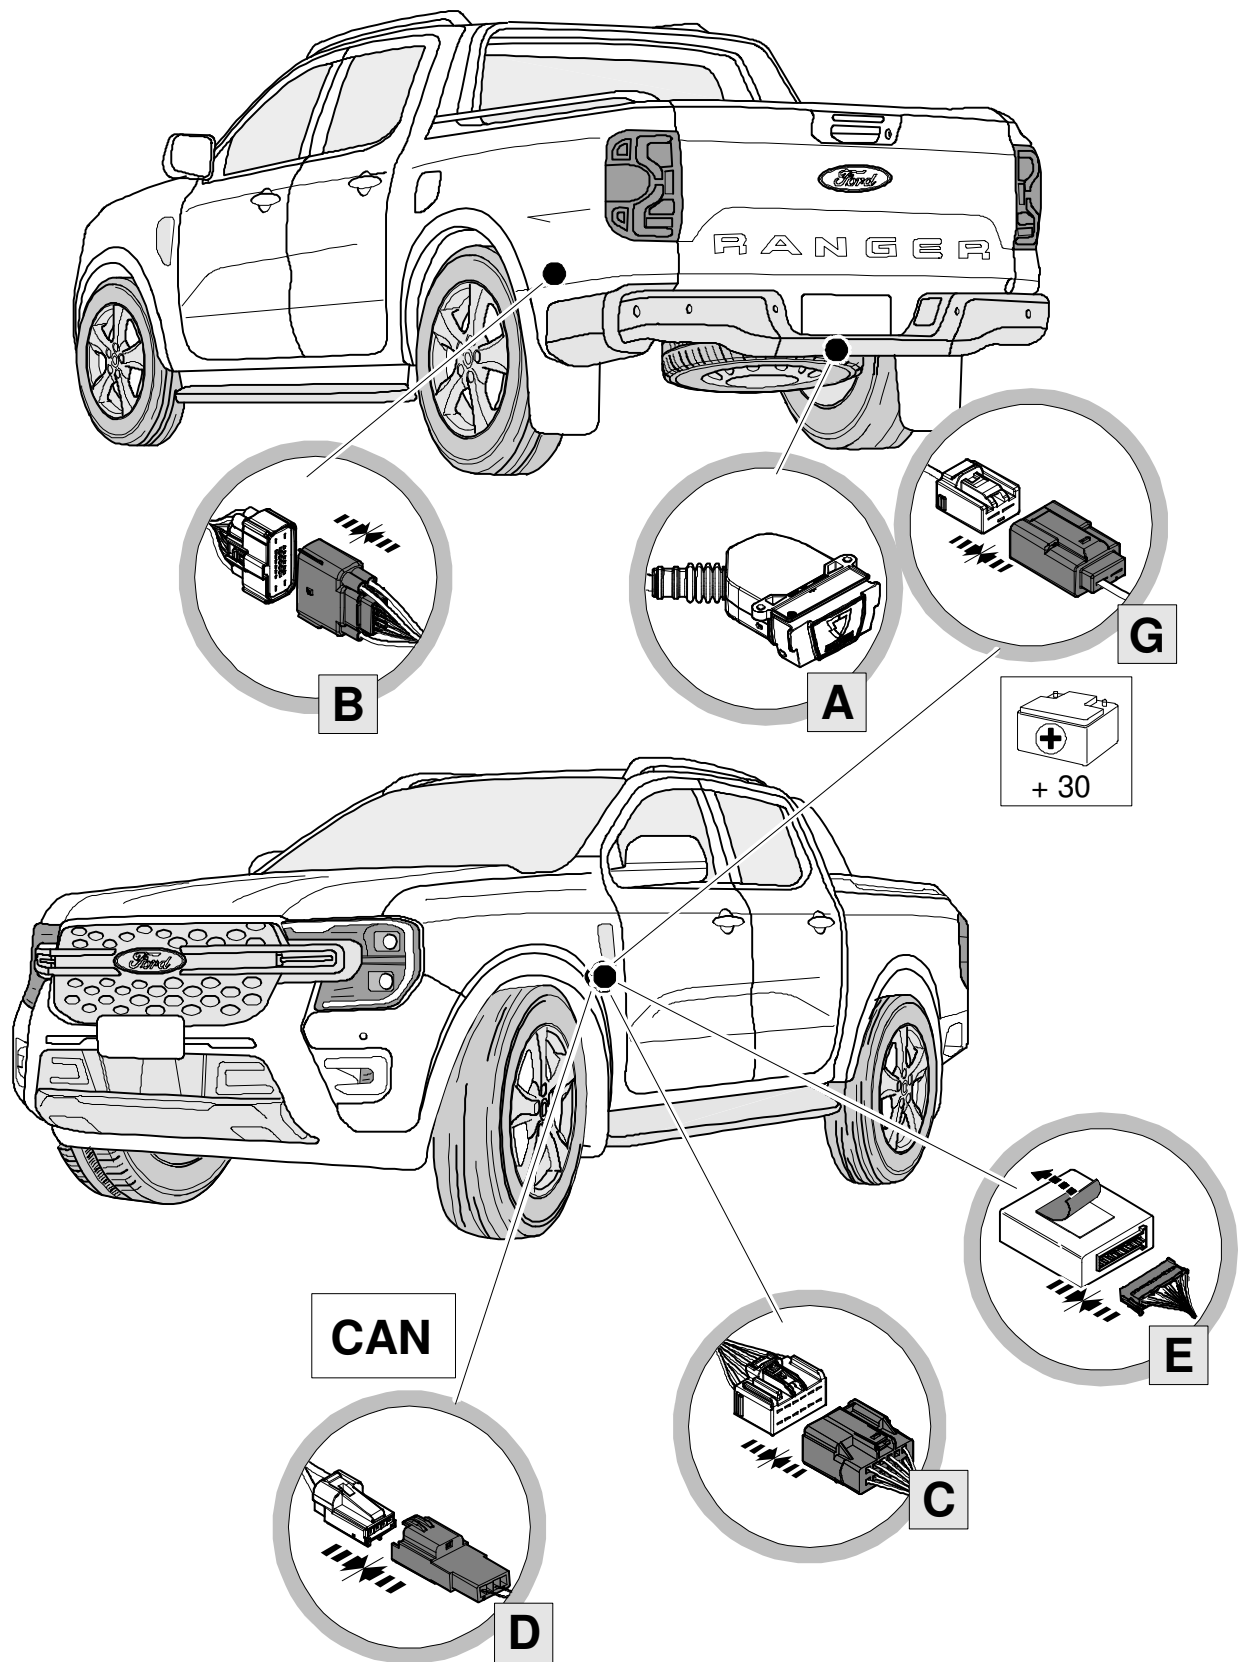




# KIT

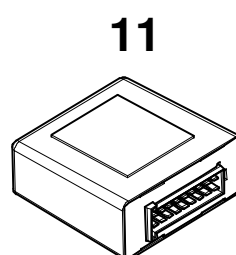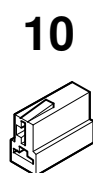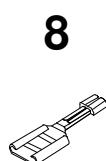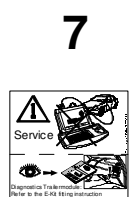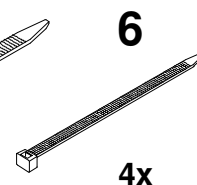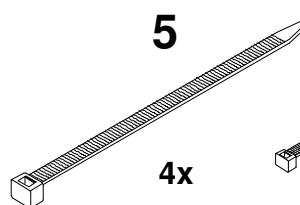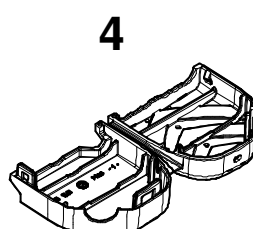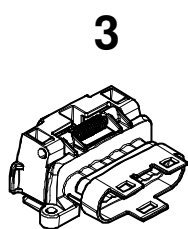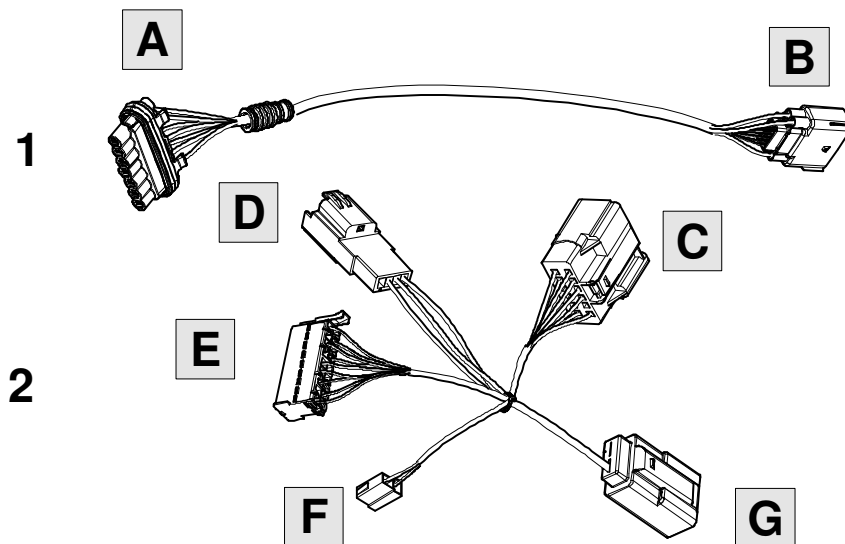


# TOOLS




7mm

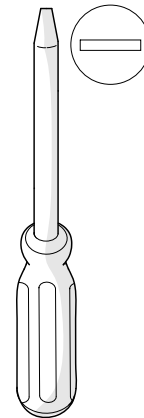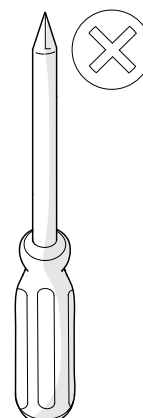

1

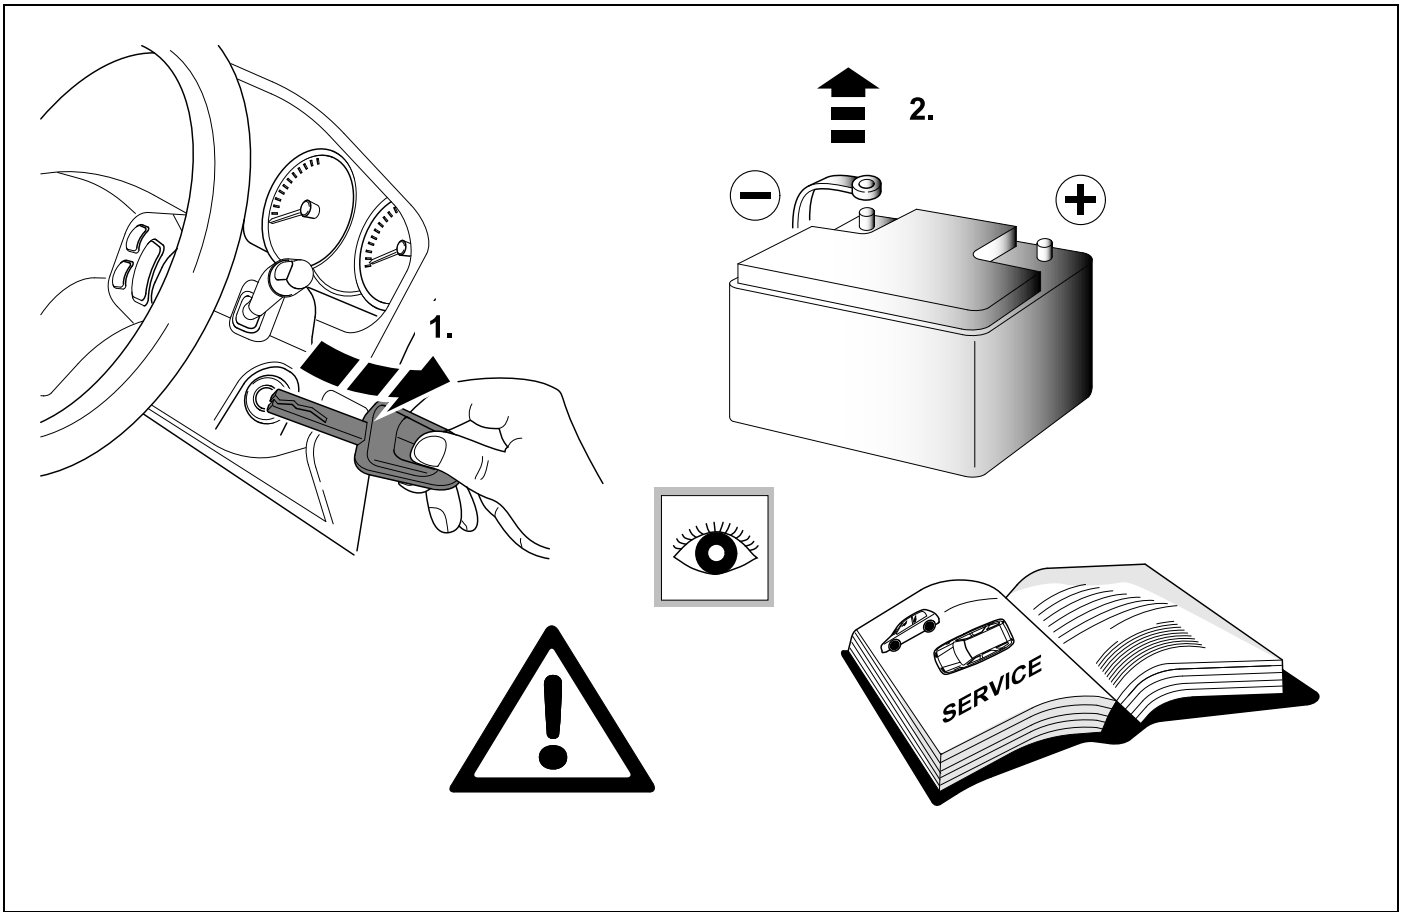

2

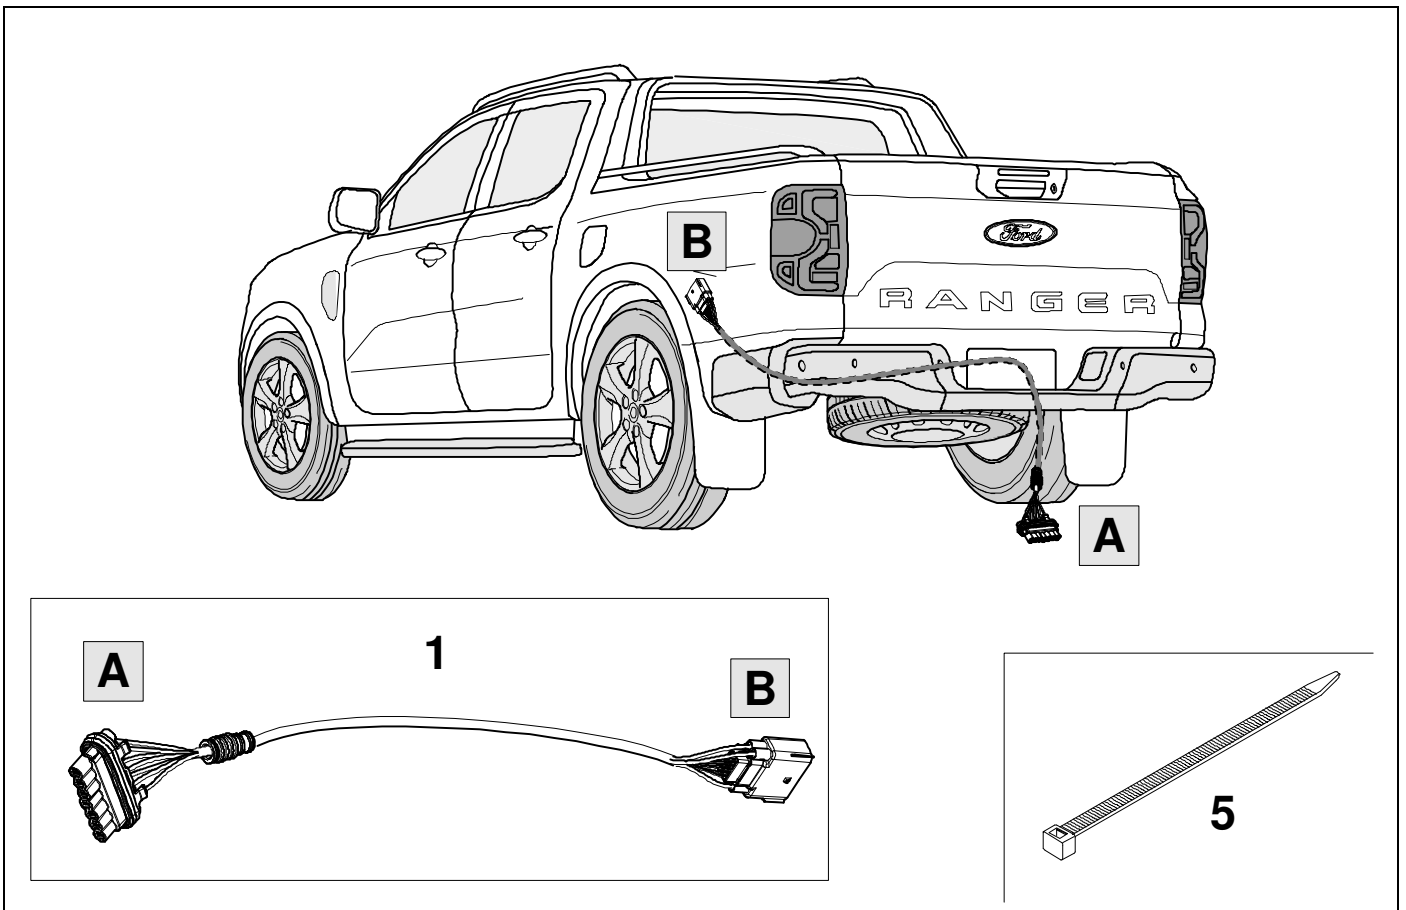


3




5


1.

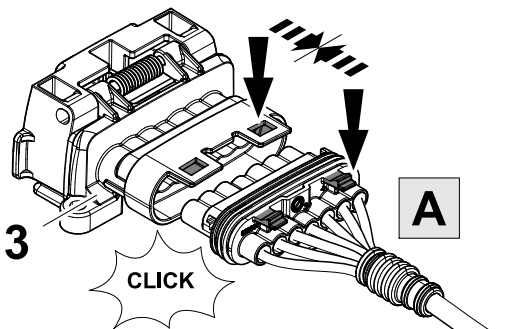


2.

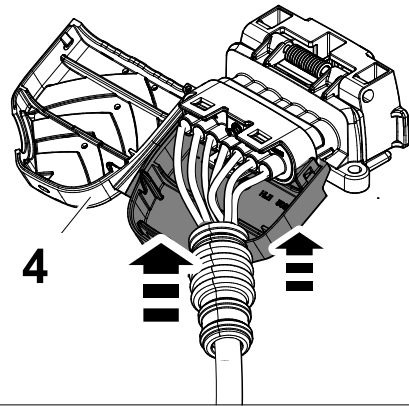


3.

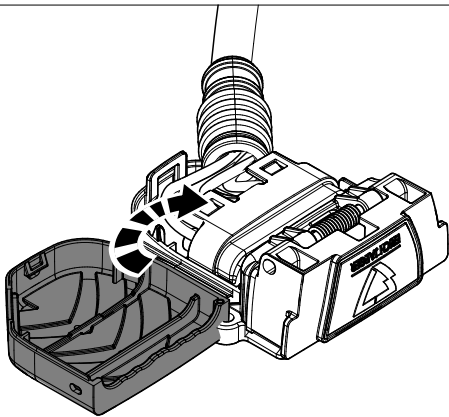


4.

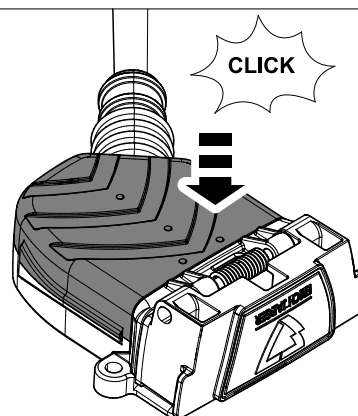



3

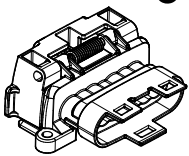

4

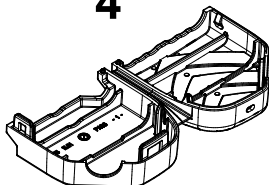

4

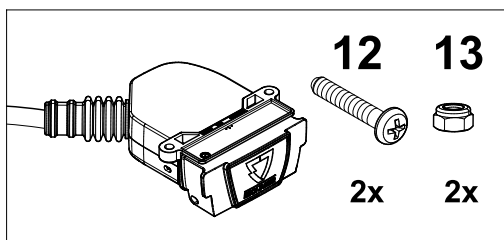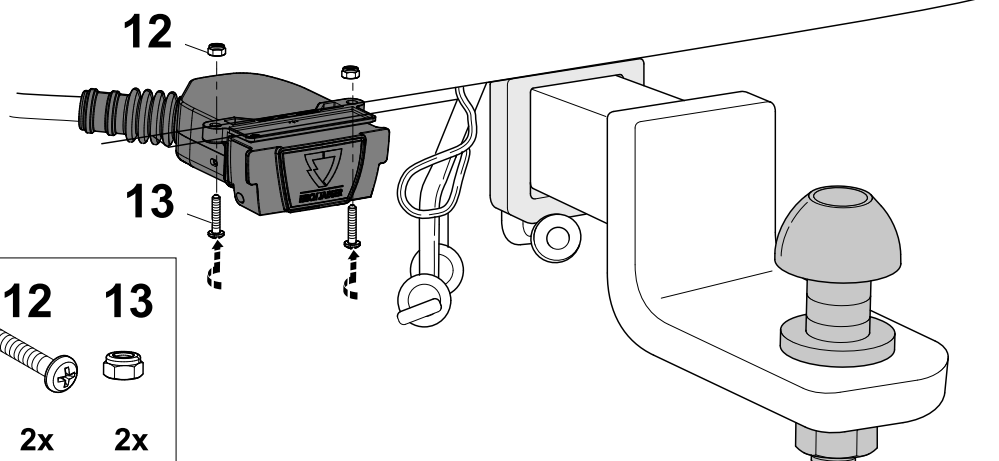

5

 ⇒ 


6

1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	


6	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
---	----	----	----	----	----	----	----	----	----	----	----


	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied
---	-------	-------	------	-------	-----	------	--------	-------	--------	--------	--------------

7



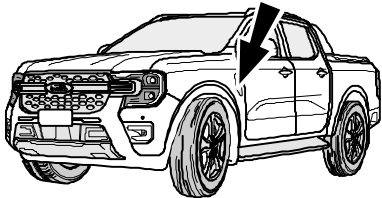


Remove the glove box.

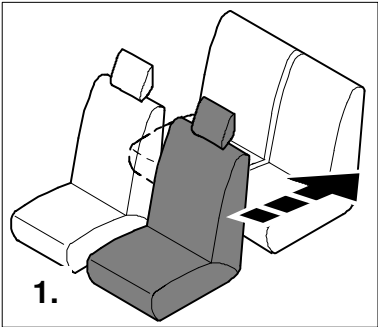

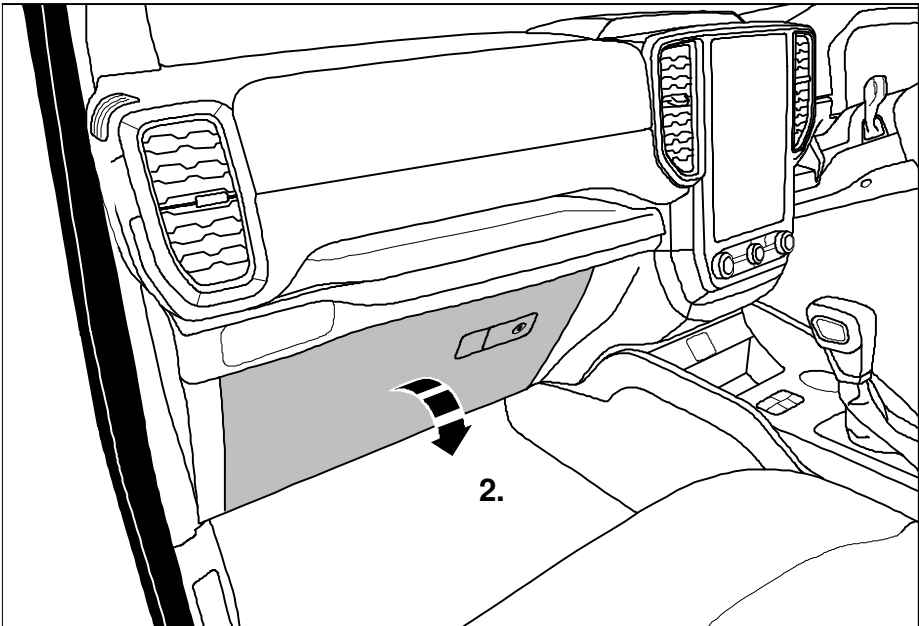

8

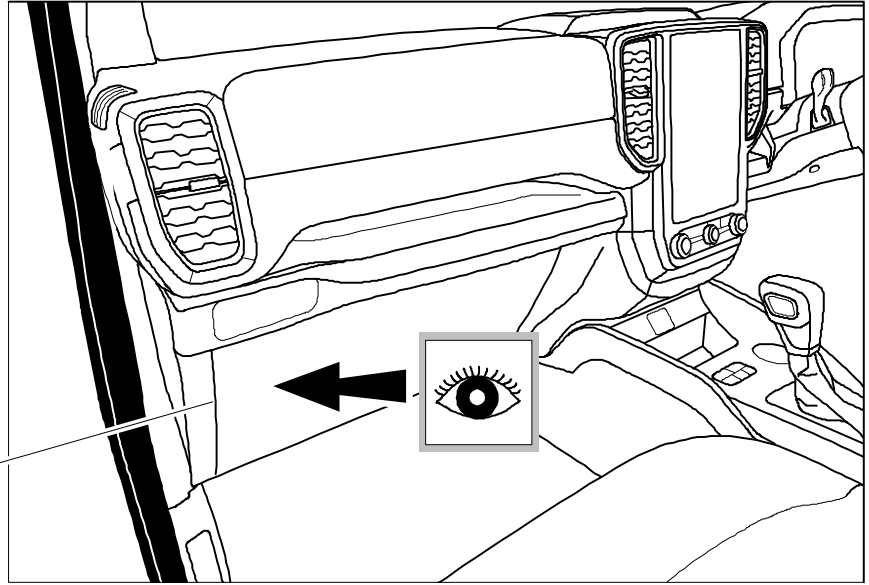
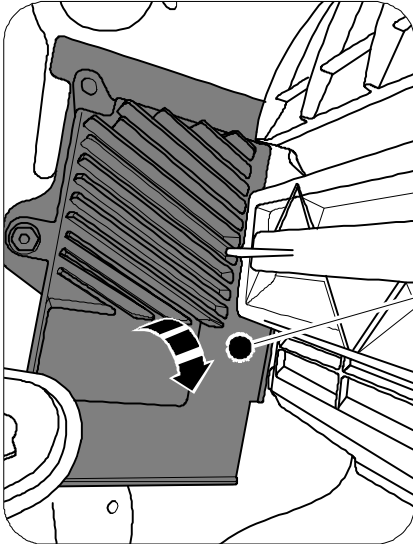
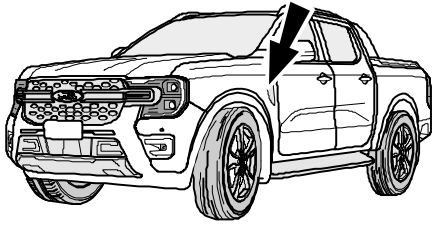


It is easier to access the three connectors by removing the silver control module first. If an OEM tow module is already fitted, you will need to unplug the three connectors from that module first and then continue with the next steps of the install.

9




6

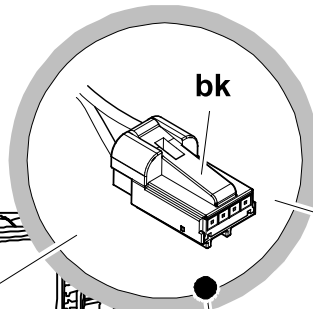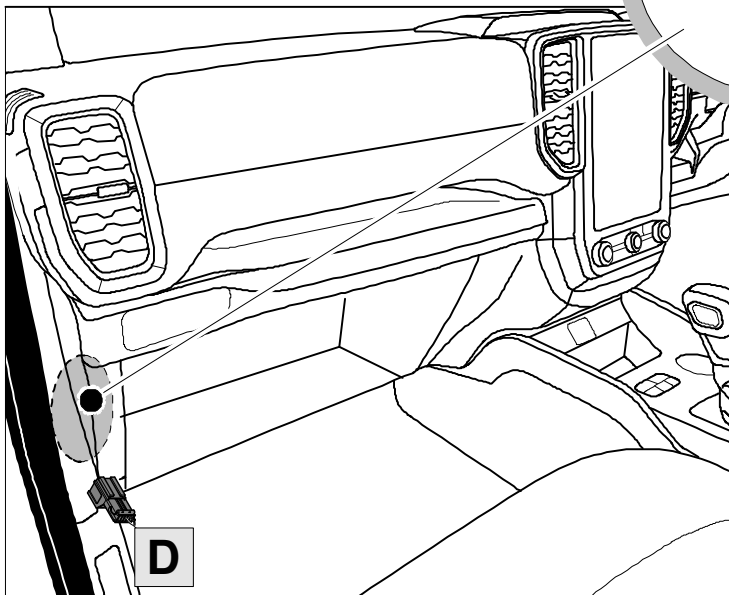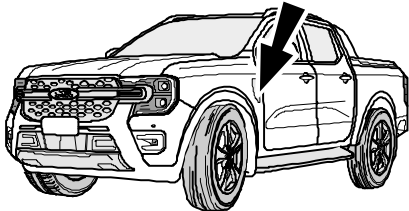


D


2




CAN

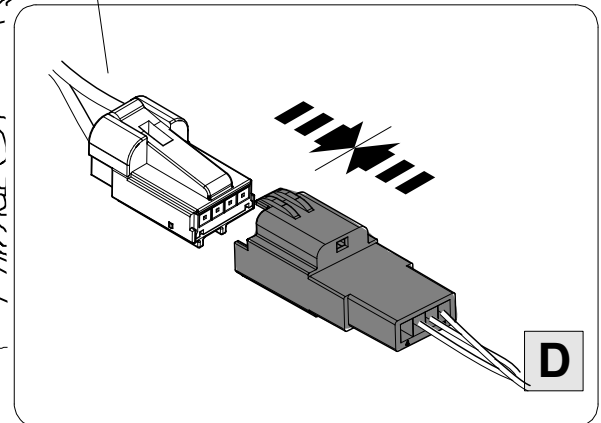


10

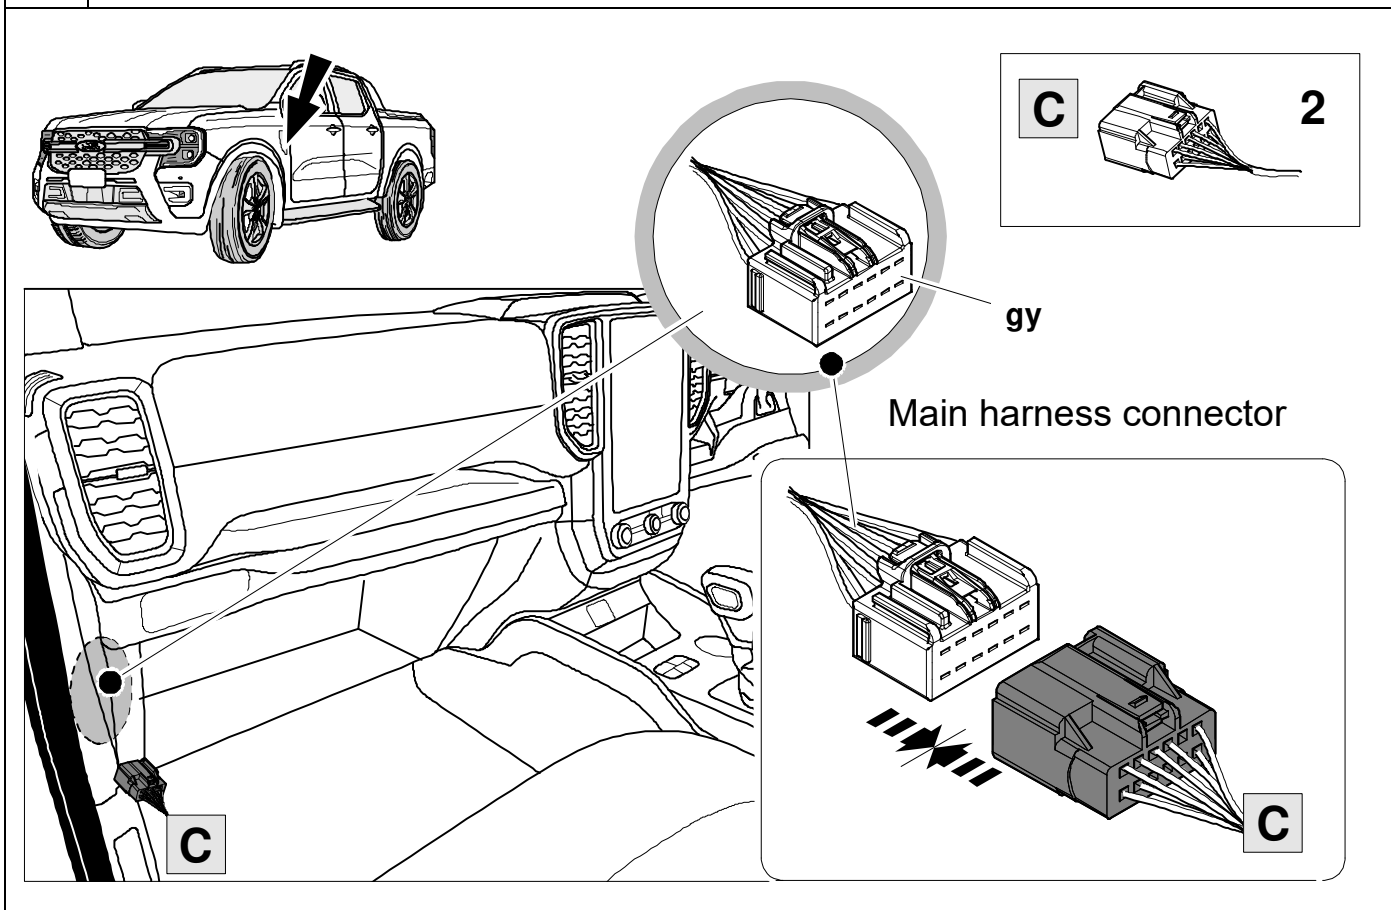

11

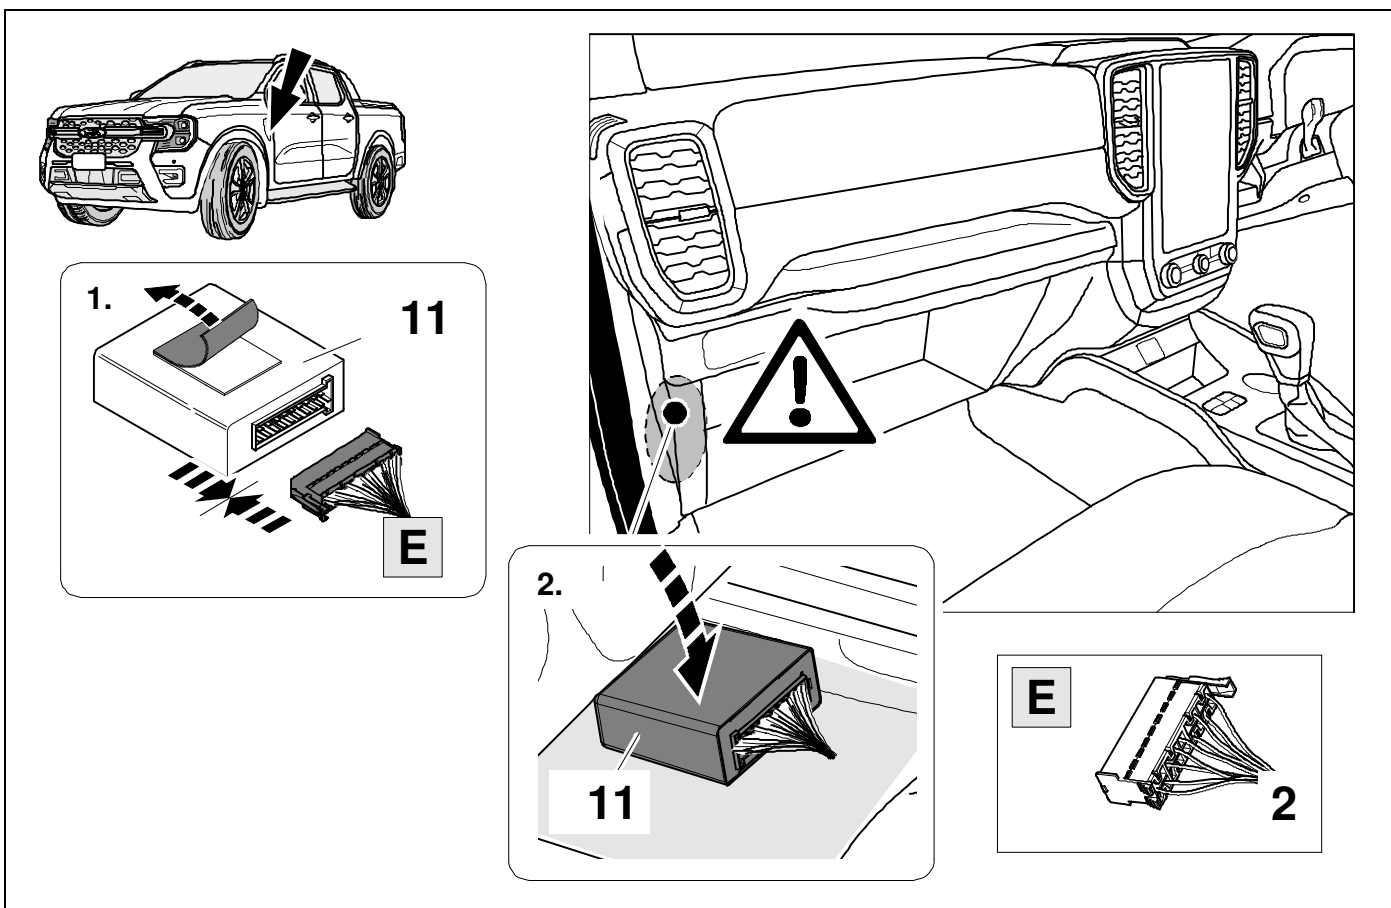




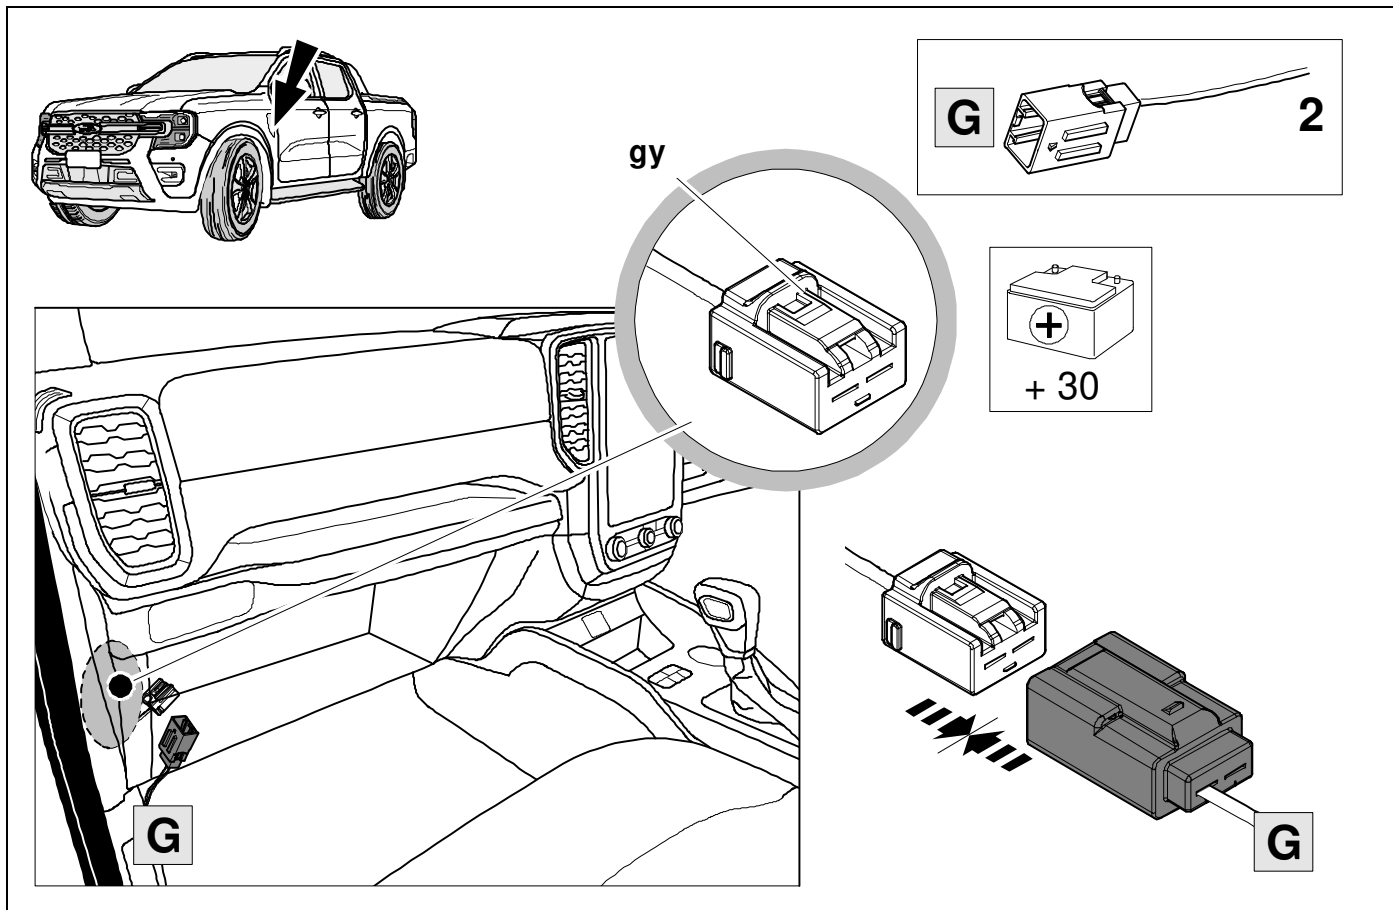





**BRAKE  
CONTROLLER  
PREPARED**

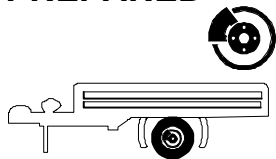


## Trailer Brake Preparation

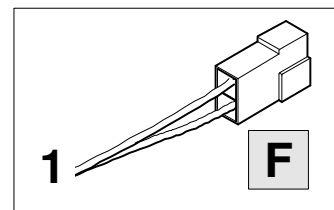


1.

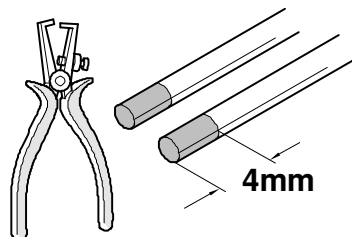


2.

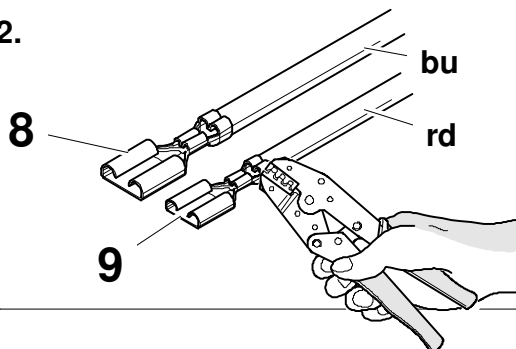

3.

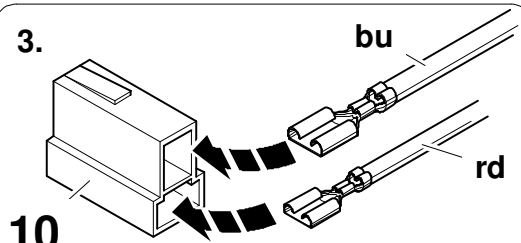





4.

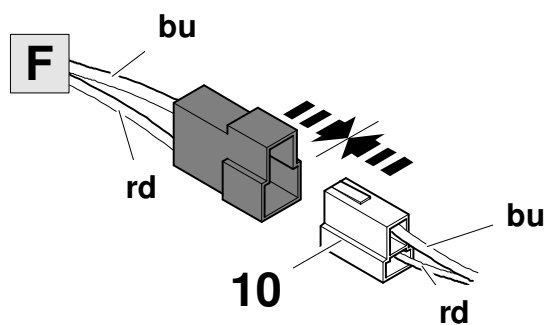

8


9

10

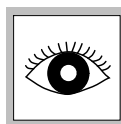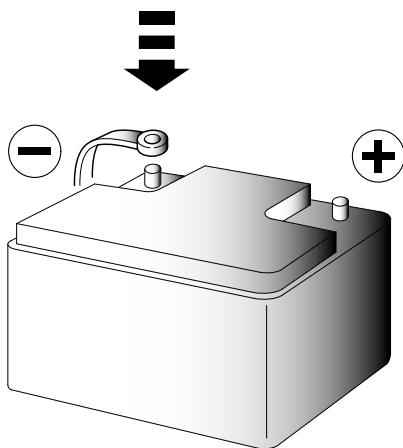


15

## CHECK ALL LIGHTING FUNCTIONS

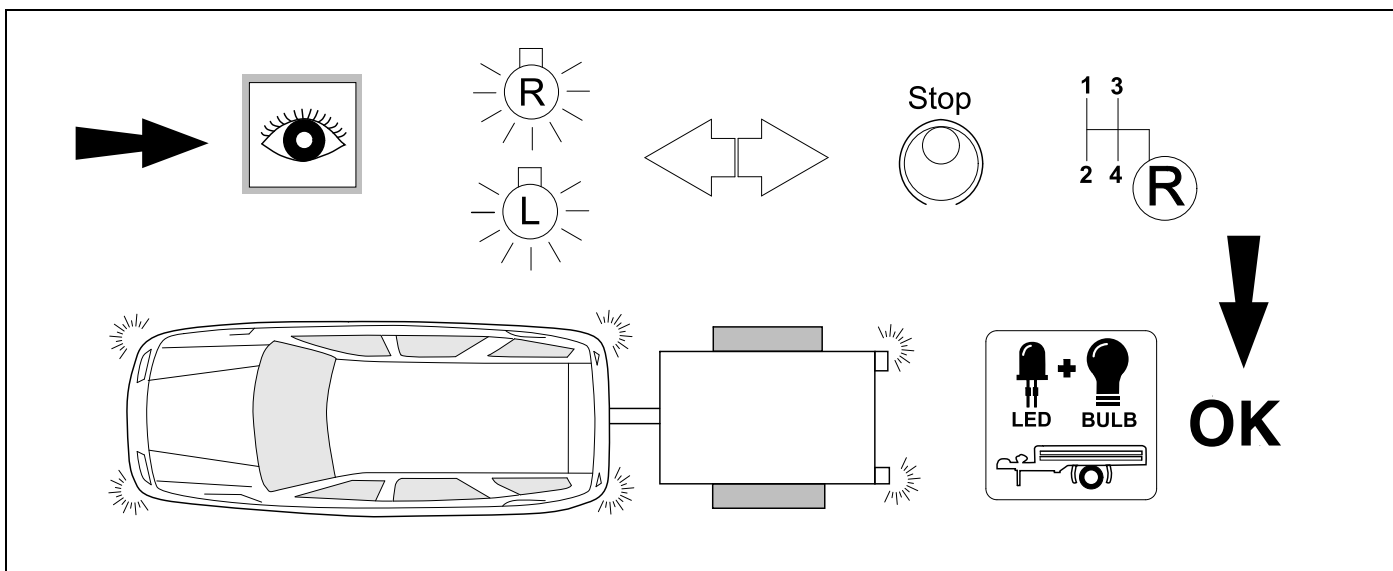


16

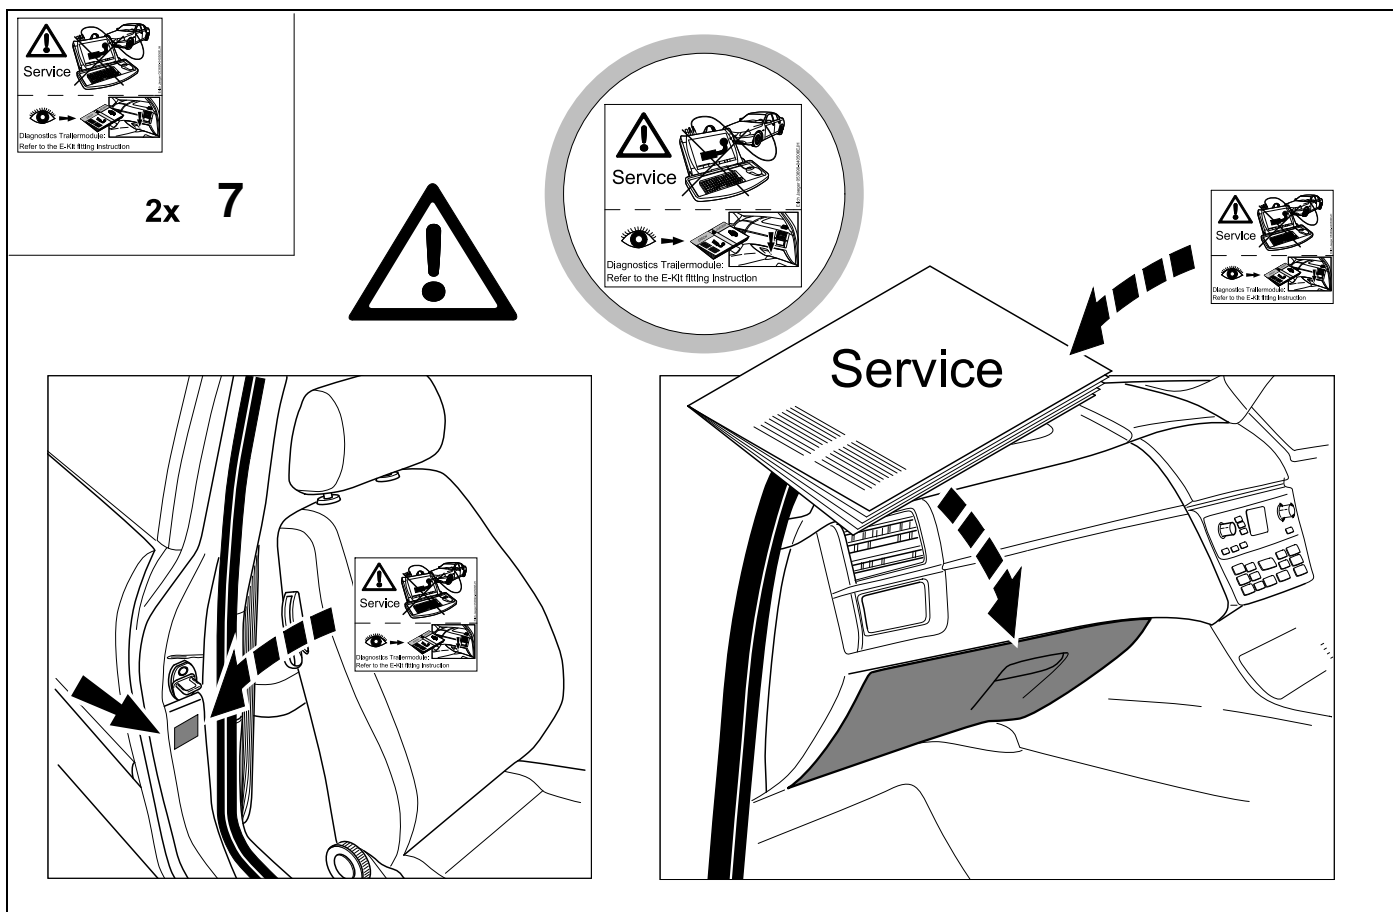

## Operation support



Ignition OFF

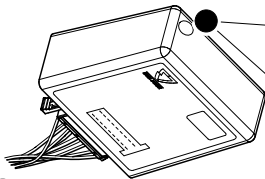





No CAN-Data =








Standby / Sleepmode



Ignition ON

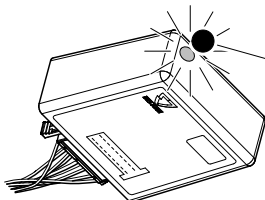


Ignition ON



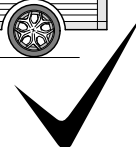



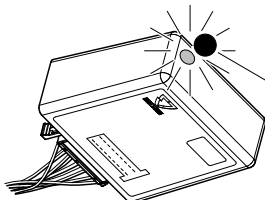


## Failure support



Check CAN-Data Wire

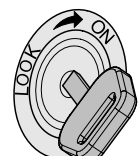

Ignition ON

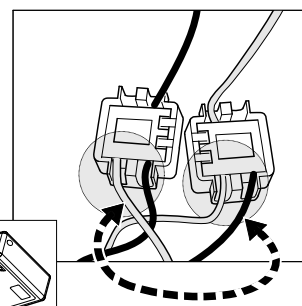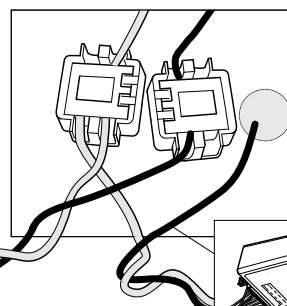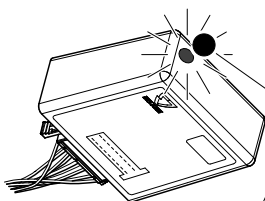



+



1x max 5 min.



Ignition ON

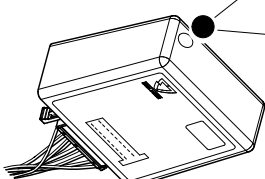





PIN 17

oder / or



PIN 1


31

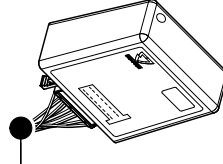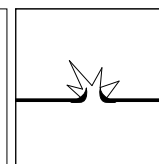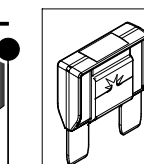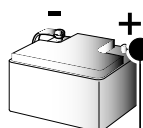







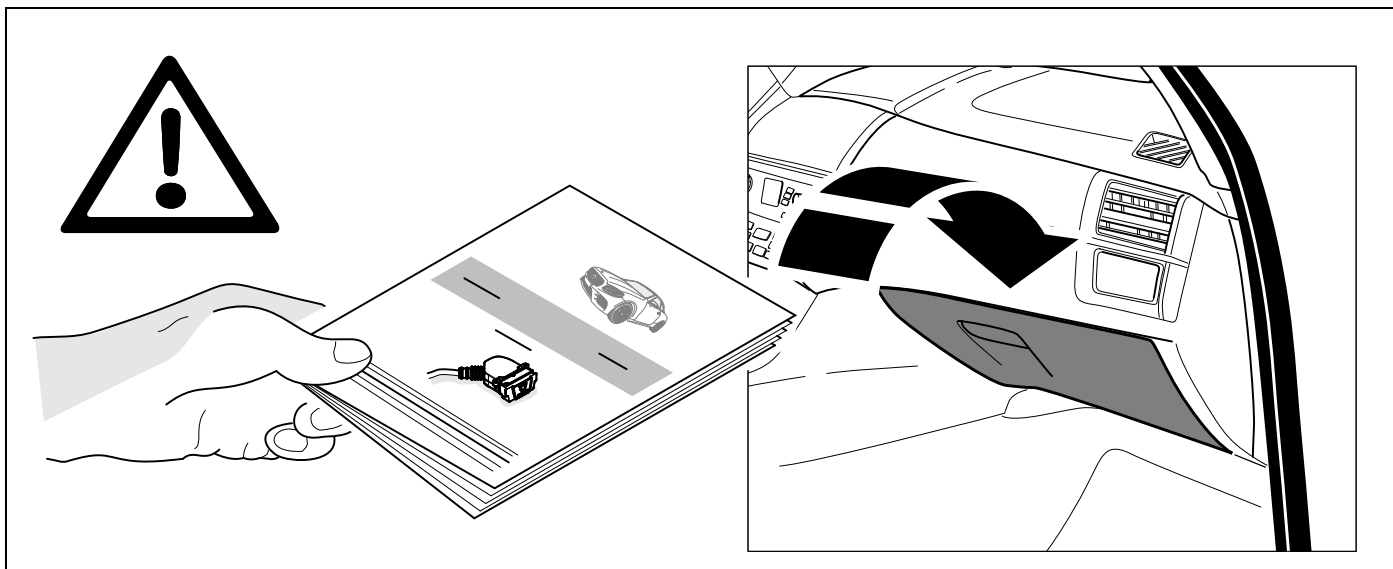

Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.