

Prescripciones de apriete para culatas


passend für / suitable for
adaptable à / adaptable a

Mitsubishi




Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

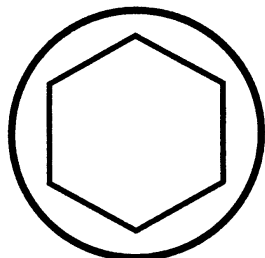

709.170
M 10 x 100

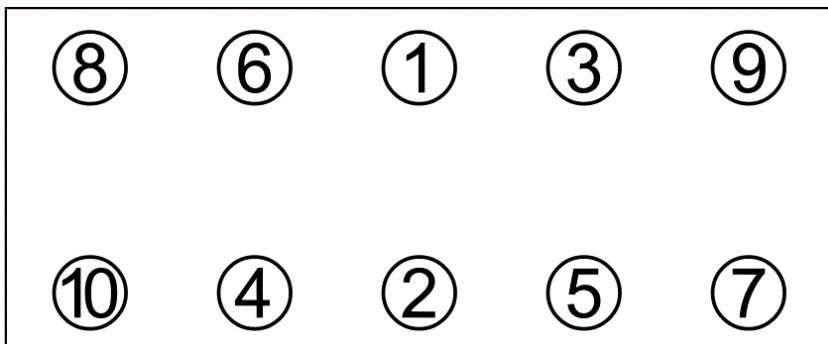

Anziehen/
Tightening/
Serrage/
Apriete

 70 - 76 Nm
 15 min
 78 - 83 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 78,5 mm

Mot. 4G32 /B/T, 1,6 Ltr.

```
Colt C13A, Lancer      1984>
Galant A160, Sapporo A161 1981>1984
```

Elring-Serviceteam
Fon +49 7123 724 799
Fax +49 7123 724 798
service@elring.de

24/11/12

559.980