

Anziehvorschrift Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas


590.490

passend für / suitable for
adaptable à / adaptable a



Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo

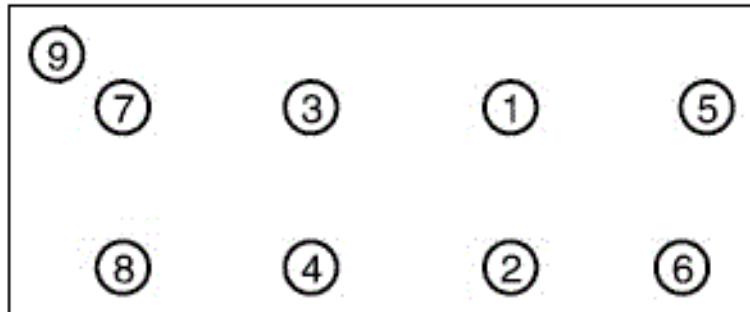

Anziehen/
Tightening/
Serrage/
Apriete

- M11 1-8 / 45 lb-ft
- M11 1-8 / 65 lb-ft
- M11 1-8 / 65 lb-ft
- M11 1-8 / 90°
- M8 9 / 10 lb-ft
- M8 9 / 15 lb-ft
- M8 9 / 25 lb-ft

- M11 1-8 / 60 Nm
- M11 1-8 / 90 Nm
- M11 1-8 / 90 Nm
- M11 1-8 / 90°
- M8 9 / 12 Nm
- M8 9 / 20 Nm
- M8 9 / 35 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Chrysler Town & Country 2010-2004 3.3L V6 201cid

Dodge Caravan 2007-2004 3.3L V6 201cid

Dodge Grand Caravan 2010-2004 3.3L V6 201cid

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/11/12

590.490